

- 2.7. A torsion spring keeps the latch secure until the lower pivot latch is intentionally pulled up, to open the hood. See Figure 2.7.

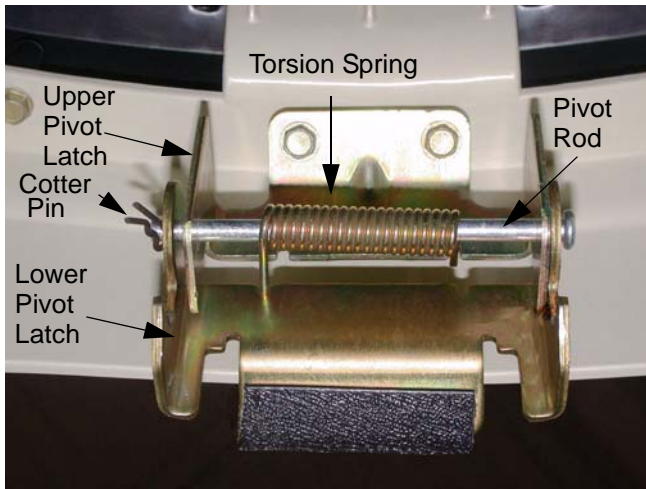


Figure 2.7

- 2.8. The hood latches to a sturdy rod that is mounted to the front of the frame. See Figure 2.8.

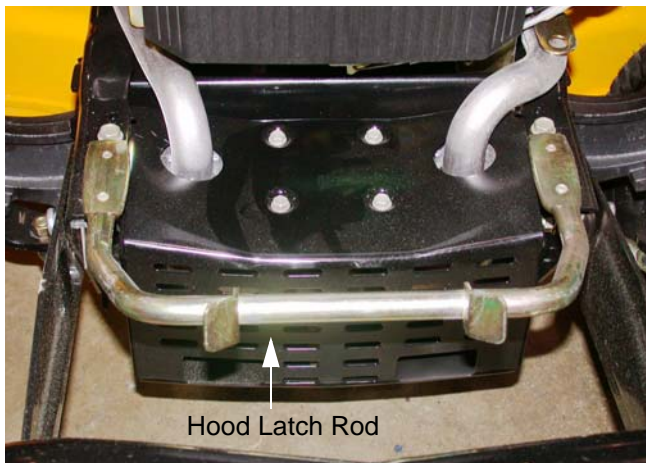


Figure 2.8

3. HOOD PANEL REMOVAL: 1500 SERIES

NOTE: Use this procedure if the hood alone is to be removed. Typical reasons might include replacement because of damage to the hood, or to ease access for other service.

- 3.1. Disconnect ground cable from battery using a 7/16" wrench.

- 3.2. Disconnect headlight harness (plugged secured to hood lift cylinder). See Figure 3.2.



Figure 3.2

- 3.3. Remove the air deflector baffle using a 3/8" wrench. See Figure 3.3.



Figure 3.3

- 3.4. Support the hood as it is being loosened.
3.5. Separate hood from hinge using a 3/8" wrench.
3.6. Lift hood off of tractor.