

Cub Cadet[®]

ILLUSTRATED PARTS MANUAL

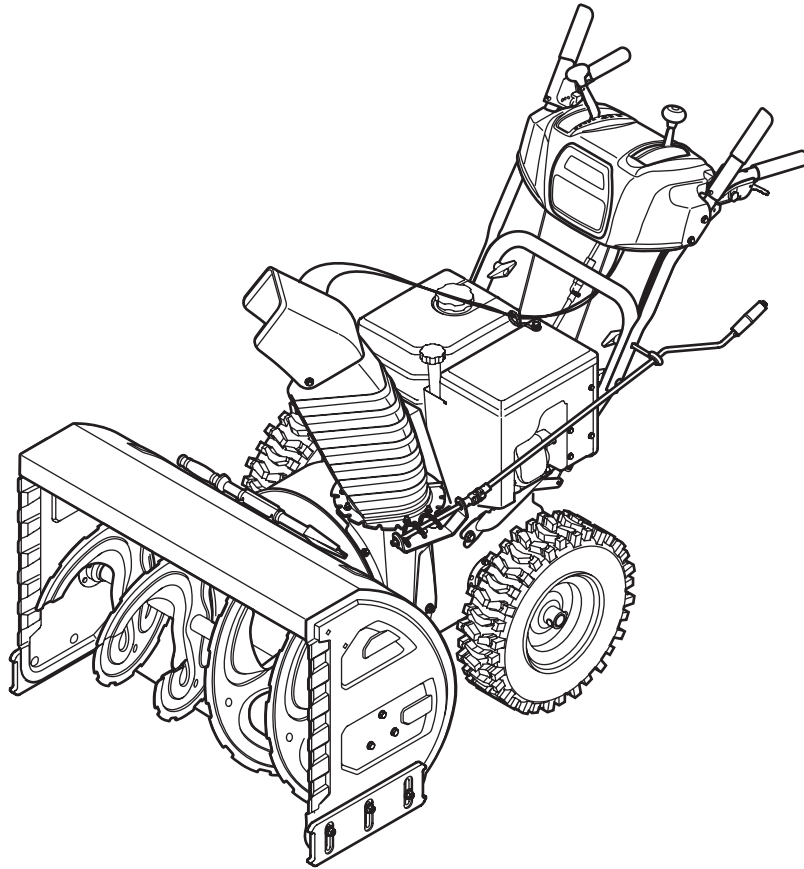

Two Stage Snow Thrower — 930 SWE & 933 SWE

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Snow Thrower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

<i>Augers, Auger Housing & Gearbox.....</i>	<i>4</i>	<i>Label Map</i>	<i>10</i>
<i>Engine Model 483-SU 357cc</i>	<i>11</i>	<i>Snow Thrower Drive System.....</i>	<i>8</i>
<i>Handles, Handle Panel & Discharge Chute.....</i>	<i>6</i>		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by standing at the operator's position and looking down at the rear of the deck.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--	--

SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--	--

Painted Parts


When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXXX-0637). Please refer to the table below for current color codes:

0637	Black
4021	Yellow (Cub Cadet)
0499	Beige (Cub Cadet)

0685	Blue (Cub Cadet)
0691	Black Jack (Cub Cadet Commercial)

This page left intentionally blank.

Augers, Auger Housing, and Gearbox

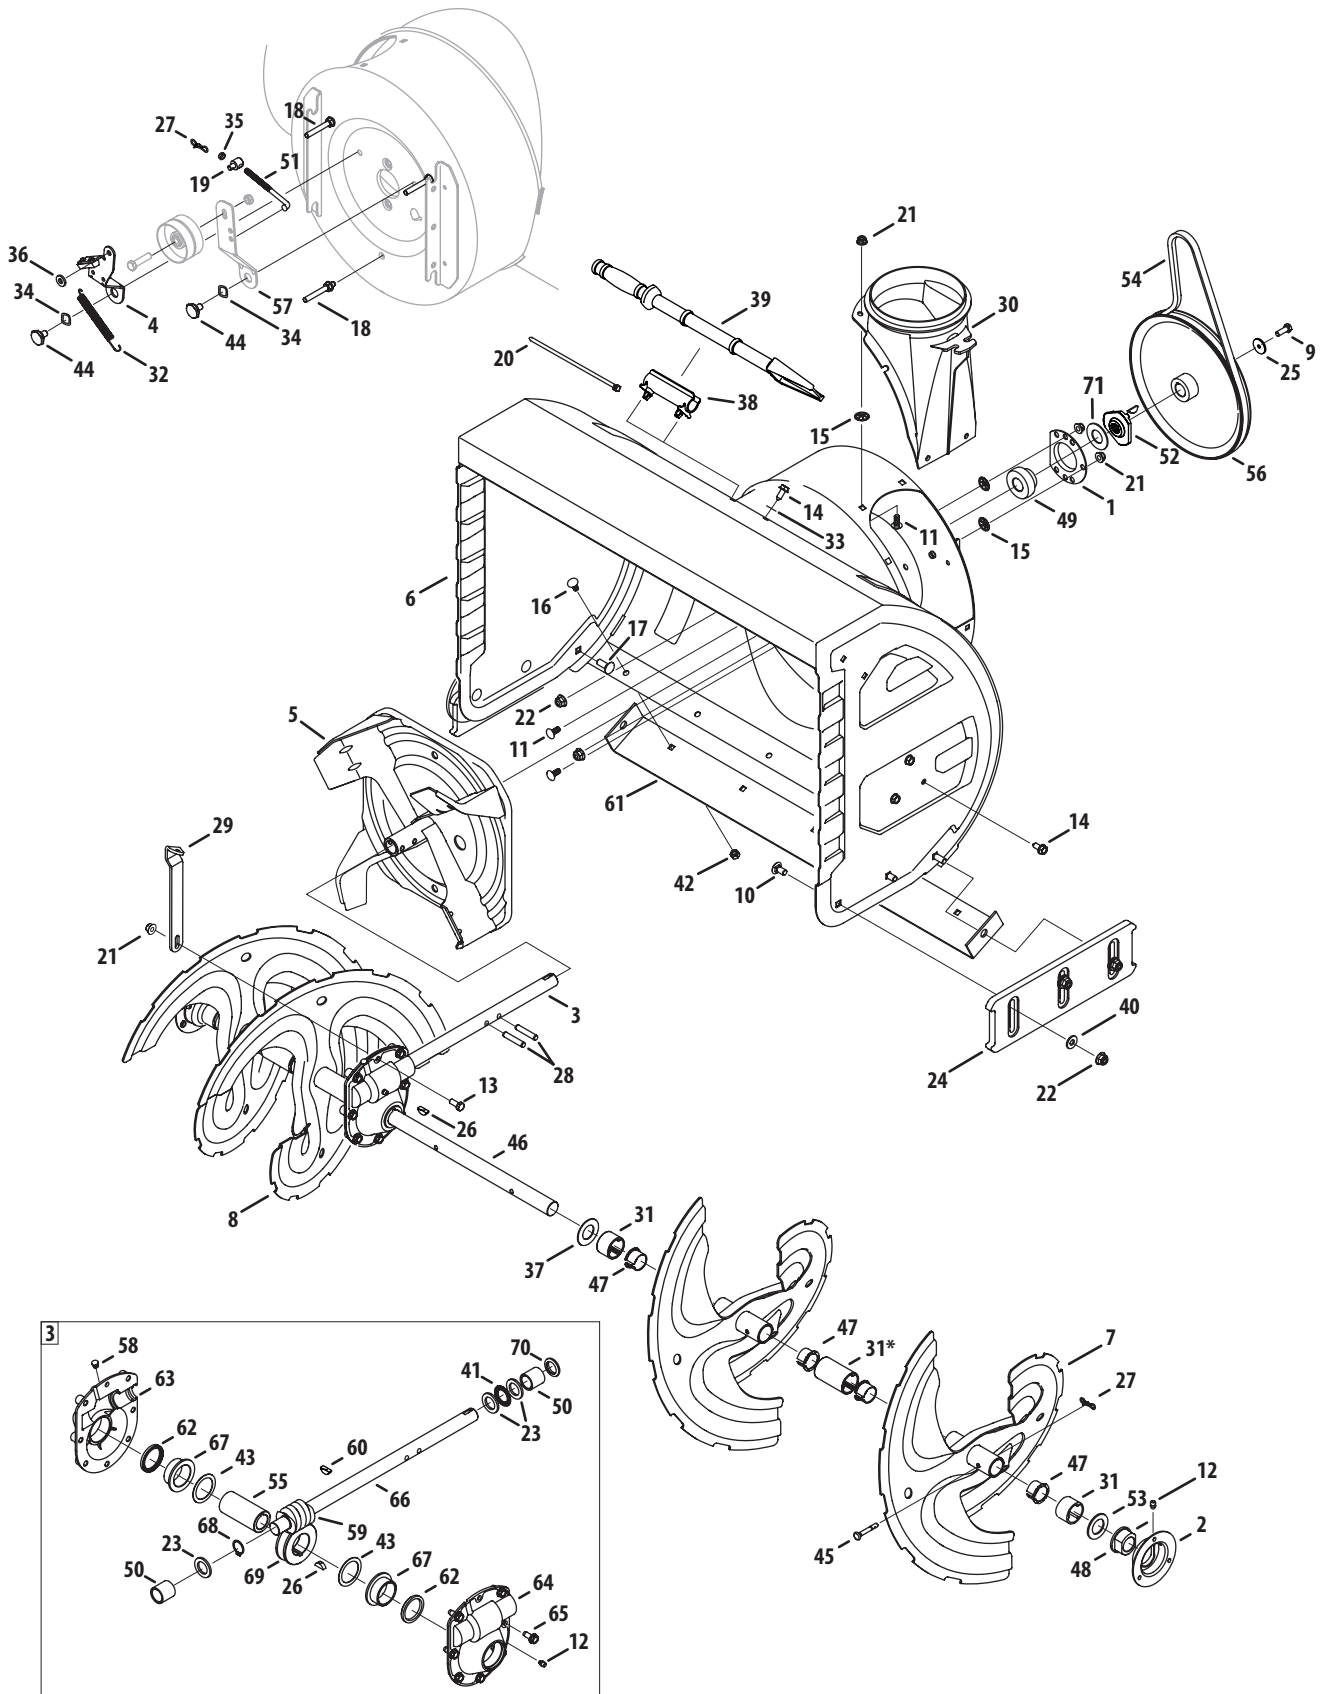


Augers, Auger Housing, and Gearbox

Ref.	Part No.	Description	Ref.	Part No.	Description
1	05244B	Housing, Bearing	37	736-3046A	Washer, 1.01 x 1.86 x .06
2	784-0315A	Housing, Bearing	38	731-2635	Clip, Mounting
3	918-04514	Gear Box Assembly	39	731-2643	Tool, Clean-out
4	918-0281A	Bracket Assembly, Auger Brake	40	736-0262	Wash, Flat, .385 x .870 x .092
5	684-0090B	Impeller, 16"	41	741-0184	Bearing, Thrust
6	684-04232	Housing, Auger - 30"	42	712-04103	Nut, Hex, 5/16-18 Stainless
	684-04233	Housing, Auger - 33"	43	936-0266	Wash, Flat, 1.52ID x 2.0 OD
7	684-04151	Spiral Assembly, LH	44	938-0281	Screw, Shoulder, .625 x .17
8	684-04152	Spiral Assembly, RH	45	738-04155	Pin, Shear, .25 x 1.75
9	710-1245B	Screw, Hex Cap Lock, 5/16-24	46	938-04157	Shaft, Spiral, — 30" ONLY
10	710-3168	Screw, Carriage, 3/8-16 x 1.00		938-04158	Shaft, Spiral, — 33" ONLY
11	710-0451	Screw, Carriage, 5/16-18 x .75	47	741-0494	Bushing, Flange,
12	937-3000	Fitting, Lube	48	741-0192	Bearing, Flange w/Flats
13	710-0376	Screw, Hex Cap, 5/16-18 x 1.0 Gr5	49	941-04024	Bearing, Self Aligning
14	710-04484	Screw, 5/16-18 x .750	50	941-0217	Sleeve
15	926-04012	Nut, Push	51	747-0980A	Rod, Auger Idler
16	710-04525	Screw, Carriage, 5/16-18 x .75	52	748-04067A	Adapter, Pulley w/Pins
17	710-3034	Screw, Carriage, 3/8-16 x 1.25	53	950-04020	Spacer, 1.004 x 1.375 x .25
18	710-04606A	Screw w/Stud, 5/16-18 x .4300	54	954-04194A	V-Belt, 1/2 x 42
19	911-0677	Ferrule	55	738-0275	Shaft, Gear, Worm
20	725-0157	Tie Strap	56	756-04244A	Pulley, Auger Drive, 10.0
21	712-04063	Nut, Hex Flange Lock, 5/16-18	57	784-0385C	Bracket, Auger Idler
22	712-04065	Nut, Hex Flange Lock, 3/8-16	58	721-0325	Plug
23	936-0291	Wash, Flat, .88 ID x .38 OD	59	917-0299	Gear, Worm
24	731-07032	Shoe, Skid, Deluxe	60	914-0126	Key, Hi Pro, 3/16 x 3/4
25	736-0505	Washer, Flat, .34 x 1.5 x .15 Ht.	61	790-00277	Plate, Shave, Stainless — 30" ONLY
26	914-0135	Key, Woodruff, 1/4 x 3/4		790-00196A	Plate, Shave, Stainless — 33" ONLY
27	714-04040	Pin, Bow-tie Cotter	62	921-0146	Oil Seal
28	915-0118	Pin, Spiral, 5/16 x 1.75	63	918-0246	Hsg, Ass'y, Auger RH (Incl. Ref. 62 & 67)
29	790-00264A	Bracket, Gear Box Support	64	918-0435	Hsg, Ass'y, Auger LH (Incl. Ref. 62 & 67)
30	731-1696B	Adapter, Chute, 6"	65	710-1260A	Screw, LD, 5/16-18 x .750
31	731-05163	Spacer, 1.0 x 1.5 x 1.0 Lg - 30" ONLY	66	711-04714	Shaft, Drive, Auger
	731-05162*	Spacer, 1.0 x 1.5 x 2.5 Lg - 33" ONLY	67	741-0670	Flange Bearing
32	732-0858	Spring, Extension	68	716-0111	External, Retaining, Ring
33	936-0159	Washer, Flat, .349 x .879 .063	69	917-1425	Gear, Worm, LH
34	736-0174	Washer, Wave, .625 x .885 x .015	70	921-0145	Seal, Oil
35	712-3007	Jam Nut, 5/16-18	71	736-0188	Washer, Flat, .76 x 1.49 x .06
36	936-3008	Washer, .344 x .75 x .12			

*Used only on 33" units, otherwise use Part No. 731-05163

Handles, Handle Panel & Discharge Chute

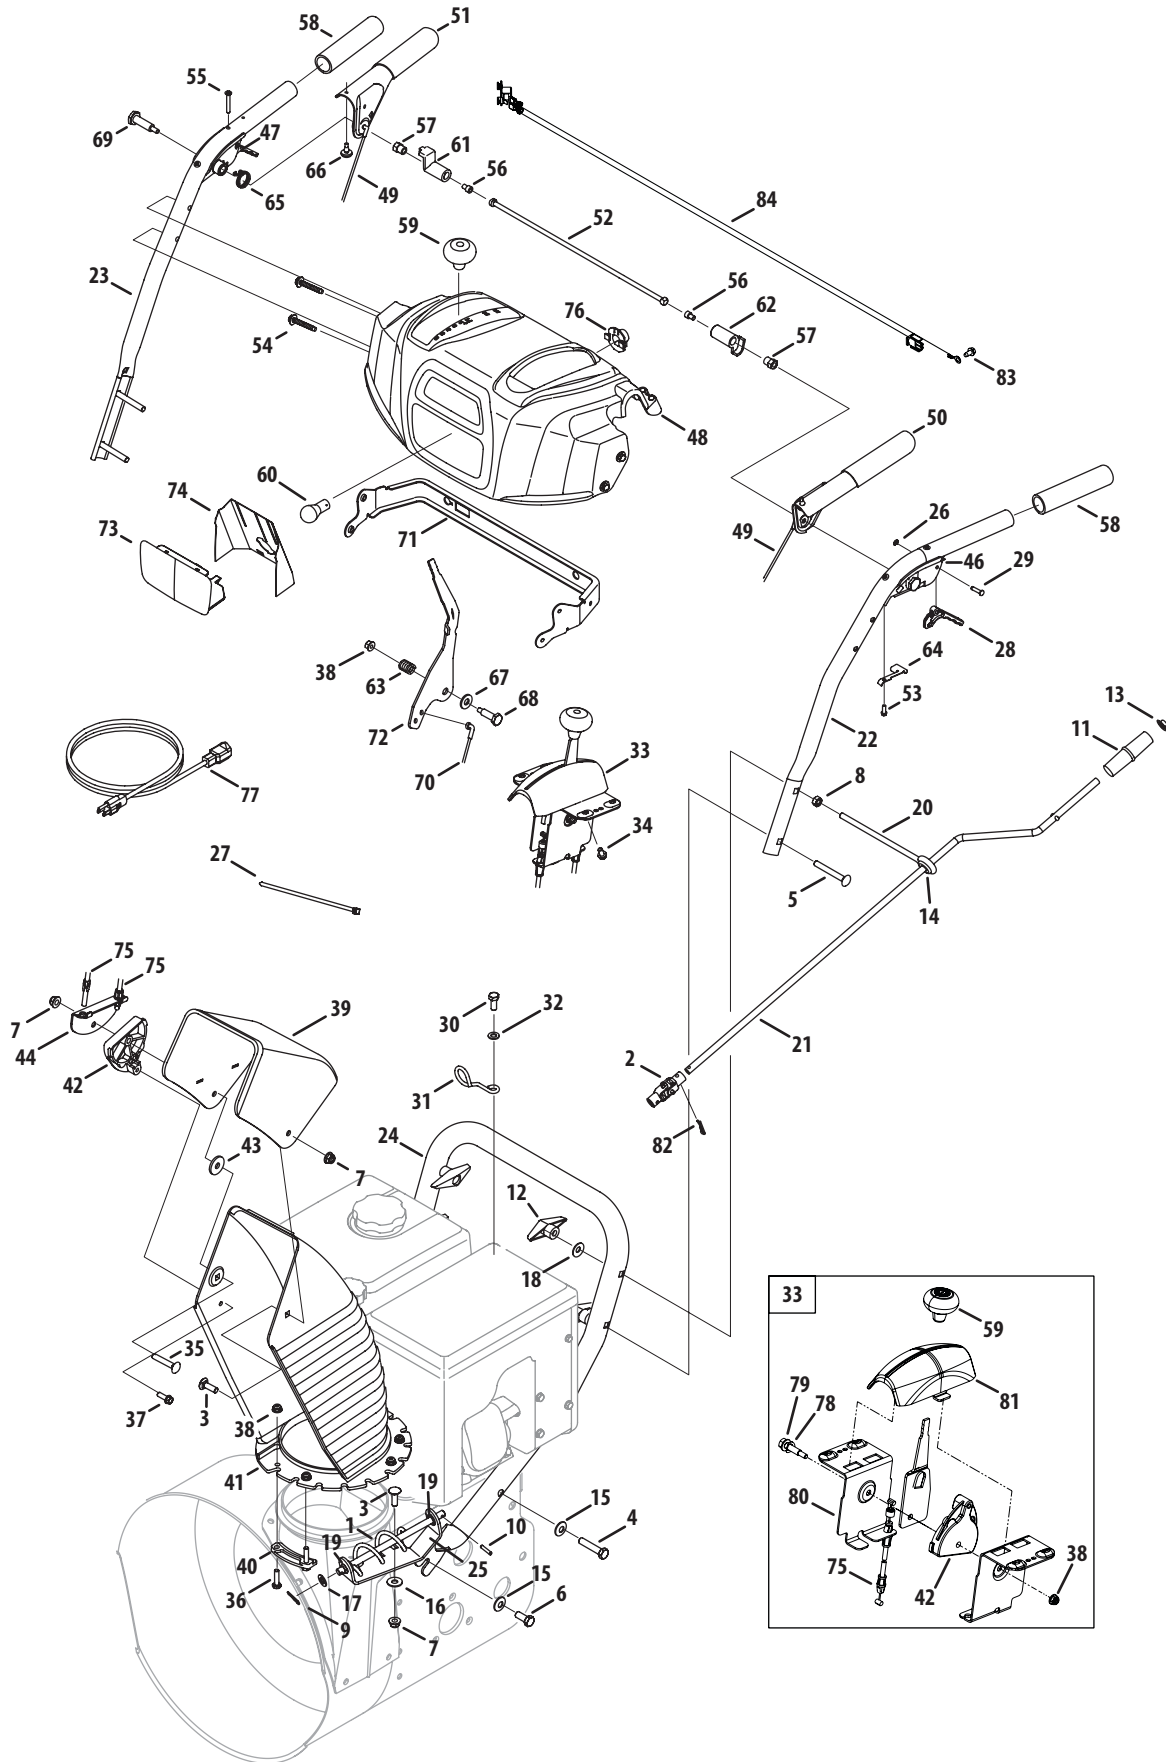


Handles, Handle Panel & Discharge Chute

Ref.	Part Number	Description
1	684-04308A	Chute Crank Assembly
2	684-04350	Joint Block Assembly
3	710-0276	Screw, Carriage, 5/16-18 x 1.0
4	710-04682	Screw, Hex, 3/8-16 x 2.00 Lock
5	710-0572	Screw, Carriage, 5/16-18 x 2.5
6	710-3118	Screw, Hex, 3/8-16 x 1.0 Lock, Gr5
7	712-04063	Flange Lock Nut, 5/16-18
8	912-3010	Hex Nut, 5/16-18
9	914-0104	Internal Cotter Pin
10	715-04095	Spring Pin
11	720-0201A	Knob, Crank
12	720-04072A	Knob, Wing Nut, 5/16-18
13	926-0100	Cap, Push, 3/8
14	735-0234	Grommet, Rubber
15	736-0105	Washer, Bel, .375 x .87 x .063
16	936-0159	Washer, Flat, .349 x .879 .063
17	936-0185	Washer, .375 x .738 x .063
18	736-0242	Washer, Belleville, .34 x .872 x .06
19	941-0475	Plastic Bushing, .380 I.D.
20	747-04747	Eye Bolt
21	747-04925A	Chute Rod
22	749-04675	Handle, Upper - LH
23	749-04674	Handle, Upper - RH
24	749-0991	Handle, Lower
25	790-00329	Chute Crank Bracket
26	716-04036	Ring, Retainer
27	725-0157	Cable Tie
28	731-04954	Trigger
29	738-04126	Pin, 3/16
30	710-04022	Hex Head Screw, MB 1.25
31	732-04677	Cable Guide
32	936-0264	Flat Washer, .330 x .630 x .0635
33	984-04230	2-Way Chute Control™ Assy
34	710-04187	Hi-Lo Screw, 1/4-15 x 0.5
35	710-0458	Bolt, Carriage, 5/16-18 x 1.75
36	710-0597	Screw, 1/4-20 x 1.00
37	710-0895	Hi-Lo Screw, 1/4-15 x .75
38	712-04064	Flange Lock Nut, 1/4-20
39	731-0846C	Upper Chute
40	731-0851A	Chute, Flange Keeper
41	731-0903E	Lower Chute
42	731-1313C	Chute Tilt Cable Guide

Ref.	Part Number	Description
43	936-0231	Flat Washer
44	784-5594	Cable Bracket
45	725-04314	Wiring Harness
46	631-04133A	Handle Clutch Lock - LH
47	631-04134B	Handle Clutch Lock - RH
48	931-04187A	Handle Panel
49	646-0012	Cable Assembly, Auger/Drive
50	684-04105B	Handle Engage Assy - LH
51	684-04106B	Handle Engage Assy - RH
52	684-04250	Rod Ass'y, Clutch Lock Pivot
53	710-04326	Screw, #8-16 x 0.50
54	710-04586	Screw, 1/4-20 x 1.625
55	710-1233	Screw, #10-24 x 0.375
56	710-3069	Screw, 1/4-20 x .375
57	712-04081A	Shoulder Nut, 1/4-20
58	720-0274	Hand Grip
59	720-04039	Shift Knob
60	725-1629	Lamp
61	731-04894D	Lock Plate
62	731-04896B	Clutch Lock Cam
63	732-0193	Compression Spring
64	732-04219C	Clutch Lock Spring
65	732-04238	Torsion Spring
66	935-0199A	Rubber Bumper
67	936-0267	Flat Washer, .385 x .87 x .06
68	738-04125	Shoulder Screw
69	738-04348	Shoulder Screw, 1/4-20 x 1.345
70	746-04341	Speed Selector Cable
71	790-00248B	Panel Bracket
72	790-00281B	Shift Lever
73	731-05324	Lens Panel
74	777X41804	Reflector Label
75	746-04338	Cable, Chute Tilt
76	925-1649	Light Socket
77	929-0071	Extension Cord, 110V
78	736-0413	Washer, Spring, .39 x .625 x .012
79	738-04185	Screw, Shoulder, .31 x .995:1/4-20
80	790-00200	Bracket, Mounting
81	731-05307	Cover, Tilt Cover
82	914-0101	Internal Cotter Pin
83	710-0599	1/4-20 x .50
84	925-04137	Wire Harness

*Not Pictured.

Snow Thrower Drive System

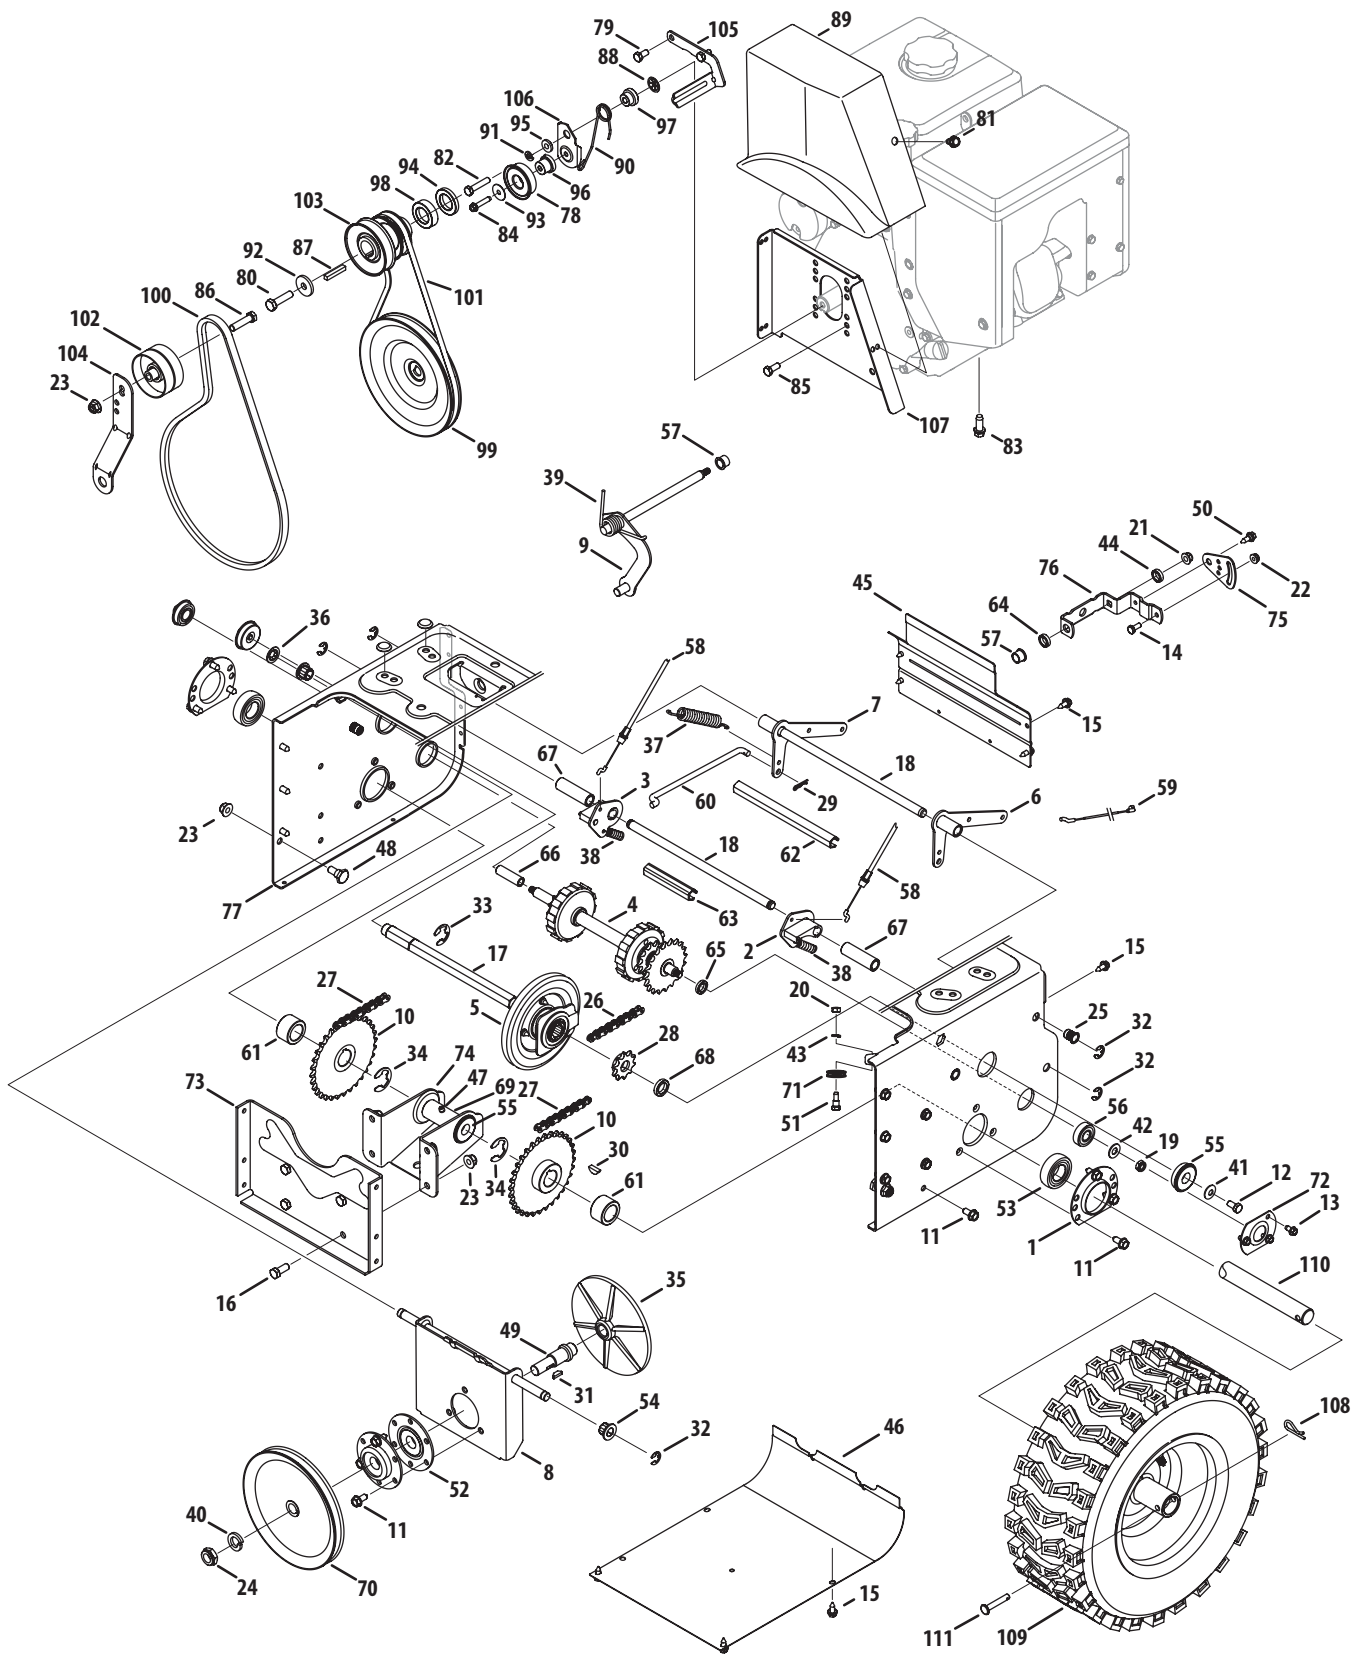

Snow Thrower Drive System

Ref.	Part Number	Description
1	05244B	Housing, Bearing
2	618-0279P	Dogg, Steering Drive, LH
3	618-0280P	Dogg, Steering Drive, RH
4	918-0282E	Shaft Assembly, Steering
5	918-04178	Assembly, Friction Wheel
	718-04034	Wheel, Friction, Bonded
	710-0896	Screw, Hex Wash
6	684-0118B	Bracket, Auger Actuator
7	684-0119B	Bracket, Drive Actuator
8	684-04212	Brkt, Friction Drive Suprt.
9	684-04229	Rod Assembly, Shift
10	684-04235	Sprocket, 32T
11	710-04484	TT Screw, 5/16-18 x .750
12	710-0538	Screw, Hex Cap Lock,
13	710-0599	1/4-20 x .50
14	710-0751	Hex Head Screw, 1/4-20
15	710-1652	Screw, Hex Wash.
16	710-3001	Screw, Hex Cap, 3/8-16
17	911-04279	Shaft, Hex Drive
18	711-04605	Shaft, Actuator
19	912-0116	Nut, Hex Insert Jam Lock
20	912-0138	Nut, Hex, 1/4-28 GR5
21	712-04063	Flange Lock Nut, 5/16-18
22	712-04064	Flange Lock Nut, 1/4-20
23	712-04065	Flange Lock Nut, 3/8-16
24	912-0413	Hex Nut, 5/8-18
25	712-0717	Nut, Insert 3/8-16
26	713-0284	Chain, Endless, #41 x 36L
27	713-0286	Chain, #420 x 40L
28	913-04015	Sprocket, #41 x 10T
29	914-0104	Pin, Internal Cotter
30	914-0135	Key, Woodruff
31	914-0388	Key, Hi-Pro, 3/16 x 5/8
32	916-0104	E-Ring
33	716-0136	Ring, Retaining
34	716-04048	Ring, Retainer
35	917-0302	Plate, Drive
36	726-0221	Speed Nut, .500
37	932-0121	Spring, Extension
38	932-0209	Spring, Extension
39	732-04385	Torsion Spring, .750 I.D. x .968 Lg.
40	936-0158	Washer, Lock, 5/8
41	736-0242	Wsh, Bell, .34 x .872 x .06
42	936-0300	Wash, .406 x .875 x .059
43	936-0329	Washer, Lock, 1/4
44	936-3015	Flat Washer, .469 x .875 x .105
45	790-00257	Cover, Upper Frame
46	790-00259	Cover, Lower Frame
47	937-3000	Fitting, Lube, 3/16 Drive
48	738-0143	Screw, Shldr., .498 x .34
49	738-0279	Spindle, Drive Plate
50	738-04184A	Shoulder Screw, .368 x .113
51	738-0924A	Screw, Hex Shldr., 1/4-28
52	741-0163A	Ass'y, Bearing/Housing
53	941-04025	Bearing, Self Aligning
54	741-04108	Bearing, Hex Flange
55	941-0563	Bearing, Ball
56	741-0747	Bush, Flg, .5625 x 1.375 x .4375
57	741-0748	Bush, Flg, .5 ID x .627 OD

Ref.	Part Number	Description
58	746-04337	Steering Cable, 35.97" Long
59	946-0951A	Cable, Auger Idler
60	747-0973	Rod, Drive Clutch
61	750-04703	Spacer, 1.0 ID x 1.50 OD
62	750-04717	Spacer, .51 ID x 7.895 Lg.
63	750-04718	Spacer, .51 ID x 3.66 Lg.
64	750-04719	Spacer, .5151 ID x .750 OD x .220
65	750-05342	Spacer, .566 ID x .87 OD x .190
66	750-05343	Spacer, .566 ID x .87 OD x 1.25
67	750-0903B	Spacer, .514 x .632 x 2.44
68	950-0997	Spacer, .675 x 1.0 x .23
69	750-1302B	Spacer, .6725 x 1.125 x 2.48
70	756-0344	Pulley, Auger
71	756-0625	Roller, Cable
72	784-0404	Bearing Retaining Bracket
73	784-0406A	Bracket, Frame Support
74	784-0407	Bracket, Axle Support
75	790-00217A	Speed Selector Pivot Bracket
76	790-00218A	Speed Selector Shift Bracket
77	790-00349	Transmission Frame
78	684-04169	Idler Pulley Assembly
79	710-0627	Screw, Hex Cap, 5/16-24
80	710-0191	Hex Hd. Screw, 3/8-24 x 1.25 GR8
81	710-0607	Screw, Hx Wash Hd Tapp
82	710-0624	Screw, Hex Cap, 5/16-24 x 1.50
83	710-0654A	Screw, 3/8-16 x 1.00
84	710-0809	Screw, 1/4-20 x 1.25
85	738-04439	Screw, Shldr., .500 x .145
86	710-0347	Hex Head Screw, 3/8-16 x 1.75
87	914-0105	Square Key, 3/16 x 1.00
88	926-04012	Nut, Push
89	931-2531	Cover, Belt
90	732-04308A	Torsion Spring, .850 dia. x .333 lg.
91	936-0119	Washer, Lock, 5/16
92	736-0247	Washer, Flat, .406 x 1.25
93	736-3092	Washer, Flat, .265 x 1.0 x .030
94	750-05316	Spacer, 1.155 ID x 1.50 OD x .15
95	748-04112B	Shoulder Spcr., .3175 x .500 x .094
96	750-04571	Shoulder Spacer, .260 x .785 x .538
97	750-04821	Shoulder Spacer, .340 x 1.00
98	750-05318	Spacer, 1.004 ID x 1.625 OD x .35
99	756-0344	Pulley, Drive
100	954-04194A	V-Belt, 4L x 44.60 Lg.
101	954-04202	V Belt, 3/8 x 36.68
102	756-04224	Pulley, Flat Idler, 2.75 OD
103	756-04351	Double Pulley, 3.25 x 2.75
104	784-0385D	Bracket, Auger Idler
105	790-00167A	Belt Keeper Bracket
106	790-00208C	Idler Drive Wheel Bracket
107	790-00254A	Belt Cover Bracket
108	914-0149B	Pin, Internal Cotter
109	634-0225A	Wheel Ass'y. - LH
	634-0226A	Wheel Ass'y. - RH
	734-2031	Tire
	934-0255	Valve
	741-0246A	Bearing
110.	711-04607	Axle, Wheel, 33"
111.	711-04615	Pin, Clevis

Labels

777D15121




777D15045



777X43688



777I22340

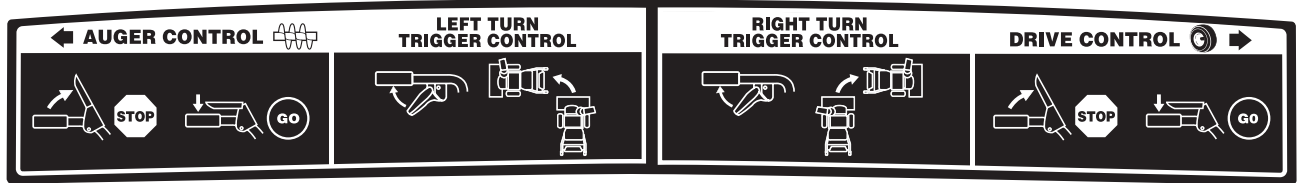


777D15042



777S32636




777D15130

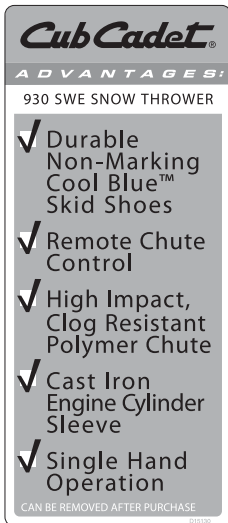


777S32280



777D15109

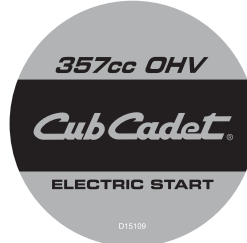

777I22341

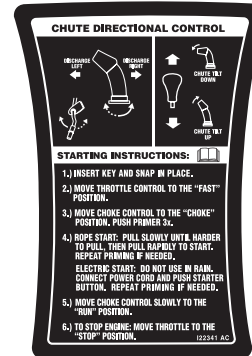


777I22363



777D15113



357cc 483-SU Engine

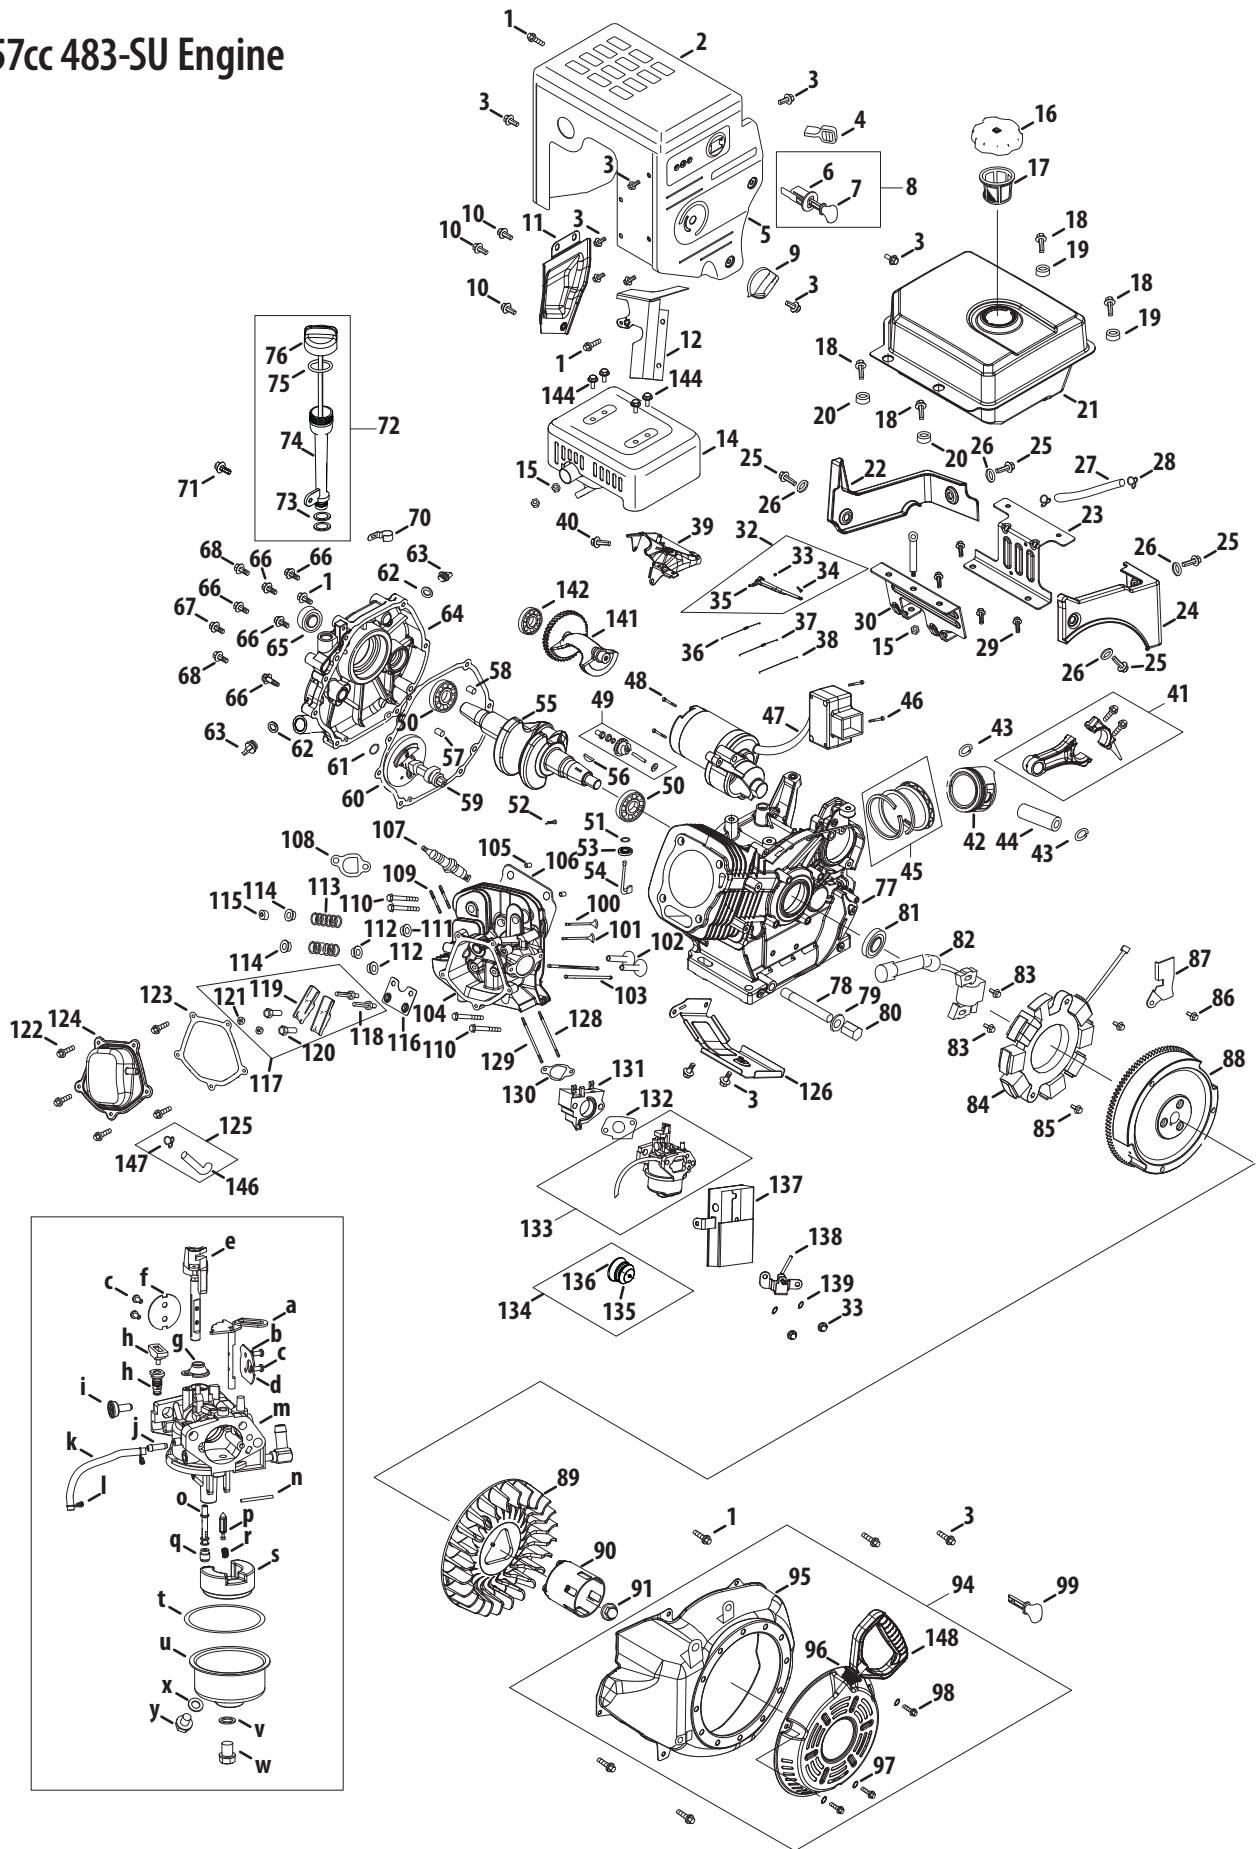

357cc 483-SU Engine

Ref.	Part Number	Description	Ref.	Part Number	Description
1	710-11012	Bolt, M6 x 16	45	951-11955	Piston Ring Set
2	951-11339	Muffler Shield	46	710-04965	Bolt, M4 x 55
3	710-04915	Bolt, M6 x 12	47	951-11196	Startup Electromotor
4	951-10757	Throttle Control Knob	48	710-04967	Bolt, M8 x 55
5	951-11595	Control Panel	49	951-11956	Governor Gear/Shaft Ass'y
7	731-05632	Key	50	951-11957	Radial Ball Bearing
8	951-10637	Key Switch Ass'y	51	736-04453	Washer
9	951-11302	Choke Knob	52	714-04077	Cotter Pin
10	710-04914	Bolt, Flange, M6 x 10	53	951-11958	Governor Seal
11	951-11181	Muffler Baffle	54	951-11365	Governor Arm Shaft
12	951-11321	Carb Isolator Bracket	56	951-10307	Woodruff Key
14	951-11338	Muffler Ass'y	57	715-04102	Dowel Pin, 9 x 12
15	712-04219	Nut, M8 - 1.25	58	715-04092	Dowel Pin, 7 x 14
16	951-10649	Fuel Cap Ass'y	59	951-11959	Camshaft Ass'y
17	951-11933	Fuel Level Indicator	60	951-11376	Crankcase Cover Gasket
18	710-04970	Flange Bolt, M8 x 20	61	736-04476	Washer
19	750-05312	Bushing, Gas Tank	62	951-11960	O-Ring
20	750-05313	Bushing, Gas Tank	65	951-11375	Oil Seal
21	951-11201	Fuel Tank Ass'y	66	710-04971	Bolt, M8 x 38
22	951-11319	Fuel Tank Shroud	67	710-04972	Bolt, M8 x 45
23	951-11318	Rear Mounting Bracket Ass'y	68	710-05052	Bolt, M8 x 35
24	951-11351	Engine Shroud	70	951-11320	Dipstick Clamp
25	951-11012	Bolt, M6 x 16	71	710-04966	Bolt, M6 x 8
26	736-04452	Bush - Washer	73	951-11903	Oil Fill Tube O-Ring
28	951-11731	Fuel Line Clamp	75	951-11904	Dipstick O-Ring
29	710-04921	Bolt, M8 x 14	78	951-11350	Oil Drain Pipe Ass'y
30	951-11182	Fuel Tank Mounting Bracket	79	736-04440	Oil Drain Washer
33	712-04212	Nut, M6	80	710-04906	Oil Drain Plug
34	710-04908	Governor Arm Bolt	81	951-11499	Oil Seal
35	951-11307	Governor Arm	82	951-11305	Ignition Coil Ass'y
36	951-11306	Governor Spring	83	710-04920	Ignition Coil Bolt
37	951-11203	Throttle Linkage Spring	84	951-11961	Coil Assy. Charge
38	951-11309	Throttle Linkage	85	710-04969	Bolt, M6 x 30
39	951-11311	Primer Bracket	86	710-04966	Bolt, M6 x 8
40	710-04916	Bolt, Flange, M6 x 14	87	951-11186	Alternator Wire Clamp Bracket
41	951-11951	Connecting Rod Ass'y	88	951-11312	Flywheel
42	951-11952	Piston	89	951-11313	Fan, Cooling
43	951-11953	Piston Pin Snap Ring	90	951-11314	Starter Cup
44	951-11954	Piston Pin	91	712-04220	Nut, Special, M16 x 1.5

357cc 483-SU Engine

Ref.	Part Number	Description
95	951-11211	Blower Housing
96	951-11310	Recoil Starter
97	736-04455	Gasket
98	710-04974	Bolt, M6 x 10
99	731-05632	Key
102	951-11962	Tappet
103	951-11335	Push Rod (2X)
105	715-04097	Dowel Pin, 12 x 20
106	951-11963	Gasket, Cylinder Head
107	951-10292	Spark Plug/F6rtc
108	951-11212	Exhaust Pipe Gasket
109	710-04964	Stud, M8 x 48.5
110	710-05053	Bolt, M10 x 1.25 x 87
111	751-11964	Intake Valve Seal
116	951-11965	Push Rod Guide
117	951-11981	Rocker Arm Ass'y
118	710-04962	Bolt, Pivot
119	951-11966	Rocker Arm
120	751-11123	Adjusting Nut, Valve
121	751-11124	Nut, Pivot Locking
122	710-05054	Valve Cover Bolt
123	951-11967	Valve Cover Gasket
124	951-11220	Valve Cover
126	951-11317	Cylinder Baffle
128	710-05055	Stud, M6 x 8 x 98
129	710-05056	Stud, M6 x 8 x 118
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
132	951-11223	Carburetor Gasket
133	951-11303A	Carburetor Ass'y
134	951-10639A	Primer Ass'y
135	951-11824	Primer Bulb
137	951-11304	Heater Box
138	951-11192	Choke Control
139	736-04477	Lock Washer
141	951-11968	Camshaft Gear Ass'y
142	951-11969	Bearing
144	710-05051	Bolt
146	951-11221	Breather Hose

Ref.	Part Number	Description
147	726-04101	Clamp
148	731-05696	Starter Handle
k	751-11991	Primer Hose
t	951-11970	Bowl Gasket
v	951-11348	Main Bowl Bolt Gasket
w	710-04945	Fuel Bowl Mounting Bolt
x	951-11349	Fuel Drain Plug Gasket
y	710-04903	Fuel Drain Plug
—	951-10651	Fuel Tank Nipple (Not Shown)
—	952Z483-SU-10	Replacement Engine
—	951-11207	Muffler Stud Ass'y
109	710-04964	Muffler Stud
—	951-11329A	Cylinder Head Ass'y
100	—	Exhaust Valve
101	—	Intake Valve
104	—	Cylinder Head
106	951-11963	Gasket, Cylinder Head
108	951-11212	Exhaust Pipe Gasket
109	710-04964	Stud, M8 x 48.5
110	710-05053	Bolt, M10 x 1.25 x 87
111	751-11964	Intake Valve Seal
112	—	Intake Valve Seal
113	—	Valve Spring
114	—	Valve Spring Retainers - Exhaust
115	—	Exhaust Valve Adjuster
116	951-11965	Push Rod Guide
118	710-04962	Bolt, Pivot
119	951-11966	Rocker Arm
120	751-11123	Adjusting Nut, Valve
121	751-11124	Nut, Pivot Locking
123	951-11967	Valve Cover Gasket
128	710-05055	Stud, M6 x 8 x 98
129	710-05056	Stud, M6 x 8 x 118
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
—	951-10641	Oil Drain Ass'y
78	951-11350	Oil Drain Pipe Ass'y
79	736-04440	Oil Drain Washer
80	710-04906	Oil Drain Plug

Ref.	Part Number	Description
—	951-11328A	Short Block Ass'y
41	951-11951	Connecting Rod Ass'y
42	951-11952	Piston
43	951-11953	Piston Pin Snap Ring
44	951-11954	Piston Pin
45	951-11955	Piston Ring Set
49	951-11956	Governor Gear/Shaft Ass'y
50	951-11957	Radial Ball Bearing
51	736-04453	Washer
52	714-04077	Cotter Pin
53	951-11958	Governor Seal
54	951-11365	Governor Arm Shaft
55	—	Crankshaft Ass'y
56	951-10307	Woodruff Key
57	715-04102	Dowel Pin, 9 x 12
58	715-04092	Dowel Pin, 7 x 14
59	951-11959	Camshaft Ass'y
60	951-11376	Crankcase Cover Gasket
61	736-04476	Washer
63	—	Oil Drain Plug Ass'y
64	—	Crankcase Cover
65	951-11375	Oil Seal
66	710-04971	Bolt, M8 x 38
67	710-04972	Bolt, M8 x 45
68	710-05052	Bolt, M8 x 35
77	—	Crankcase Complete
78	951-11350	Oil Drain Pipe Ass'y
79	736-04440	Oil Drain Washer
81	951-11499	Oil Seal
102	951-11962	Tappet
105	715-04097	Dowel Pin, 12 x 20
106	951-11963	Gasket, Cylinder Head
108	951-11212	Exhaust Pipe Gasket
110	710-05053	Bolt, M10 x 1.25 x 87
123	951-11967	Valve Cover Gasket
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
141	951-11968	Camshaft Gear Ass'y
142	951-11969	Bearing

Ref.	Part Number	Description
—	951-11330A	Gasket Kit - Complete
53	951-11958	Governor Seal
60	951-11376	Crankcase Cover Gasket
65	951-11375	Oil Seal
79	736-04440	Oil Drain Washer
81	951-11499	Oil Seal
106	951-11963	Gasket, Cylinder Head
108	951-11212	Exhaust Pipe Gasket
123	951-11967	Valve Cover Gasket
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
132	951-11223	Carburetor Gasket
—	951-11333	Valve Cover Kit
123	951-11967	Valve Cover Gasket
124	951-11220	Valve Cover
—	951-11331	Gasket Kit - External
79	736-04440	Oil Drain Washer
108	951-11212	Exhaust Pipe Gasket
123	951-11967	Valve Cover Gasket
130	951-11315	Carburetor Insulator Gasket
131	951-11316	Carburetor Insulator Plate
132	951-11223	Carburetor Gasket
—	951-11337	Valve Kit
100	—	Exhaust Valve
101	—	Intake Valve
—	951-11345	Oil Filler Plug Ass'y
62	951-11960	O-Ring
63	—	Oil Drain Plug Ass'y
—	751-11971	Dipstick Ass'y
75	951-11904	Dipstick O-Ring
76	—	Dipstick / Cap
—	951-11336	Fuel Line Kit
27	—	Fuel Line
28	951-11731	Fuel Line Clamp
—	951-11334	Cylinder Head Kit
106	951-11963	Gasket, Cylinder Head
110	710-05053	Bolt, M10 x 1.25 x 87
111	751-11964	Intake Valve Seal
123	951-11967	Valve Cover Gasket

357cc 483-SU Engine

Ref.	Part Number	Description
—	951-11342	Crankshaft Kit
50	951-11957	Radial Ball Bearing
55	—	Crankshaft Ass'y
56	951-10307	Woodruff Key
65	951-11375	Oil Seal
81	951-11499	Oil Seal
—	951-11332	Carburetor Kit - Major
g	—	Throttle Pressure Lock Plate
n	—	Float Pin
o	—	Main Nozzle
p	—	Needle Valve
q	—	Main Jet
r	—	Needle Valve Spring
s	—	Float
t	951-11970	Bowl Gasket
v	951-11348	Main Bowl Bolt Gasket
x	951-11349	Fuel Drain Plug Gasket
—	951-11340	Crankcase Cover Kit
50	951-11957	Radial Ball Bearing
60	951-11376	Crankcase Cover Gasket
61	736-04476	Washer
64	—	Crankcase Cover
65	951-11375	Oil Seal
66	710-04971	Bolt, M8 x 38
67	710-04972	Bolt, M8 x 45
68	710-05052	Bolt, M8 x 35
—	751-11341A	Crankcase Kit
50	951-11957	Radial Ball Bearing
53	951-11958	Governor Seal
77	—	Crankcase
81	951-11499	Oil Seal
—	951-11972	Oil Fill Tube Assembly
73	951-11903	Oil Fill Tube O-Ring
74	—	Oil Fill Tube



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
