

# Supplement Sheet

Date: December 7, 2010  
Subject: Handle Hardware & Front Wheel  
Model(s): 21A-250H065, 21A-250J265  
21A-240P000, 21A-220J231  
21A-22MK031 & 21A-24MK052

## Handle Hardware

Rather than secured to the lower handle, your tiller's handle hardware (i.e. bolts and star knobs) may have been packed inside the plastic bag with the Operator's Manual for shipping reasons.

## Attaching the Front Wheel (Models so Equipped)

Your tiller's front wheel may have been packed separately inside the carton for shipping reasons. To attach the wheel, refer to the instructions below:

1. Remove the hex screw, flange nut, spacer and tube sleeve from the front wheel bracket.
2. Slide the tube sleeve over the hex screw and position the spacer within the wheel hub.
3. Secure the wheel to the wheel bracket with the flange nut removed in Step 1 using two  $\frac{9}{16}$ -inch wrenches (or adjustable wrenches). See Fig. 1.

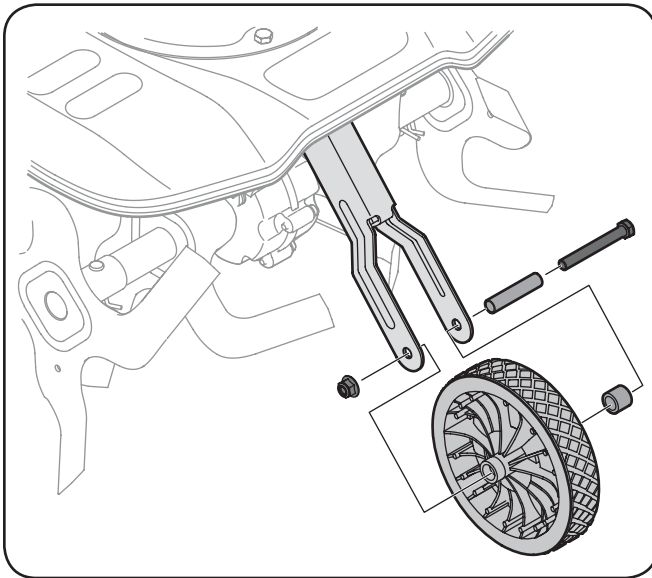


Figure 1

---

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

---