

Cub Cadet.

ILLUSTRATED PARTS MANUAL

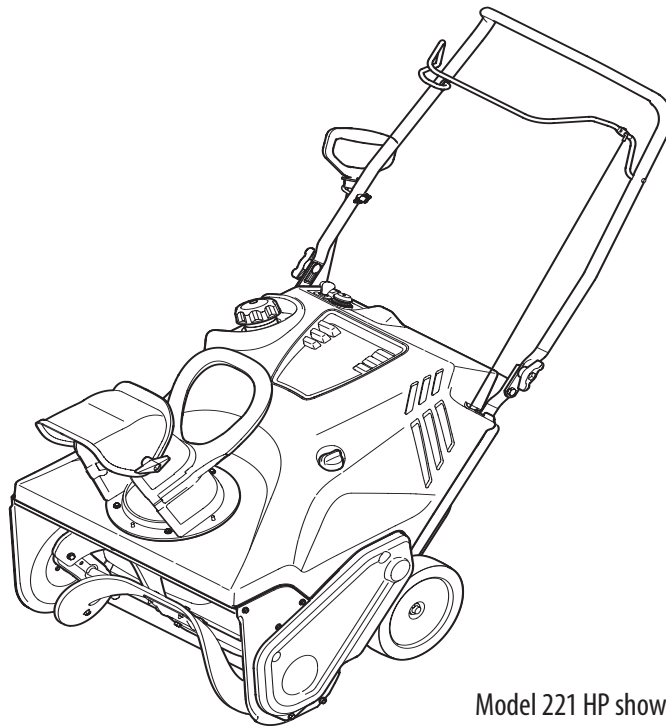

Model 221 HP shown

Single Stage Snow Thrower Model 221 HP & 221 LHP

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Snow Thrower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

<i>Drive System & Auger Assembly</i>	8	<i>Labels (Model 221 LHP)</i>	11
<i>Engine Model 265-JU-12</i>	12	<i>Shroud, Chute & Handle (Model 221 HP)</i>	4
<i>Engine Model 370-JUA</i>	20	<i>Shroud, Chute & Handle (Model 221 LHP)</i>	6
<i>Labels (Model 221 HP)</i>	10		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

SERIAL NUMBER

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

Painted Parts


When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black
4021	Yellow (Cub Cadet)
0499	Beige (Cub Cadet)

0685	Blue (Cub Cadet)
0691	Black Jack (Cub Cadet Commercial)

This page left intentionally blank.


Shroud, Chute & Handle (Model 221 HP)

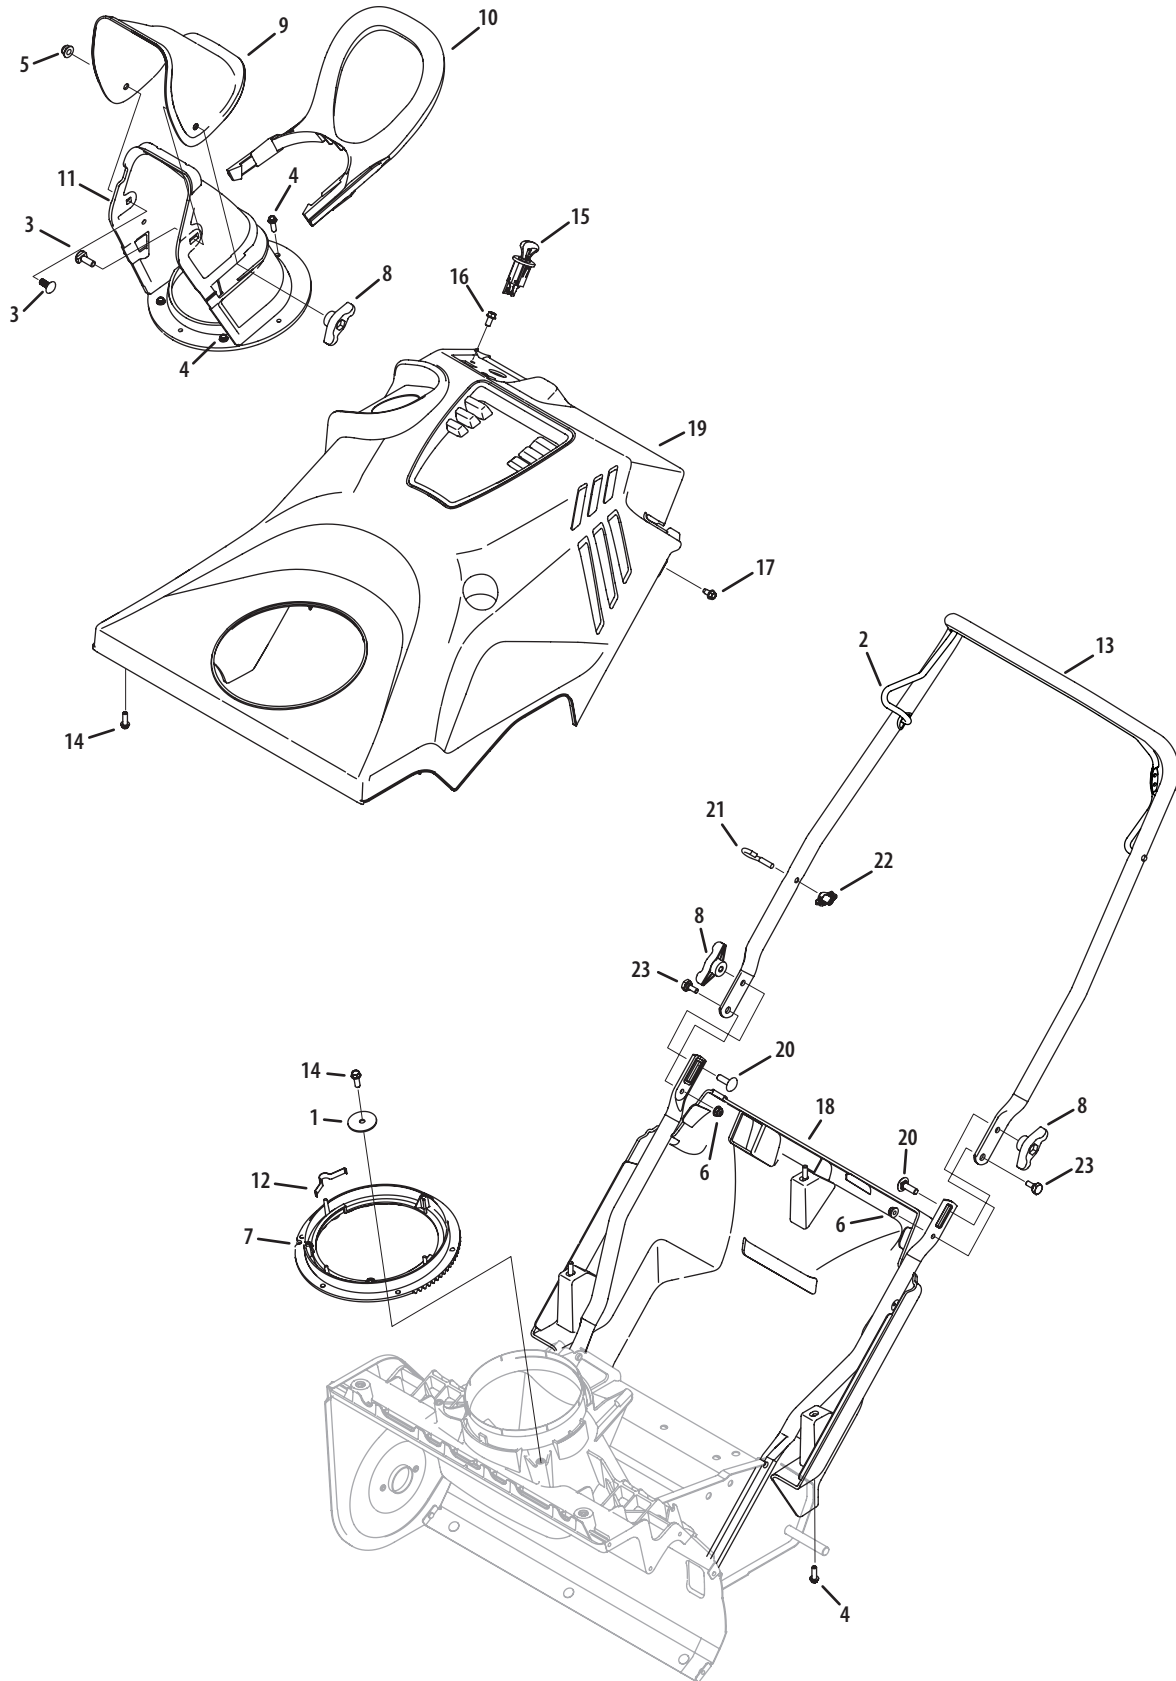

Shroud, Chute & Handle (Model 221 HP)

Ref.	Part Number	Description
1	736-04576	Flat Washer, .28 x 1.5 x .075
2	747-05327C	Auger Bail
3	710-0451	Carriage Bolt, 5/16-18 x .750
4	710-05108	Hex Washer Screw, 1/4 x .750
5	712-04063	Flange Lock Nut, 5/16-18
6	712-04064	Flange Lock Nut, 1/4-20
7	731-08274	Chute Ring
8	720-04122	Wing Knob, 5/16-18
9	731-04426A	Upper Chute
10	731-07644	Chute Handle
11	931-07753A	Lower Chute
12	932-04111	Chute Adjustment Spring
13	749-04703B	Upper Handle
14	710-0895	Screw, Hi-Lo:1/4-15, 0.75
15	925-04031A	Ignition Switch Assembly
16	710-04187	Hex Washer Screw, 1/4-15 x .50
17	710-0599	Hex Washer Screw, 1/4-20 x .500
18	731-07725	Bottom Cover
19	759-04313A	Top Cover
20	710-04998	Carriage Screw, 5/16-18 x 1.00
21	710-05348	Eye Bolt, 1/4-20
22	720-0279	Handle Knob
23	738-04419A	Shoulder Screw, 1/4-20 x .375 x .148

Shroud, Chute & Handle (Model 221 LHP)

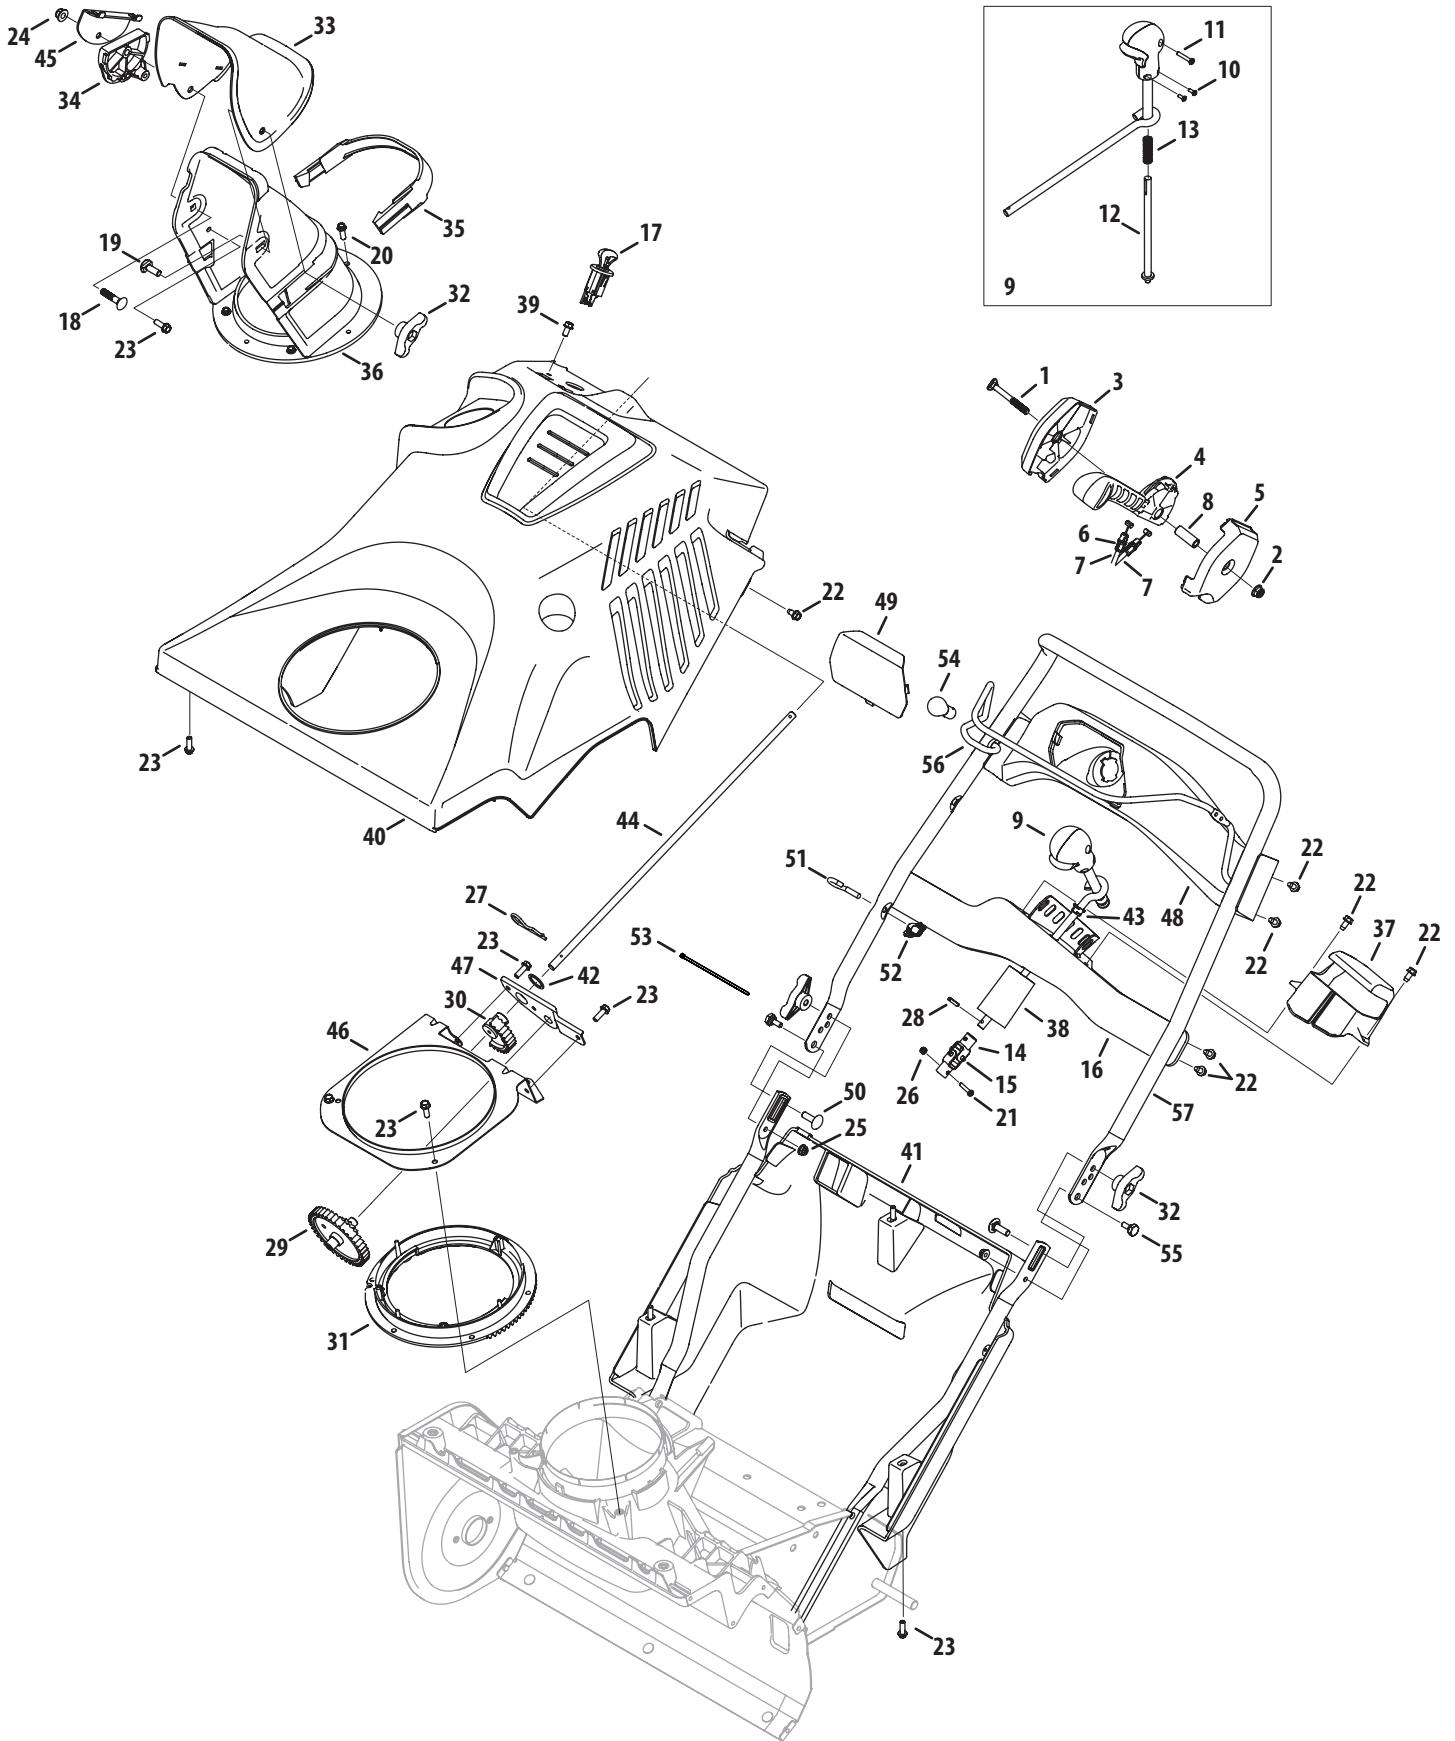


Shroud, Chute & Handle (Model 221 LHP)

Ref.	Part Number	Description
1	710-05163	Carriage Bolt, 5/16-18 x 2.5
2	712-04063	Flange Lock Nut, 5/16-18
3	731-07651	Chute Control Panel
4	731-07654B	Cable Handle Guide
5	731-07656A	Chute Control Panel, Inner
6	731-07868	Cable Clip
7	946-04722	Cable
8	750-05414A	Spacer, .325 ID x .496 OD x 1.34
9	631-04526P	Chute Control Assembly
10	710-04352	Screw, #6 x .375
11	710-04353	Screw, #8 x 1.00
12	731-08018	Chute Rod
13	732-04789	Spring, .460 OD x 1.469
14	684-04350	Joint Block Assembly
15	715-0150	Roll Pin, 3/16 Dia. x 1.1 LG.
16	684-04383	Indicator Bracket Assembly
17	925-04031A	Ignition Switch Assembly
18	710-0262	Carriage Bolt, 5/16-18 x 1.00
19	710-0451	Carriage Bolt, 5/16-18 x .75
20	710-05108	Hex Washer Screw, 1/4 x .750
21	710-05179A	Screw, #8-32 x .875
22	710-0599	Hex Washer Screw, 1/4-20 x .500
23	710-0895	Screw, Hi-Lo:1/4-15, 0.75
24	712-04063	Flange Lock Nut, 5/16-18
25	712-04064	Flange Lock Nut, 1/4-20
26	712-04035	Hex Lock Nut, #8-32
27	714-04003	Cotter Pin
28	715-04095	Pin, .156 x .875
29	717-04941	Bevel Gear, 40T/11T

Ref.	Part Number	Description
30	717-04940	Spur Gear, 35T
31	917-04844B	Bevel Gear, 95T
32	720-04122	Wing Knob, 5/16-18
33	731-04427A	Upper Chute
34	731-06451	Cable Guide
35	731-07708	Chute Plug
36	931-07753A	Lower Chute
37	731-07957	Chute Cover
38	720-04174	Grip, 1.18 x 3.33
39	710-04187	Hex Washer Screw, 1/4-15 x .50
40	759-04314A	Top Cover
41	731-07725	Bottom Cover
42	736-04161	Flat Washer, .75 x 1.00 x .06
43	941-0475	Plastic Bushing, .380 ID
44	747-05299A	Chute Rod
45	784-5594	Cable Bracket
46	790-00471	Gear Retainer Bracket
47	790-00416	Gear Mounting Plate
48	931-04504	Handle Panel Assembly
49	731-07784	Handle Panel Lens
50	710-04998	Carriage Screw, 5/16-18 x 1.00
51	710-05348	Eye Bolt, 1/4-20
52	720-0279	Handle Knob, 1/4-20
53	725-0157	Cable Tie
54	925-1629	Lamp
55	738-04419A	Shoulder Screw, .375 x .148 x 1/4-20
56	747-05327C	Auger Bail
57	749-04693B	Upper Handle
—	925-04139*	Harness Assembly

* Not Shown

Drive System & Auger Assembly

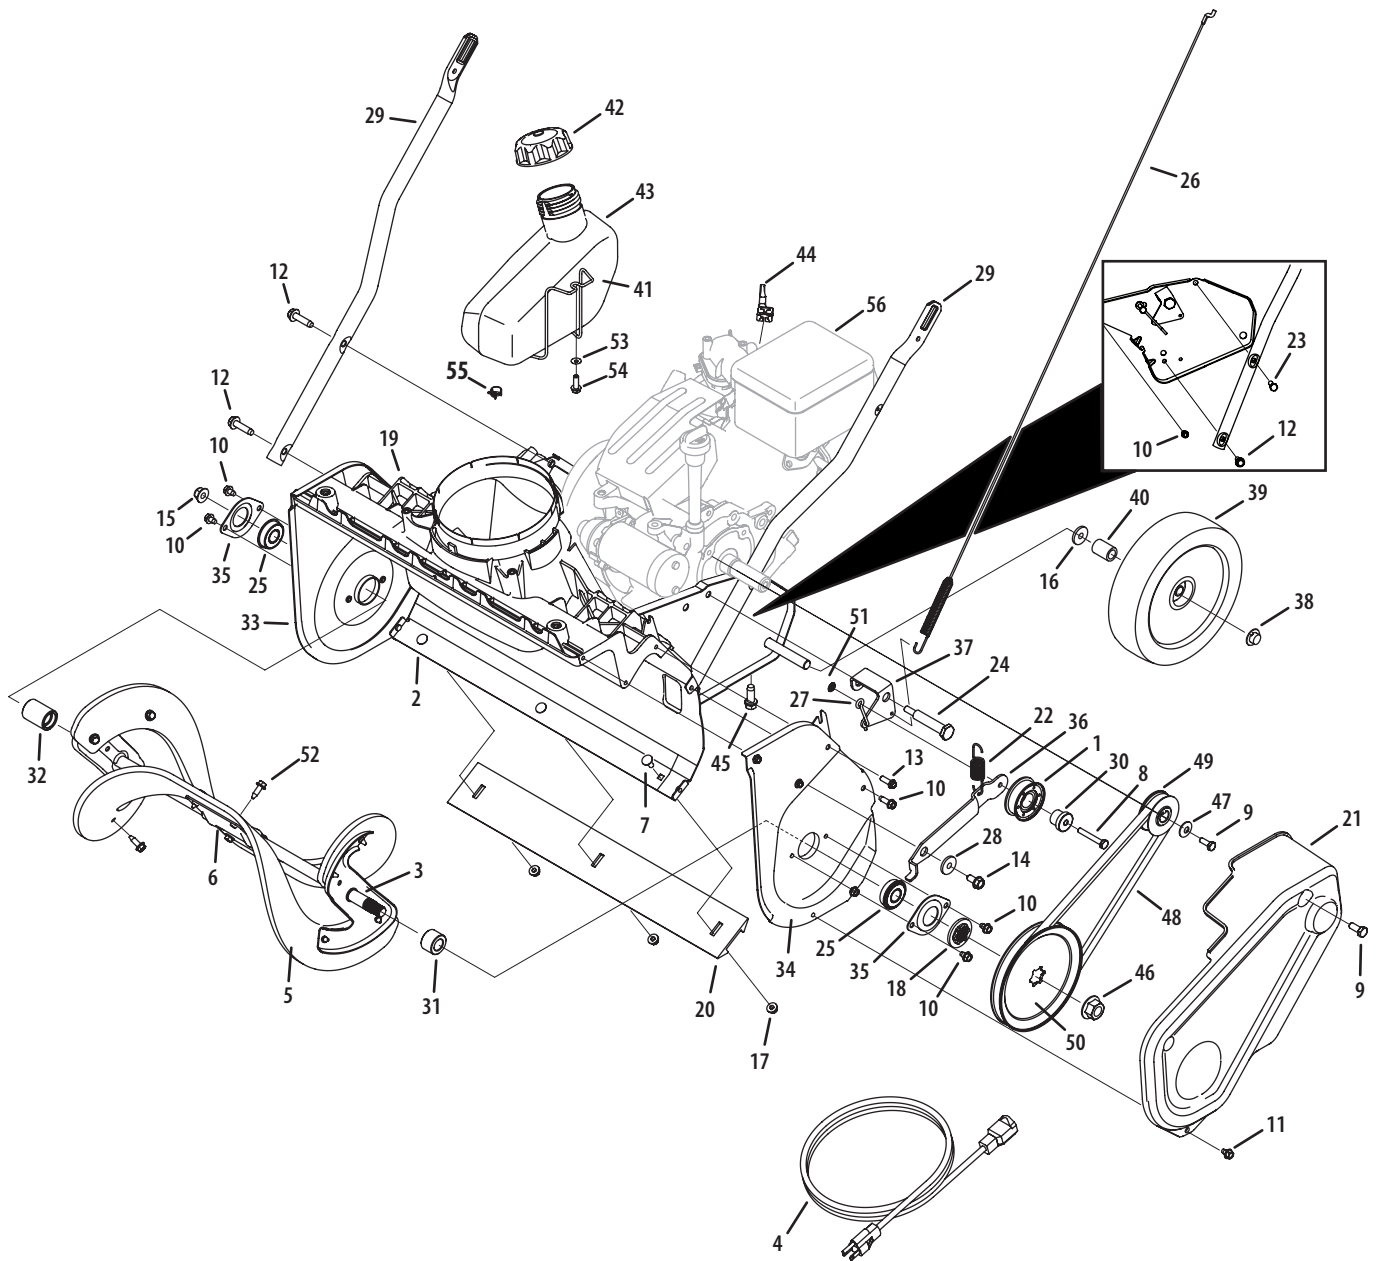

Drive System & Auger Assembly

Ref.	Part Number	Description
1	684-04168	Idler Pulley Assembly
2	684-04398	Frame
3	984-04393	Auger Assembly Mount
4	929-0071A	3-Prong Extension Cord
5	753-06469	Auger Replacement Kit (Inc. 2 Paddles and 12 Hex Washer Screws)
6	790-00427	Center Auger Bracket
7	710-0134	Carriage Screw, 1/4-20 x .62
8	710-0778	Hex Screw, 1/4-20 x 1.50
9	710-0627	Hex Lock Screw, 5/16-24 x .750
10	710-0642	Hex Washer Screw, 1/4-20 x .750
11	710-0599	Hex Washer Screw, 1/4-20 x .500
12	710-0817	Hex Washer Screw, 5/16-18 x 1.250
13	710-0895	Hex Washer Screw, 1/4-15 x .750
14	710-04484	Hex Washer Screw, 5/16-18 x .75
15	712-04065	Flange Lock Nut, 3/8-16
16	936-0192	Flat Washer, .535 x .930 x .090
17	712-04064	Flange Lock Nut, 1/4-20
18	718-04836	Pulley Hub
19	931-07626B	Chute Adapter
20	731-08171	Shave Plate
21	731-07737A	Belt Cover
22	732-04748	Extension Spring, .70 x 3.035
23	710-05183	Hex Screw, 5/16-24 x 1.25
24	738-04456	Shoulder Bolt, 5/16-24 x .496 x 2.18
25	741-04517	Ball Bearing, .500 x 40mm x 12mm
26	946-04701	Clutch Cable
27	747-05360A	Drive Cable Wire Support
28	748-0234	Shoulder Spacer

Ref.	Part Number	Description
29	749-04810	Lower Handle
30	750-04571	Shoulder Spacer, .260 x .785 x .538
31	750-04758	LH Auger Spacer
32	750-05393	RH Auger Spacer
33	790-00444	RH Auger Plate
34	790-00445	LH Auger Plate
35	790-00457	Bearing Cup
36	790-00461	Idler Bracket
37	790-00426	Cable Idler Bracket
38	726-0299	Push Cap, 1/2
39	634-04347	Wheel, 8"
40	750-05417	Sleeve Spacer, .525 x .78 x 1.00
41	747-05513	Gas Tank Wire Support
42	751-14006	Fuel Cap
43	751-14001	Fuel Tank
44	731-07664	Choke Extension Lever
45	710-0654A	Hex Washer Screw, 3/8-16 x 1.000
46	912-0702	Flange Nut, 7/16-20
47	736-0343	Thrust Washer, .330 x 1.25 x .120
48	954-04050	Belt, .500 x 35.06
49	956-0416B	Pulley Half, .625 x 2.25
50	756-04443	Pulley, 1/2 x 6.00
51	726-0233	Push Nut
52	710-05058	Hex Washer Screw, 1/4-20 x .750
53	736-3092	Washer, .265 x 1.00 x .030
54	710-04065	Screw, 1/4-10 x .625
55	726-0205	Hose Clamp
56	952Z265-JU†	Replacement Engine
	952Z370-JUA††	Replacement Engine

† Model 221 HP

†† Model 221 LHP

Labels (Model 221 HP)

777S33118



777I22139




777S32236



777D14848



777X43243

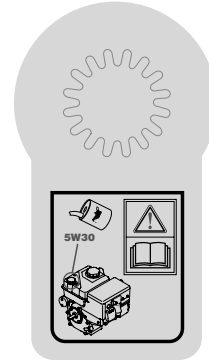

777S33731




777D14849



777S33636



777I23462

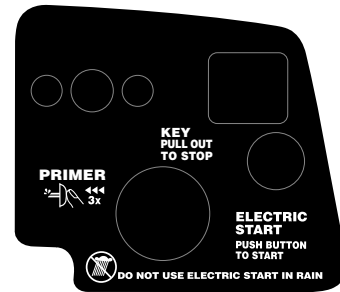

777I22138



777D15036



777I23463



Labels (Model 221 LHP)


777S33118



777I22139




777S32236

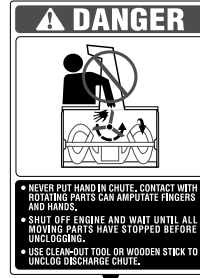

777D14847



777X43243

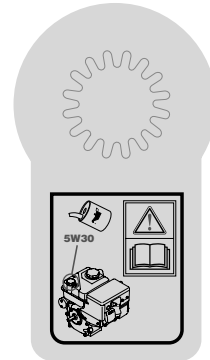


777S33731




777D14849




777S33669

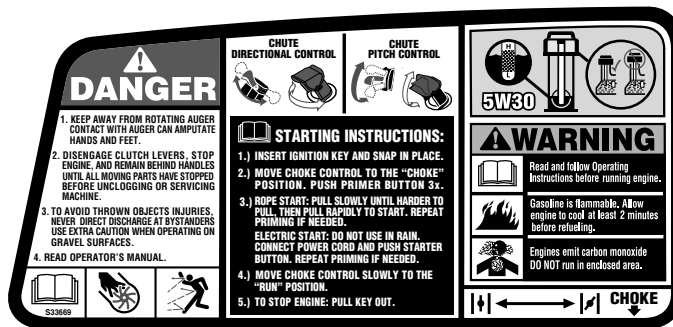

777I23462

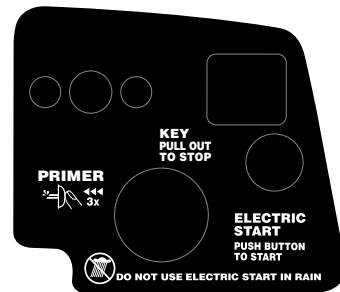


777D15037

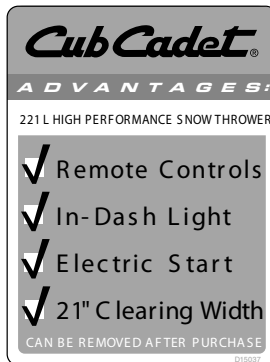

777I23463




265-JU-12 Muffler

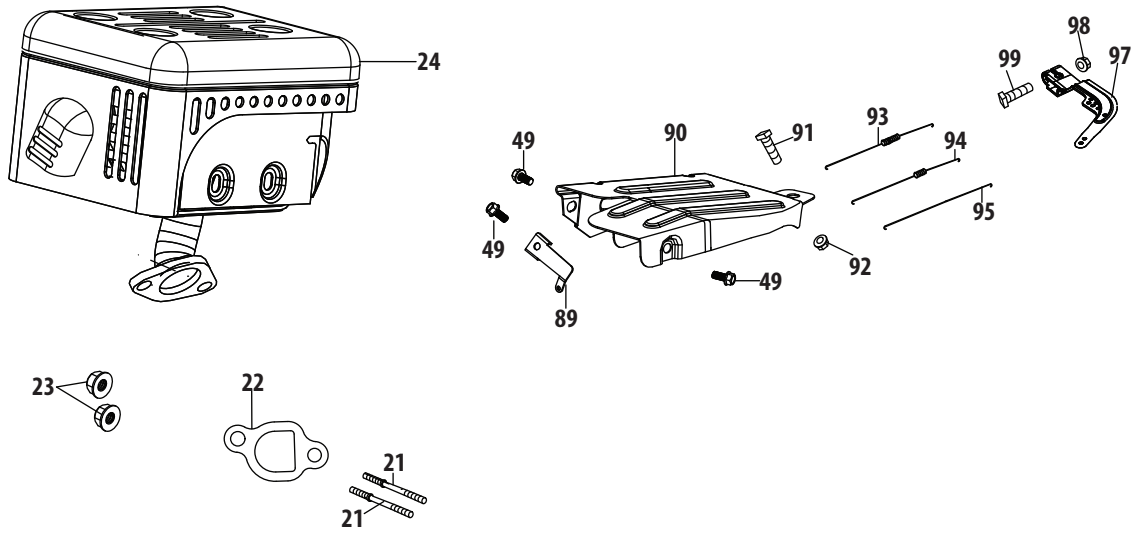

Ref.	Part Number	Description
21	710-04911	Stud M8×36
21	951-10657	Muffler Stud Assembly
22	951-11289	Exhaust Pipe Gasket
23	712-04214	Nut, M8
24	951-12010	Muffler Assembly
49	710-04915	Bolt M6×12
89	951-11104	Governor Spring Bracket
90	951-12016	Governor Shield

Ref.	Part Number	Description
91	710-04943	Bolt M6×28
92	712-05015	Nut M6
93	951-12100	Governor Spring
94	951-10664	Throttle Linkage Spring
95	951-10665	Throttle Linkage
97	951-11106	Governor Arm
98	712-04212	Nut M6
99	710-04908	Governor Arm Bolt


265-JU-12 Starter & Flywheel

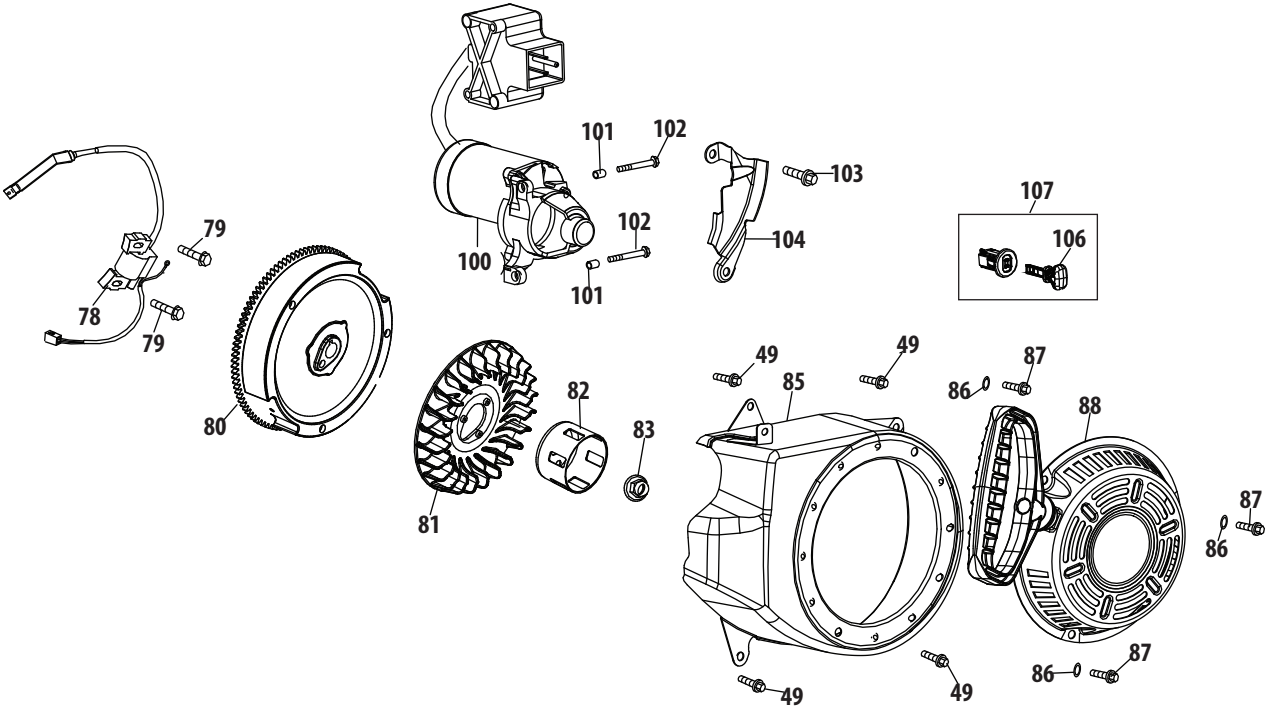

Ref.	Part Number	Description
49	710-04915	Bolt M6x12
78	951-12013	Ignition Coil Assembly
79	710-04919	Bolt M6x25
80	951-12416	Flywheel
81	951-10934	Cooling Fan
82	951-10911	Starter Cup
83	712-04209	Nut, Special, M14x1.5
85	951-12644	Blower Housing
86	736-04455	Gasket 6

Ref.	Part Number	Description
87	710-04974	Bolt M6x10
88	951-14152	Recoil Starter
100	951-10645A	Electric Starter
101	715-04088	Dowel Pin 8x8
102	710-05182	Bolt M6x32
103	710-04915	Bolt M6x12
104	951-11109	Blower Housing Shield
106	731-05632	Key
107	951-10637	Key Switch


265-JU-12 Crankcase

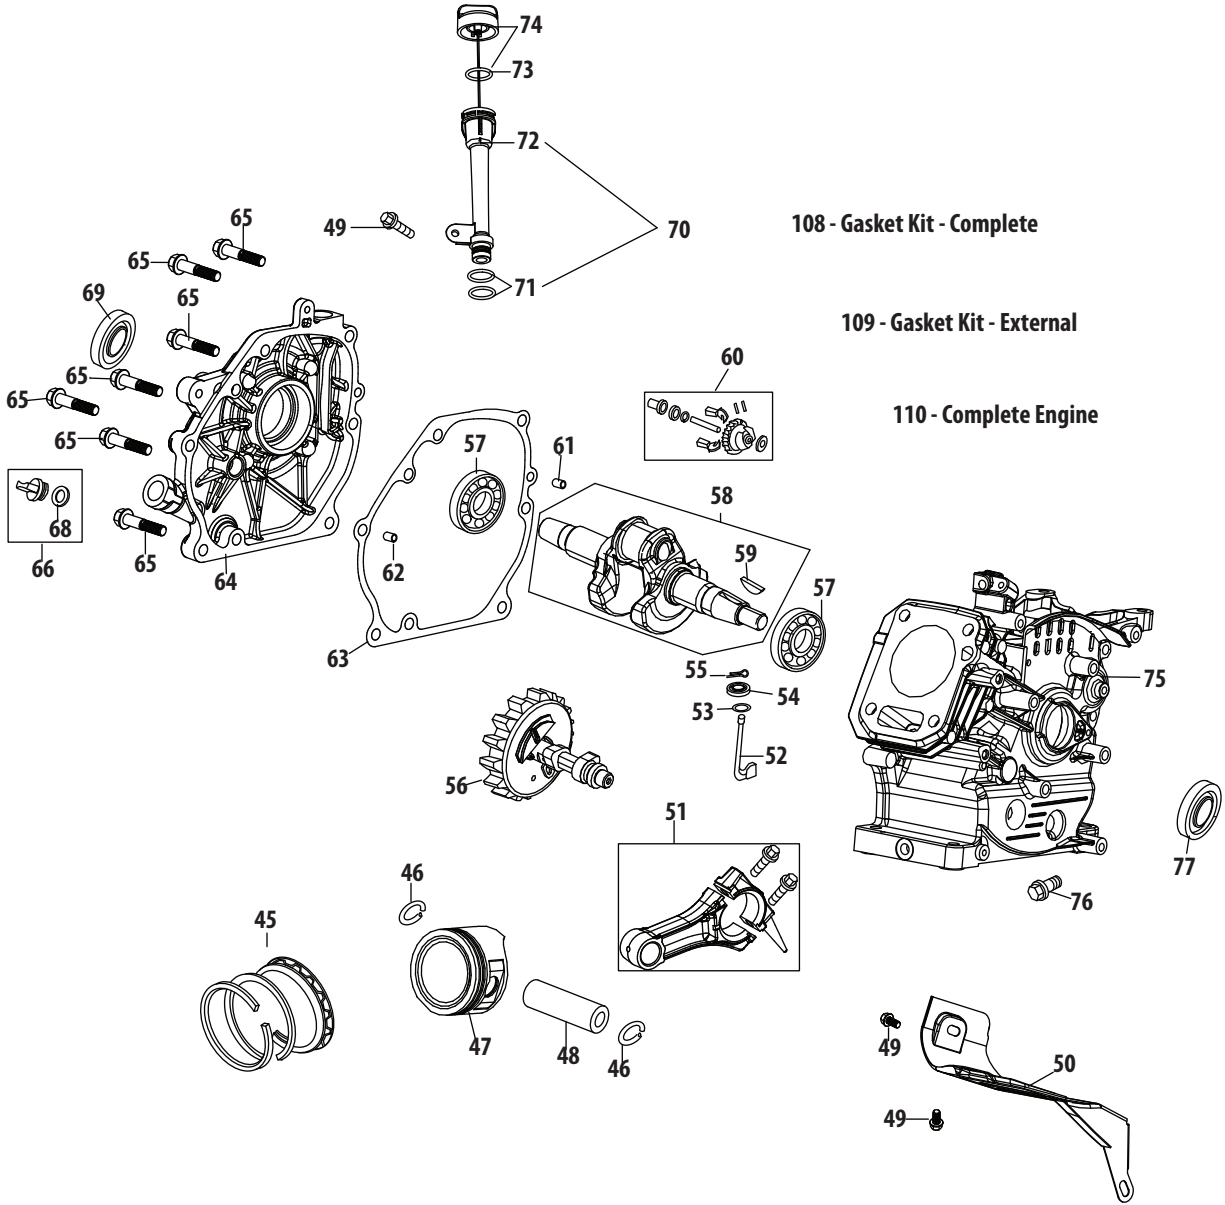

265-JU-12 Crankcase



Ref.	Part Number	Description	Ref.	Part Number	Description
45	951-11688	Piston Ring Set	65	710-04932	Bolt M8×32
46	951-11632	Piston Pin Snap Ring	66	951-11283	Oil Filler Plug Assembly
47	951-11900	Piston	68	951-11577	O-Ring 15.8×2.5
48	951-11901	Piston Pin	69	951-11368	Oil Seal, 25×41.25×6
49	710-04915	Bolt M6×12	70	951-11913	Oil Fill Tube Assembly
50	951-11113	Air Shield	71	951-11381	Oil Fill Tube O-Ring
51	951-11573	Connecting Rod Assembly	72	951-10656	Oil Fill Tube
52	951-14053	Governor Arm Shaft	73	951-11904	Oil Fill Tube O-Ring
53	736-04461	Washer 5.2×1.9	74	951-12482	Dipstick Assembly
54	951-11902	Governor Seal	75	951-12650	Crankcase Kit
55	714-04078	Cotter Pin			(Incl. 54,57,69,75,77)
56	951-11575	Camshaft Assembly		951-12648	Short Block Assembly
57	951-11369	Radial Ball Bearing, 6205			(Incl.6,22,26-28,39,41,42, 45-48,51-69,75-77)
58	951-12102	Crankshaft Kit	76	951-12514	Oil Drain Plug
		(Incl. 57-59,69,77)	77	951-11370	Oil Seal 25×41.25×6
59	951-10307	Woodruff Key	108	951-12028	Gasket Kit - Complete
60	951-11576	Governor Gear/Shaft Assembly			(Incl. 6,22,26-28,34,39, 53,54,63,69,77)
61	715-04092	Dowel Pin 7×14	109	951-12026A	Gasket Kit - External
62	715-04096	Dowel Pin 9×14			(Incl. 6,22,26-28,34)
63	951-11371	Crankcase Cover Gasket	110	952Z265-JU-12	Complete Engine
64	951-12125	Crankcase Cover			
	951-11246	Crankcase Cover Kit			
		(Incl. 57,63-69)			

265-JU-12 Cylinder Head

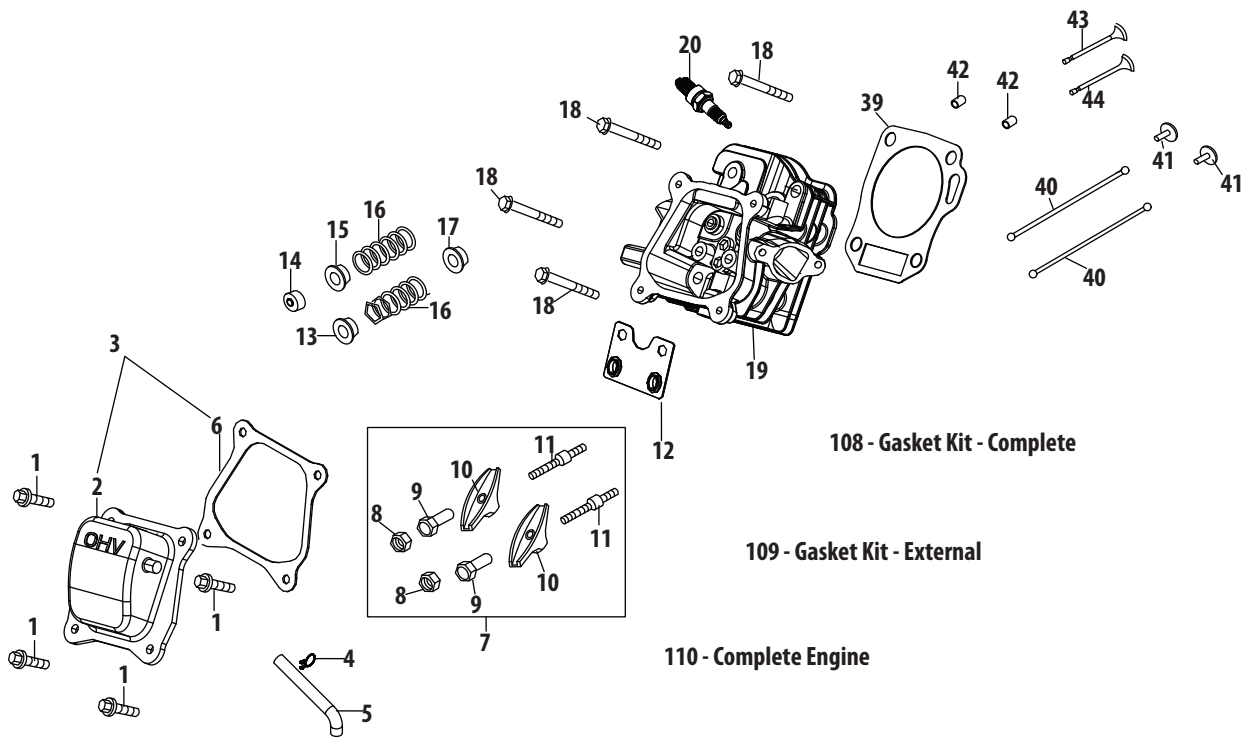

Ref.	Part Number	Description
1	710-04968	Bolt M6x16
2	951-11054A	Valve Cover
3	951-12626	Valve Cover Kit
4	726-04101	Breather Hose Clamp
5	731-07059	Breather Hose
6	951-11565	Valve Cover Gasket
7	951-11892	Rocker Arm Assembly
8	751-11124	Nut, Pivot Locking
9	751-11123	Adjusting Nut ,Valve
10	951-11893	Rocker Arm
11	710-04902	Bolt, Pivot
12	951-11895	Push Rod Guide
13	951-12000	Valve Spring Retainer (Intake)
14	951-12002	Exhaust Lash Cap
15	951-12003	Valve Spring Retainer (Exhaust)
16	951-12004	Valve Spring
17	951-11894	Valve Seal (Intake)
18	710-04933	Bolt M8x55
19	951-14195	Cylinder Head Assembly (Incl. 6-17,19,22,26,28,39,43,44)
20	951-10292	Spark Plug
39	951-11898	Gasket, Cylinder Head
40	951-10648	Push Rod Kit
41	951-11899	Tappet
42	715-04108	Dowel Pin 10x16
43	951-10647A	Valve Kit
44	951-10647A	Valve Kit
108	951-12028	Gasket Kit - Complete (Incl. 6,22,26-28,34,39, 53,54,63,69,77)
109	951-12026A	Gasket Kit - External (Incl. 6,22,26-28,34)
110	952Z265-JU-12	Complete Engine

265-JU-12 Carburetor

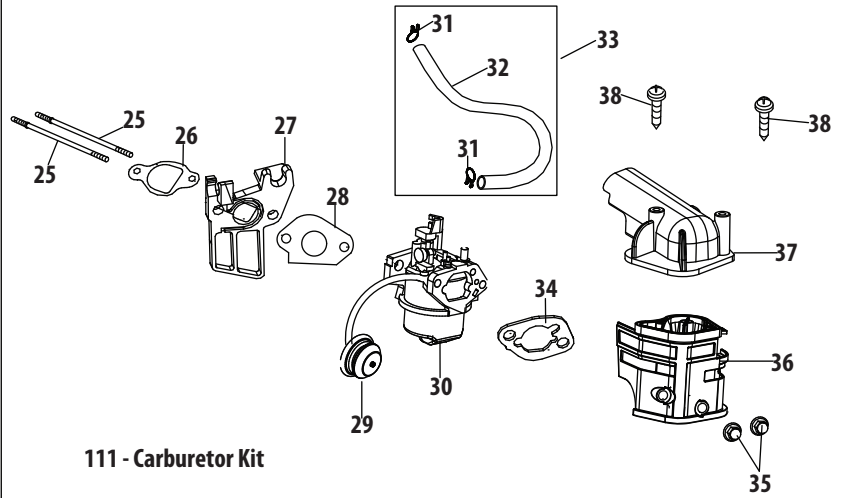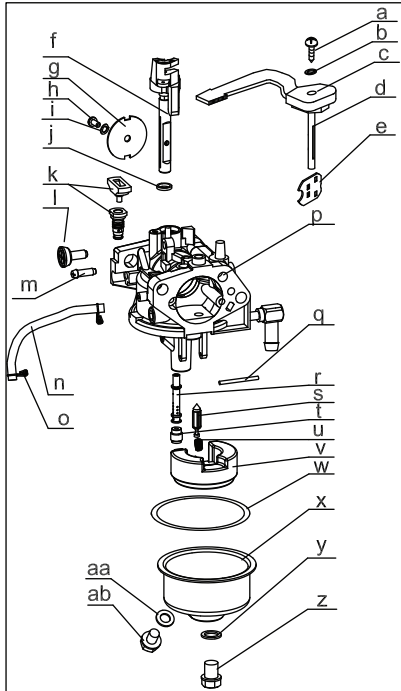


111 - Carburetor Kit

265-JU-12 Carburetor

Ref.	Part Number	Description
25	710-05101	Stud M6×110
26	951-11567	Carburetor Insulator Gasket
27	951-11568	Carburetor Insulator
28	951-11569A	Carburetor Gasket
29	951-10639A	Primer Assembly
29	951-11824	Primer Bulb
30	951-12704B	Carburetor Assembly
31	951-11700	Fuel Hose Clamp
32	951-12613	Fuel Hose
33	951-12012	Fuel Line Kit
34	951-11571	Carburetor Gasket Plate
35	712-04213	Nut
36	951-10962	Air Cleaner Housing
37	951-10961	Air Cleaner Assembly
38	710-05275	Self-Tapping Bolt M4.2×45
111	951-14033	Carburetor Kit (Incl. k,q,r,s,t,u,v,w,y,aa)
a	710-05468	Choke Control Lever Screw
b	736-04598	Washer
c	951-12515	Choke Control Lever
d	n/a	Choke Shaft
e	n/a	Choke Plate
f	n/a	Throttle Shaft

Ref.	Part Number	Description
g	n/a	Throttle Plate
h	710-05469	Screw M3×6
i	736-04638	Lock Washer
j	n/a	Gasket, Throttle Plate
k	n/a	Idle Jet Assembly (0.34)
l	n/a	Idle Speed Adjusting Screw
m	n/a	Primer Pipe
n	951-12019	Primer Hose
o	951-11906	Hose Clamp
p	n/a	Carburetor Body
q	n/a	Float Pin
r	n/a	Emulsion Tube (P18-019)
s	951-12875	Needle Valve
t	n/a	Main Jet (#73H)
u	n/a	Needle Valve Spring
v	n/a	Float
w	951-11589	Fuel Bowl O-Ring
x	n/a	Fuel Bowl
y	951-11348	Fuel Bowl Mounting Bolt Gasket
z	710-04945	Fuel Bowl Mounting Bolt
aa	951-11349	Fuel Drain Bolt Gasket
ab	710-04938	Fuel Drain Bolt


370-JUA Muffler

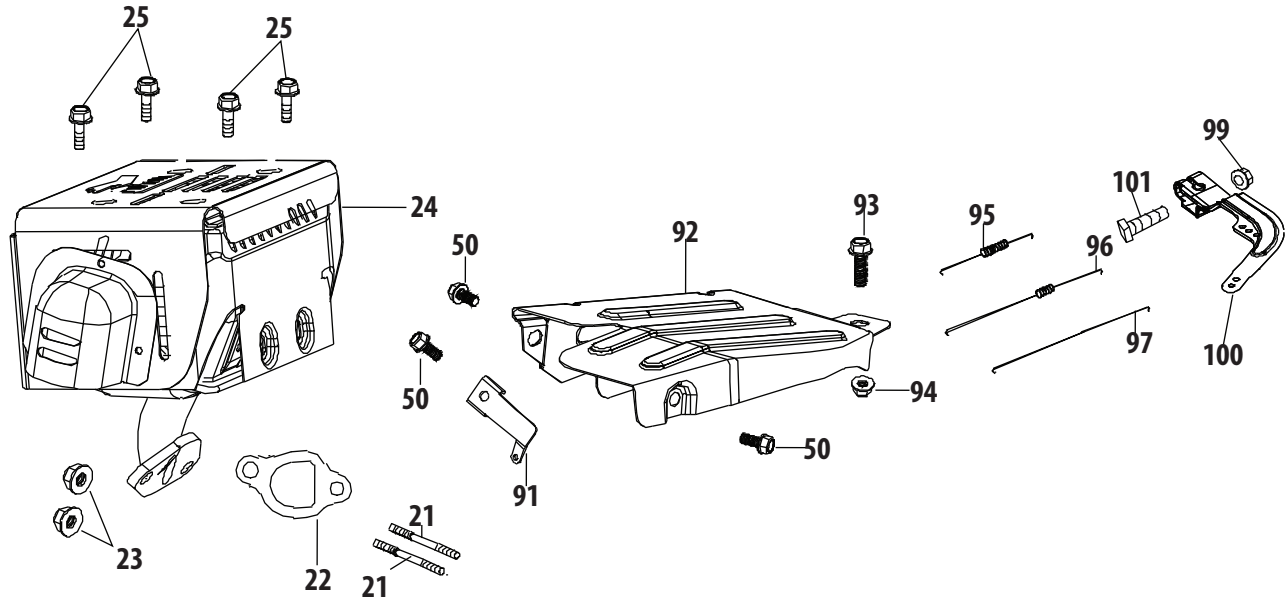

Ref.	Part Number	Description
21	710-04911	Stud M8×34
21	951-10657	Muffler Stud Assembly
22	951-11289	Exhaust Pipe Gasket
23	712-04214	Nut, M8
24	951-12010	Muffler Assembly
25	710-05002	Bolt M5×10
50	710-04915	Bolt M6×12
91	951-11104	Governor Spring Bracket
92	951-12016	Governor Shield

Ref.	Part Number	Description
93	710-04943	Bolt M6×28
94	712-05015	Nut M6
95	951-12100	Governor Spring
96	951-10664	Throttle Linkage Spring
97	951-10665	Throttle Linkage
99	712-04212	Nut M6
100	951-11106	Governor Arm
101	710-04908	Governor Arm Bolt


370-JUA Starter & Blower Housing

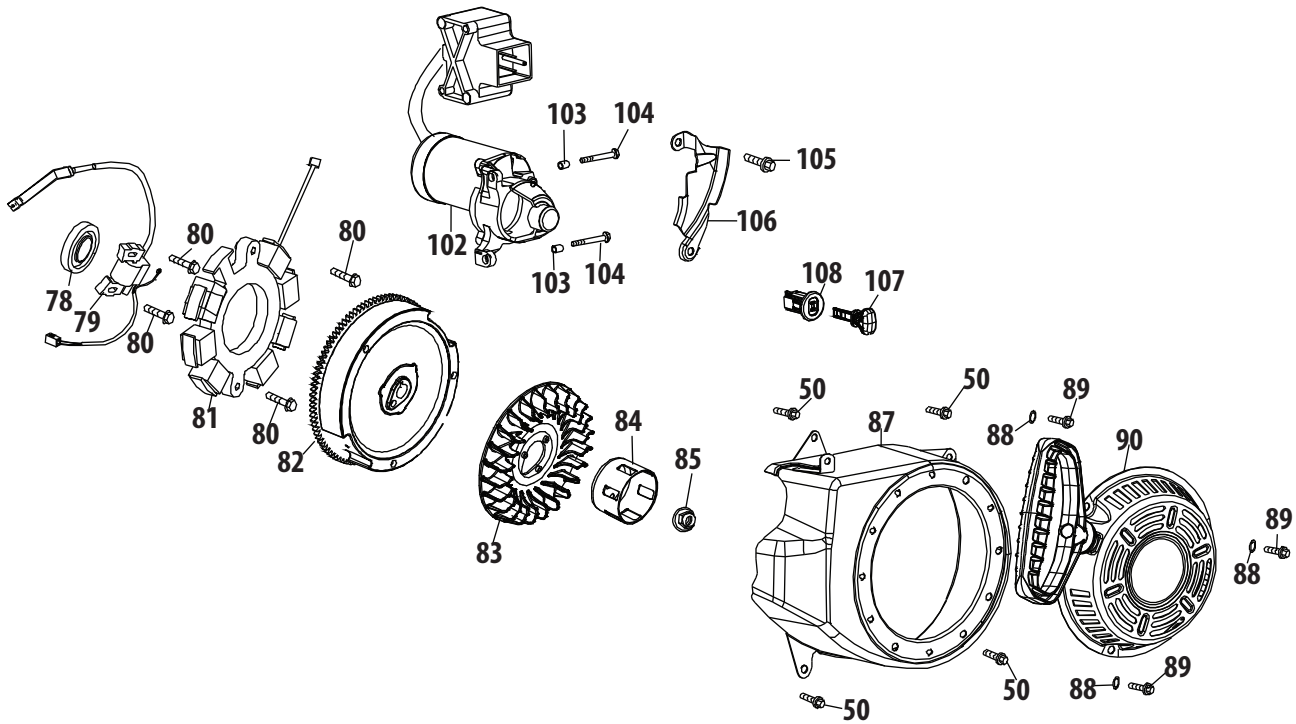

Ref.	Part Number	Description
50	710-04915	Bolt M6×12
78	951-11370	Oil Seal 25×41.25×6
79	951-12013	Ignition Coil Assembly
80	710-04919	Bolt M6×25
81	751-12050A	Alternator Assembly
82	951-12051	Flywheel
83	951-10934	Cooling Fan
84	951-10911	Starter Cup
85	712-04209	Nut, Special, M14×1.5
87	951-12644	Blower Housing

Ref.	Part Number	Description
88	951-12644	Gasket Ø6
89	710-04974	Bolt M6×10
90	751-14152	Recoil Starter
102	951-10645A	Electric Starter
103	715-04088	Dowel Pin 8×8
104	710-05182	Bolt M6×32
105	710-04915	Bolt M6×12
106	951-11109	Blower Housing Shield
107	731-05632	Key
108	951-10637	Key Switch Base


370-JUA Crankcase

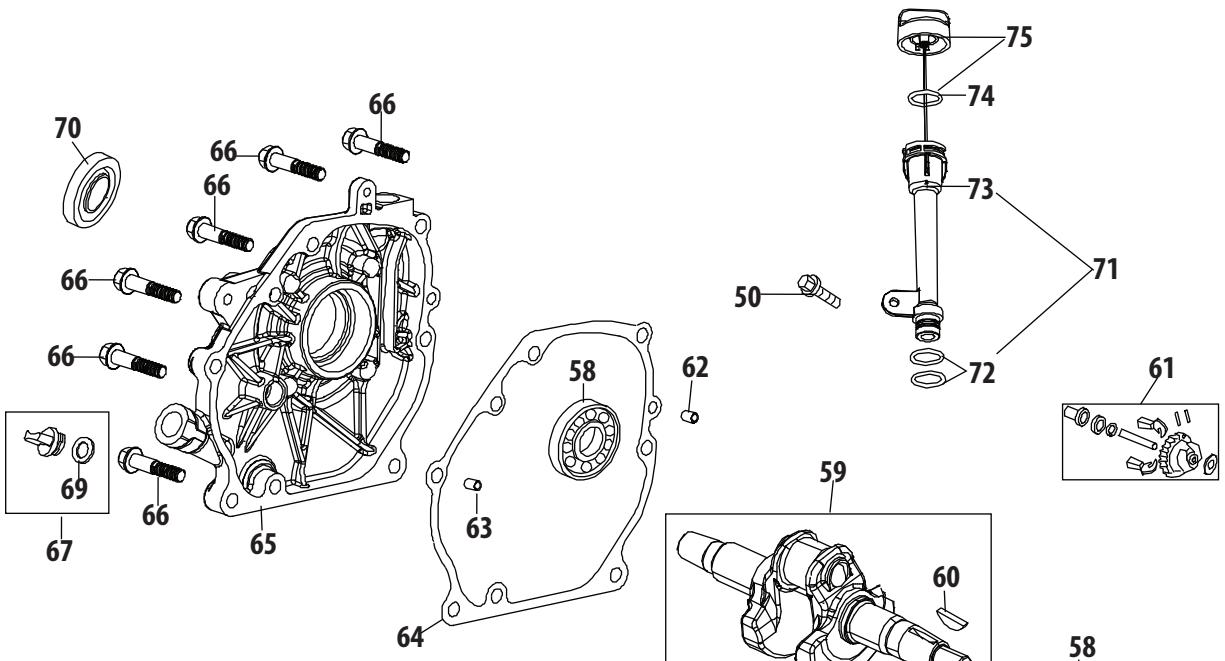

111 - Gasket Kit - Complete


112 - Gasket Kit - External

113 - Complete Engine

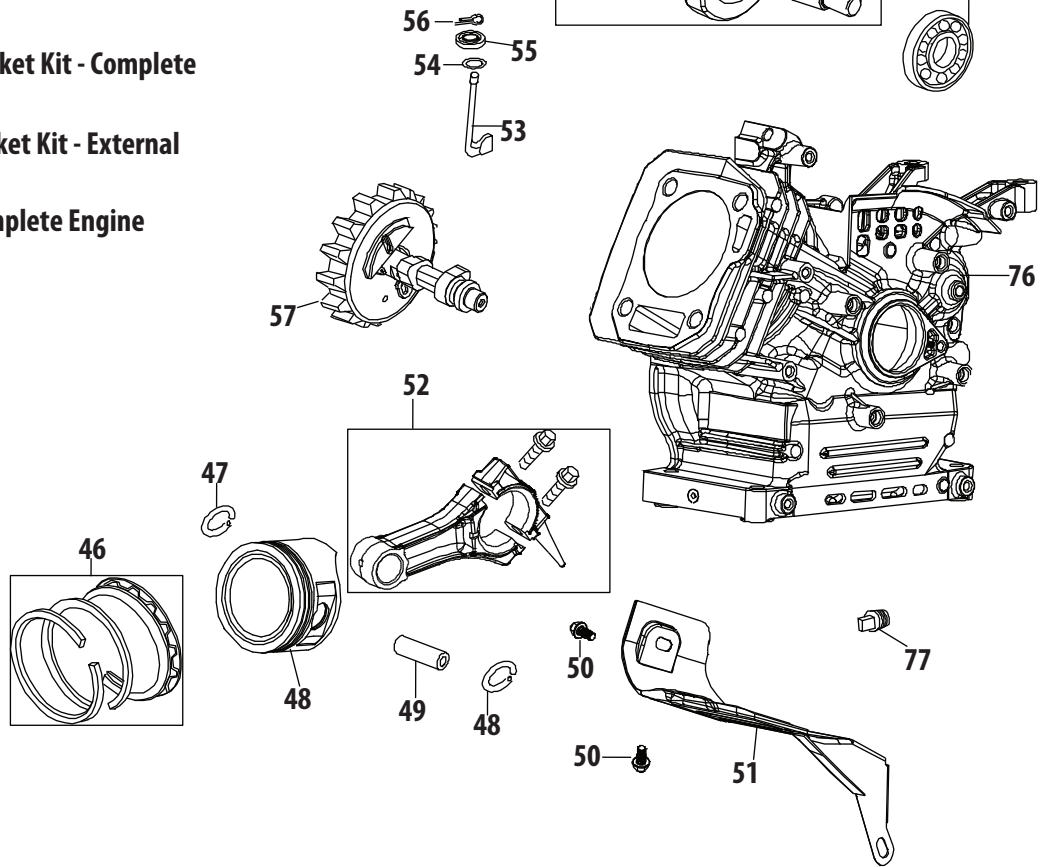

Ref.	Part Number	Description	Ref.	Part Number	Description
46	951-12111	Piston Ring Set	66	710-04932	Bolt M8×32
47	951-11632	Piston Pin Snap Ring	67	751-10493	Oil Fill Plug Assembly
48	951-12007	Piston	69	951-11577	O-Ring 15.8×2.5
49	951-11633	Piston Pin	70	951-11368	Oil Seal 25×41.25×6
50	710-04915	Bolt M6×12	71	951-11913	Oil Fill Tube Assembly
51	951-11113	Air Shield	72	951-11381	Oil Fill Tube O-Ring
52	951-11573	Connecting Rod Assembly	73	951-10656	Oil Fill Tube
53	751-14053	Governor Arm Shaft	74	951-11904	Oil Fill Tube O-Ring
54	736-04461	Washer 5.2×1.9	75	951-12482	Dipstick Assembly
55	951-11902	Governor Seal	76	751-14097	Crankcase
56	714-04078	Cotter Pin		951-12103	Crankcase Kit
57	951-11575	Camshaft Assembly			(Incl.55,58,70,76 & 78)
58	951-11369	Radial Ball Bearing, 6205		751-12513A	Short Block Assembly
59	951-12102	Crankshaft Kit			(Incl. 6,22,27-29,40,42,43, 46-49,52-70,76-78)
60	951-10307	Woodruff Key	77	951-12514	Oil Drain Plug
61	951-11576	Governor Gear/Shaft Assembly	111	751-12121A	Gasket Kit - Complete
62	715-04092	Dowel Pin 7×14			(Incl.6,22,27-29,35,40,54, 55,64,70 & 78)
63	715-04096	Dowel Pin 9×14	112	751-12026A	Gasket Kit - External
64	951-11371	Crankcase Cover Gasket			(Incl.6,22,27-29 & 35)
65	951-12125	Crankcase Cover	113	952Z370-JUA	Complete Engine
	951-11246	Crankcase Cover Kit			
		(Incl.58,64-70)			

370-JUA Cylinder Head

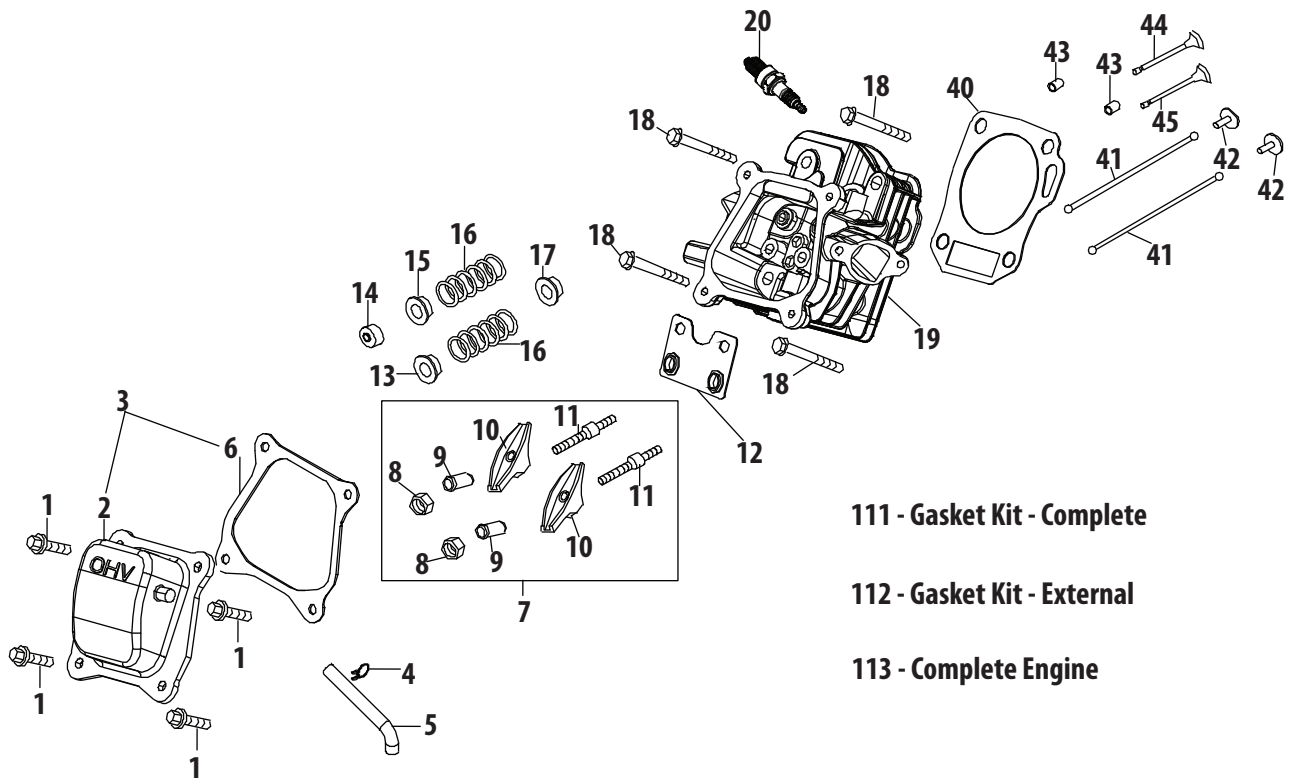

111 - Gasket Kit - Complete

112 - Gasket Kit - External


113 - Complete Engine

370-JUA Cylinder Head


Ref.	Part Number	Description
1	710-04968	Bolt M6×16
2	951-12608	Valve Cover
3	951-12626	Valve Cover Kit
4	726-04101	Breather Hose Clamp
5	731-07059	Breather Hose
6	951-11565	Valve Cover Gasket
7	951-11892	Rocker Arm Assembly
8	751-11124	Nut, Pivot Locking
9	751-11123	Adjusting Nut ,Valve
10	951-11893	Rocker Arm
11	710-04902	Bolt, Pivot
12	951-11895	Push Rod Guide
13	951-12000	Valve Spring Retainer (Intake)
14	951-12002	Exhaust Lash Cap
15	951-12003	Valve Spring Retainer (Exhaust)
16	951-12004	Valve Spring
17	951-11894	Valve Seal (Intake)

Ref.	Part Number	Description
18	710-04933	Bolt M8×55
19	751-10722B	Cylinder Head Assembly (Incl.6-17,19,22,27-29,40,44 & 45)
20	951-10292	Spark Plug/F6Rtc
40	951-11572	Gasket, Cylinder Head
41	951-10648	Push Rod Kit
42	951-11899	Tappet
43	715-04108	Dowel Pin 10×16
44	951-10647A	Valve Kit
45	951-10647A	Valve Kit
111	751-12121A	Gasket Kit - Complete (Incl.6,22,27-29,35,40,54, 55,64,70 & 78)
112	751-12026A	Gasket Kit - External (Incl.6,22,27-29 & 35)
113	952Z370-JUA	Complete Engine

370-JUA Carburetor

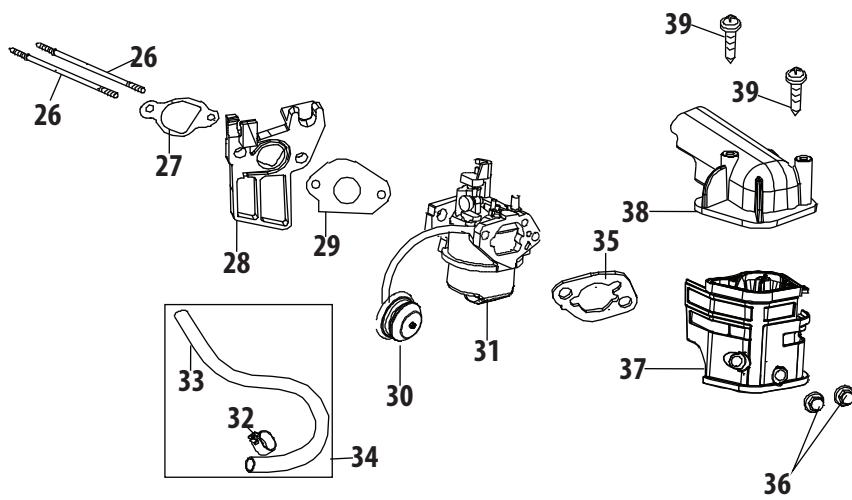

110 - Carburetor Kit

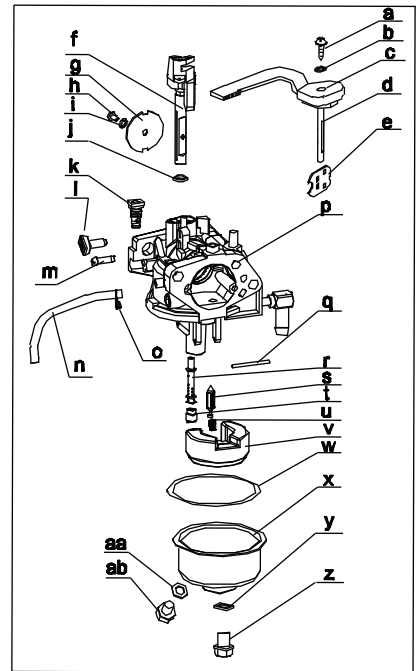

370-JUA Carburetor

Ref.	Part Number	Description	Ref.	Part Number	Description
26	710-05101	Stud M6x110	g	n/a	Throttle Plate
27	951-11567	Carburetor Insulator Gasket	h	710-05469	Screw M3x6
28	951-11568	Carburetor Insulator	i	736-04638	Washer 3
29	951-11569A	Carburetor Gasket	j	n/a	Gasket, Throttle Plate
30	951-10639A	Primer Assembly	k	n/a	Idle Jet Assembly
31	751-14028A	Carburetor Assembly	l	n/a	Idle Speed Adjusting Screw
32	951-11700	Fuel Hose Clamp	m	n/a	Primer Pipe
33	951-12613	Fuel Hose	n	951-12019	Primer Hose
34	951-12012	Fuel Line Kit	o	951-11906	Hose Clamp
35	951-11571	Carburetor Gasket Plate	p	n/a	Carburetor Body
36	712-04213	Nut	q	n/a	Float Pin
37	951-10962	Air Cleaner Housing	r	n/a	Emulsion Tube
38	951-10961	Air Cleaner Assembly	s	951-12875	Needle Valve
39	710-05275	Self-Tapping Bolt M4.2x45	t	n/a	Main Jet
110	951-12788A	Carburetor Kit (Incl. k,q,r,s,t,u,v,w,y & aa)	u	n/a	Needle Valve Spring
a	710-05468	Mixture Screw	v	n/a	Float
b	736-04638	Washer 3	w	951-11589	Fuel Bowl Gasket
c	951-12515	Control Lever,Choke	x	n/a	Fuel Bowl
d	n/a	Choke Shaft	y	951-11348	Fuel Bowl Gasket
e	n/a	Choke Plate	z	710-04945	Fuel Bowl Mounting Bolt
f	n/a	Throttle Shaft	aa	951-11349	Fuel Drain Plug Gasket
			ab	710-04938	Fuel Drain Plug



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
