


# REPLACEMENT PARTS - MODEL RM2BP 2-CYCLE GAS BACKPACK BLOWER

PPN 41AR2BEG983

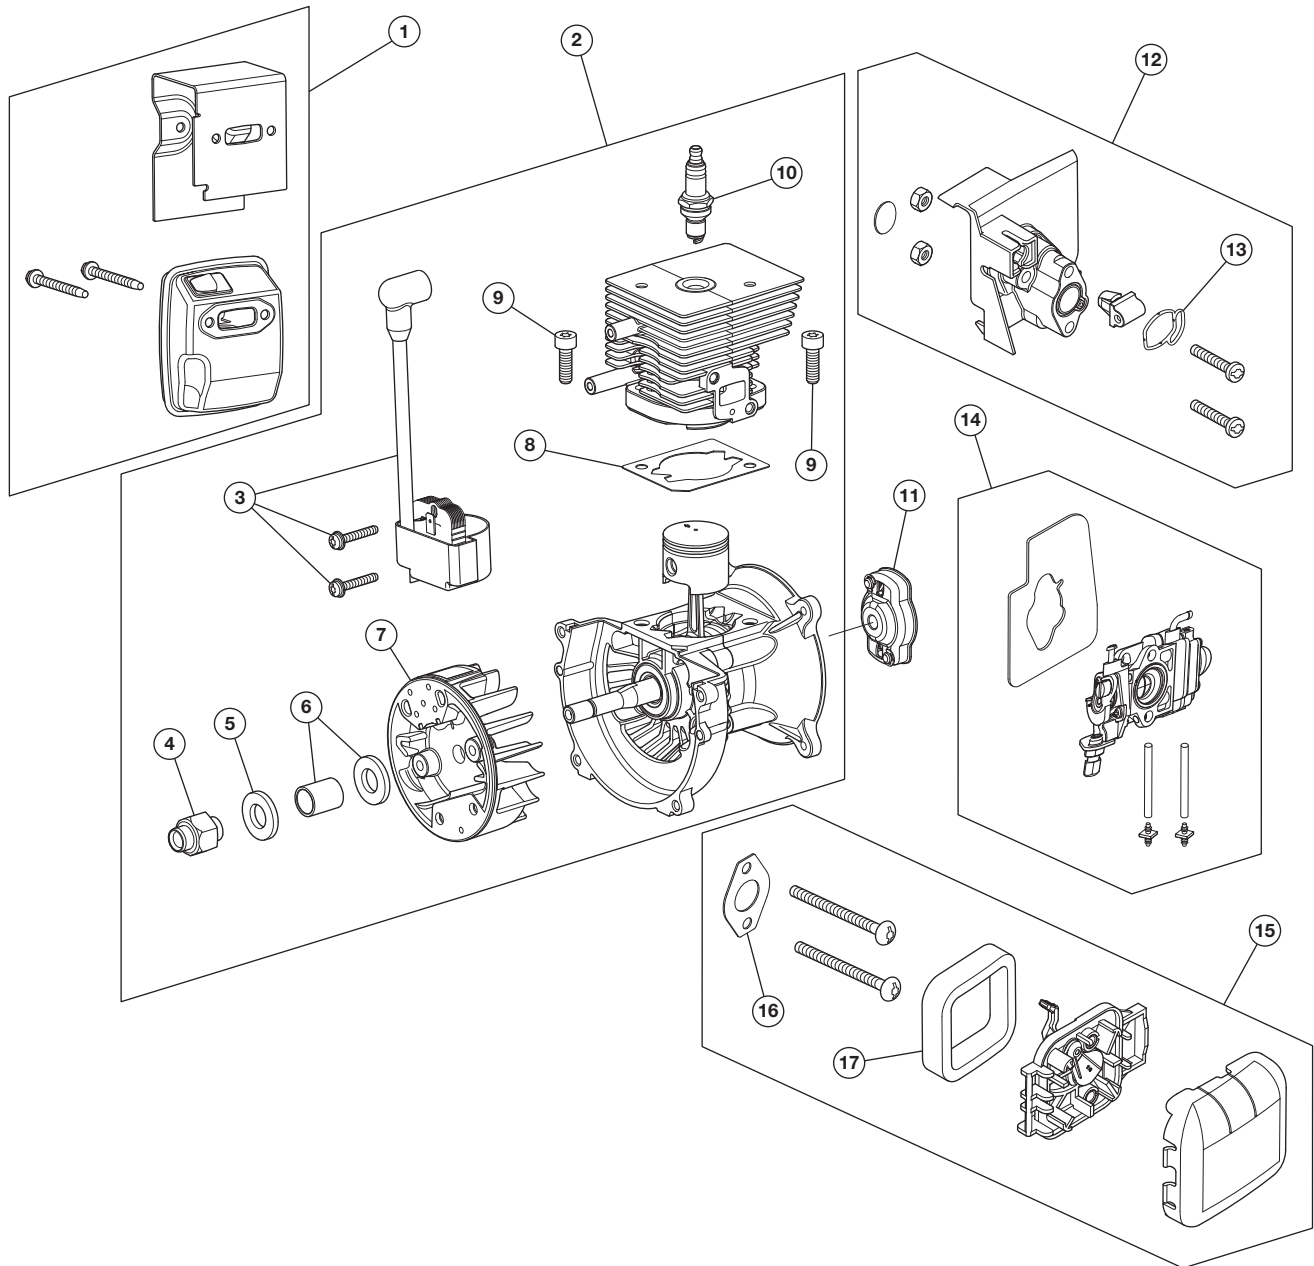


Item	Part No.	Description
1	753-06418	Muffler Assembly
2	753-06441	Shortblock Assembly (includes 3 - 10)
3	753-06443	Module Assembly
4	753-05705	Flywheel Adaptor
5	753-05706	Washer
6	753-05707	Bushing
7	753-06246	Flywheel Assembly
8	753-06827	Cylinder Gasket
9	753-05703	Screw

Item	Part No.	Description
10	753-06193	Spark Plug
11	753-06091	Pawl Assembly
12	753-06189	Insulator Assembly (includes 13)
13	753-06184	Insulator O-Ring
14	753-06442	Carburetor Assembly
15	791-181752	Air Cleaner Assembly (includes 16 and 17)
16	753-06253	Carburetor Gasket
17	791-181757	Air Filter

# REPLACEMENT PARTS - MODEL RM2BP 2-CYCLE GAS BACKPACK BLOWER

PPN 41AR2BEG983

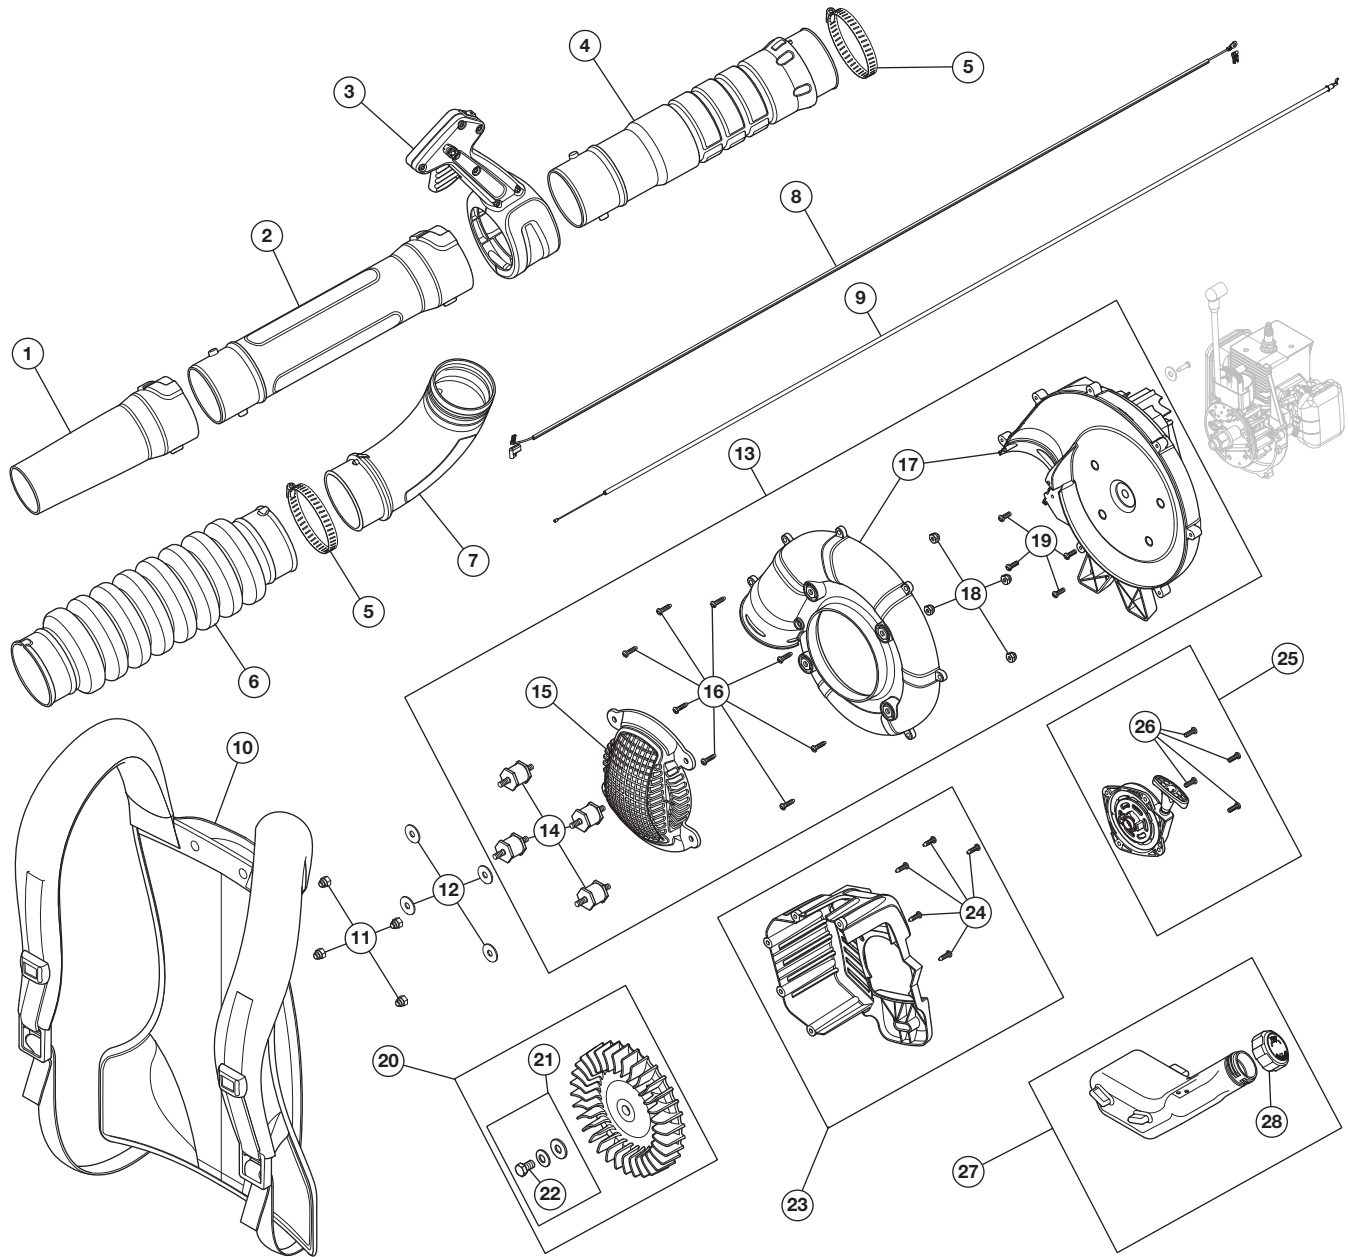

Item	Part No.	Description
1	753-06000	Nozzle
2	753-05971	Lower Blower Tube
3	753-05975	Throttle Grip Assembly
4	753-05991	Upper Blower Tube
5	753-05640	Clamp
6	753-05641	Flex Tube
7	753-05990	Elbow
8	753-06994	Lead Wire
9	753-06434	Throttle Cable
10	753-05645	Harness
11	753-05647	Nut
12	791-182678	Washer
13	753-06594	Impeller Housing Assembly (includes 14 - 19)
14	753-05648	Insulator Mount

Item	Part No.	Description
15	753-08276	Intake Cover
16	791-181345	Screw
17	753-08275	Impeller Housing
18	712-0324	Nut
19	791-181862	Screw
20	753-05651	Impeller (includes 21 and 22)
21	753-04482	Impeller Hardware (includes 22)
22	791-182414	Bolt
23	753-06455	Housing Assembly (includes 24)
24	791-181345	Screw
25	753-06596	Starter Assembly (includes 26)
26	791-181862	Screw
27	753-05654	Fuel Tank Assembly (includes 28)
28	791-182529	Fuel Cap