


REPLACEMENT PARTS - MODELS RM4214, RM4216, RM4218, RM4218C AND RM4218N 42CC CHAIN SAWS


PPNS 41AY425S983, 41CY425S983, 41AY427S983, 41AY429S983, 41CY429S983, 41AY429C983 AND 41AY42NC983

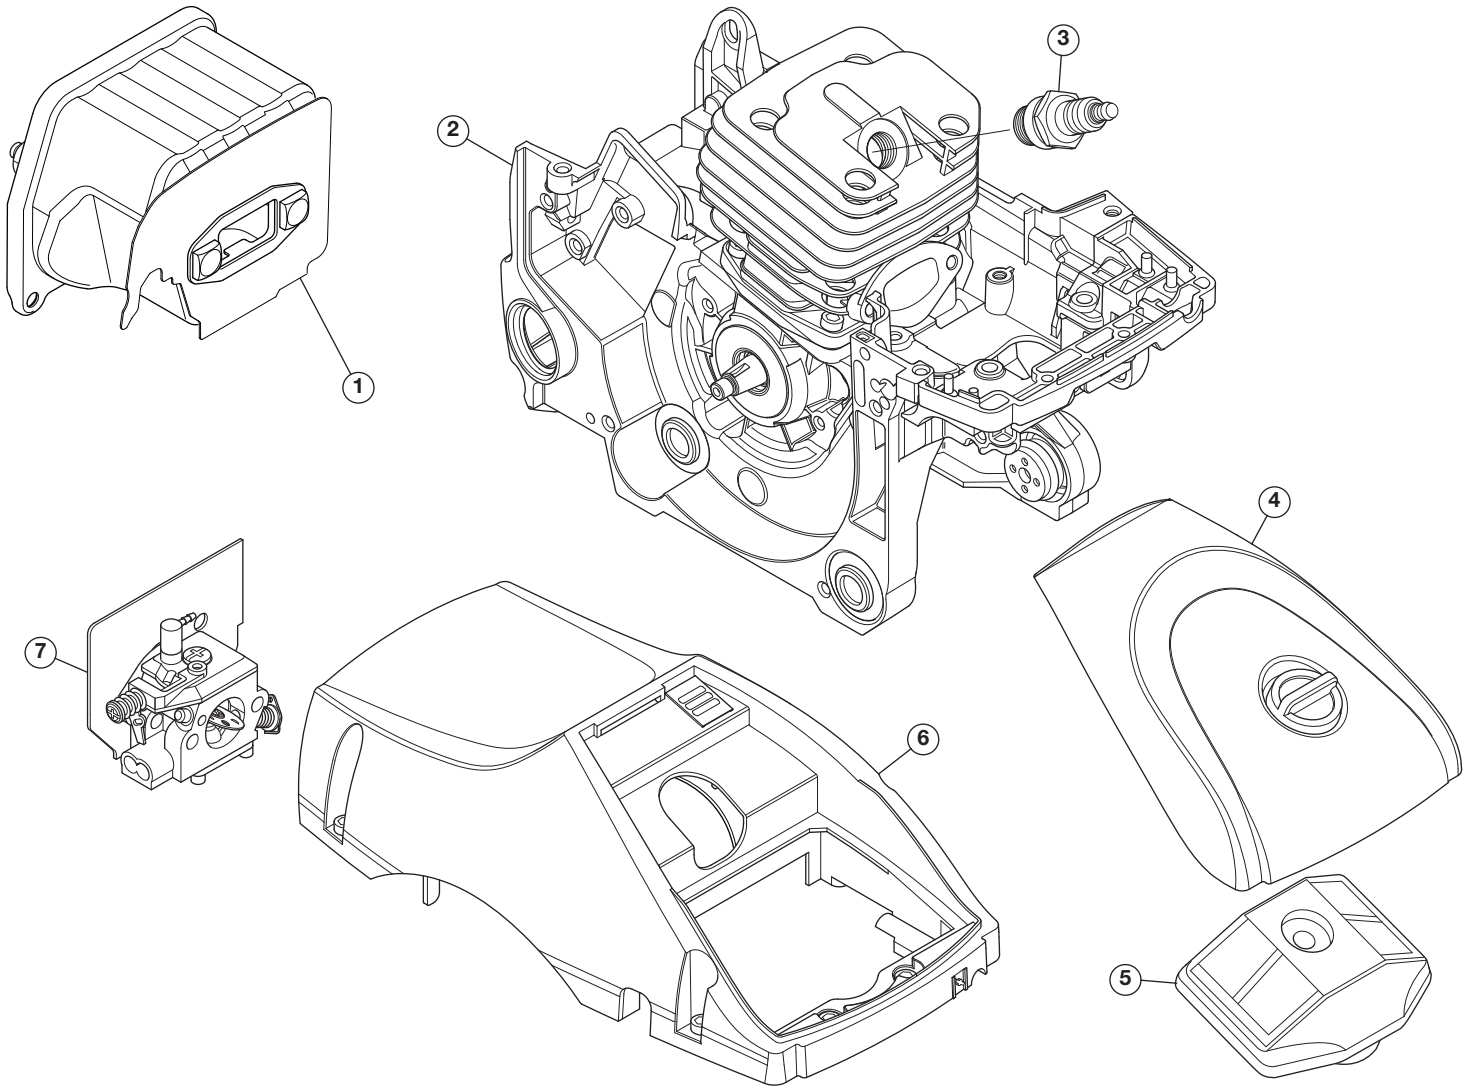

Item	Part No.	Description	Item	Part No.	Description
1	753-08106	Muffler Assembly	5	753-08134	Air Filter
2	753-08331	42cc Short Block Assembly	6	753-08135	Cylinder Cover Assembly (with Plate and Screws (5))
3	753-08107	Spark Plug	7	753-08137	Carburetor Assembly
4	753-08129	Air Filter Cover Assembly			

REPLACEMENT PARTS - MODELS RM4214, RM4216, RM4218, RM4218C AND RM4218N 42CC CHAIN SAWS

PPNS 41AY425S983, 41CY425S983, 41AY427S983, 41AY429S983, 41CY429S983, 41AY429C983 AND 41AY42NC983

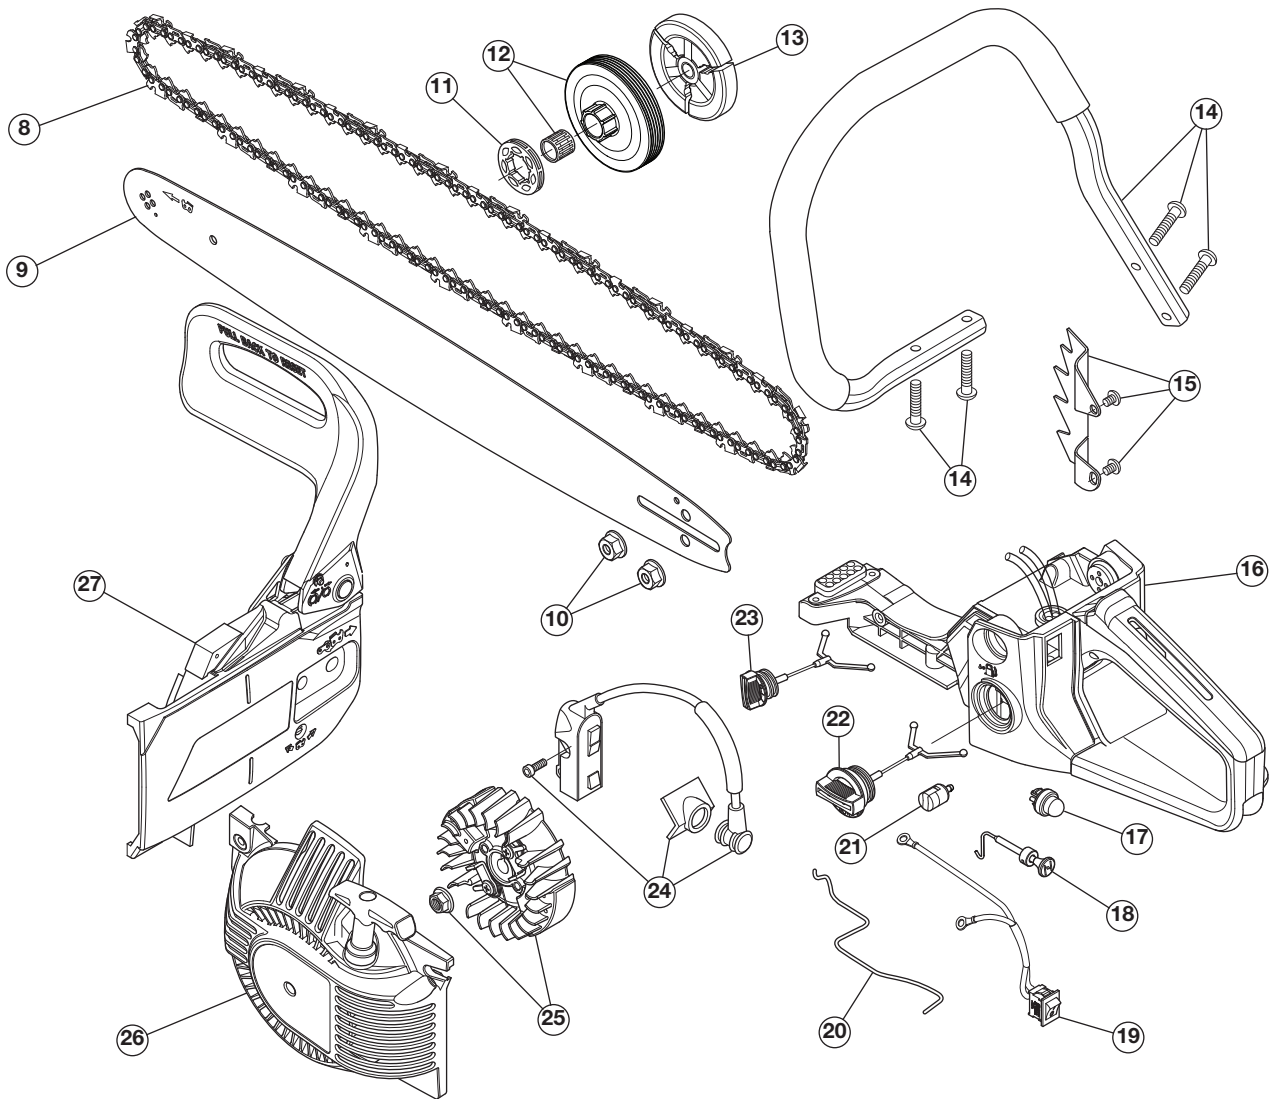

Item	Part No.	Description	Item	Part No.	Description
8	753-08247	Saw Chain 14" (for RM4214)	18	753-08221	Choke Lever Assembly
	753-08244	Saw Chain 16" (for RM4216)	19	753-08223	Stop Switch Assembly
	753-08104	Saw Chain 18" (for RM4218, RM4218C and RM4218N)	20	753-08132	Throttle Rod
9	753-08245	Guide Bar 14" (for RM4214)	21	753-08123	Fuel Filter
	753-08243	Guide Bar 16" (for RM4216)	22	753-08133	Fuel Cap Assembly
	753-08103	Guide Bar 18" (for RM4218, RM4218C and RM4218N)	23	753-08222	Oil Cap Assembly
10	753-08105	Guide Bar Nuts (2)	24	753-08138	Ignition Module Assembly (with Screws (2))
11	753-10164	Sprocket	25	753-08131	Flywheel Assembly
12	753-08220	Clutch Drum Assembly	26	753-08310	Starter Housing Assembly
13	753-08145	Clutch Assembly	27	753-08143	Chainsaw Brake Assembly
14	753-08130	Chainsaw Handle Assembly (with Screws (4))			
15	753-08128	Spike Plate (with Screws (2))			
16	753-08142	Fuel Tank Assembly			
17	753-08127	Primer Bulb			