


# REPLACEMENT PARTS - MODELS RM4618 AND RM4620

## 46CC CHAIN SAWS

PPNs 41AY469S983, 41AY462S983, 41BY462S983 and 41DY462S983

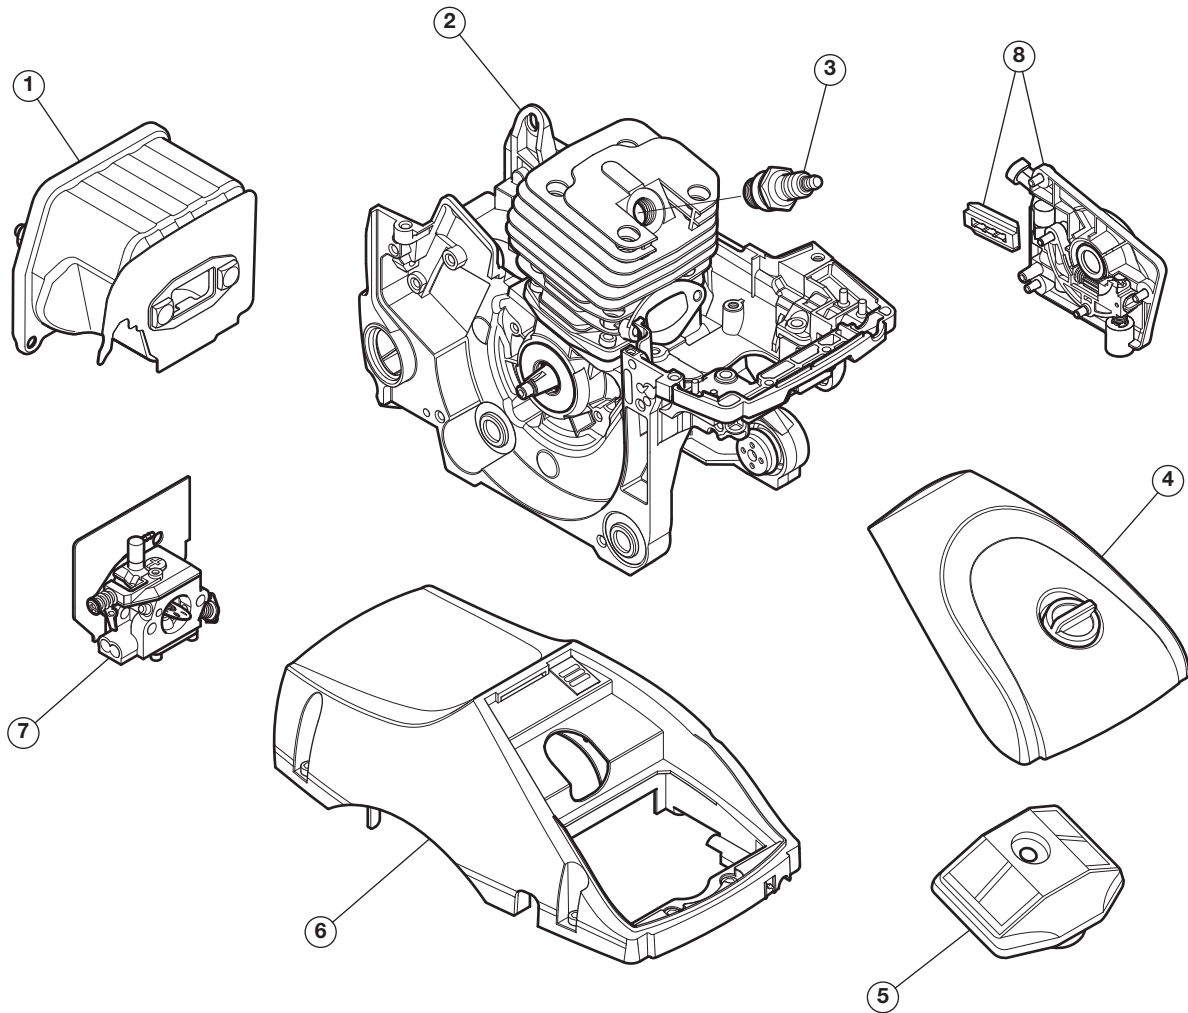


Item	Part No.	Description
1	753-08106	Muffler Assembly
2	753-08217	46cc Short Block Assembly
3	753-08107	Spark Plug
4	753-08129	Air Filter Cover Assembly
5	753-08134	Air Filter

Item	Part No.	Description
6	753-08135	Cylinder Cover Assembly (with Plate and Screws (x5))
7	753-08137	Carburetor Assembly
8	753-11219	Oil Pump Assembly

# REPLACEMENT PARTS - MODELS RM4618 AND RM4620

## 46CC CHAIN SAWS

PPNs 41AY469S983, 41AY462S983, 41BY462S983 and 41DY462S983

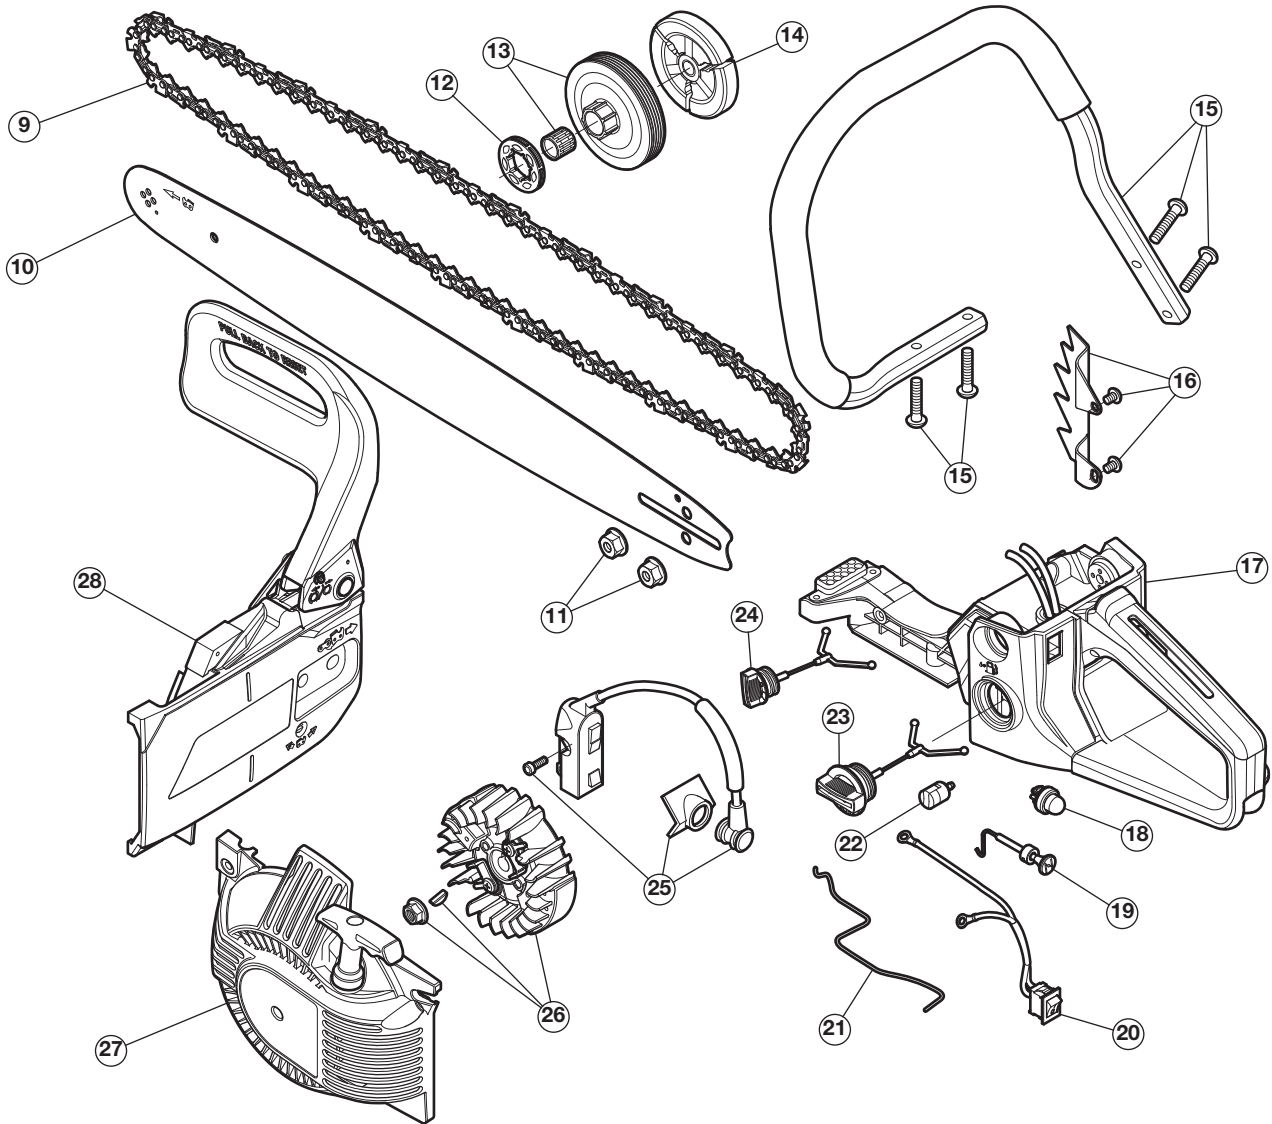

Item	Part No.	Description	Item	Part No.	Description
9	753-08242	Saw Chain 18" (for RM4618)	19	753-08221	Choke Lever Assembly
	753-08102	Saw Chain 20" (for RM4620)	20	753-08223	Stop Switch Assembly
10	753-08241	Guide Bar 18" (for RM4618)	21	753-08132	Throttle Rod
	753-08101	Guide Bar 20" (for RM4620)	22	753-08123	Fuel Filter
11	753-08105	Guide Bar Nuts (x2)	23	753-08133	Fuel Cap Assembly
12	753-08219	Sprocket	24	753-08222	Oil Cap Assembly
13	753-08220	Clutch Drum Assembly	25	753-08138	Ignition Module Assembly
14	753-08145	Clutch Assembly	26	753-08131	Flywheel Assembly
15	753-08130	Chainsaw Handle Assembly (with Screws (x4))	27	753-08310	Starter Housing Assembly
16	753-08128	Spike Plate (with Screws (x2))	28	753-08143	Chainsaw Brake Assembly
17	753-08142	Fuel Tank Assembly			
18	753-08127	Primer Bulb			