


REPLACEMENT PARTS - MODEL TB27BV EC

ELECTRIC START CAPABLE 2-CYCLE BLOWER/VACUUM


PPN 41AS27VA766

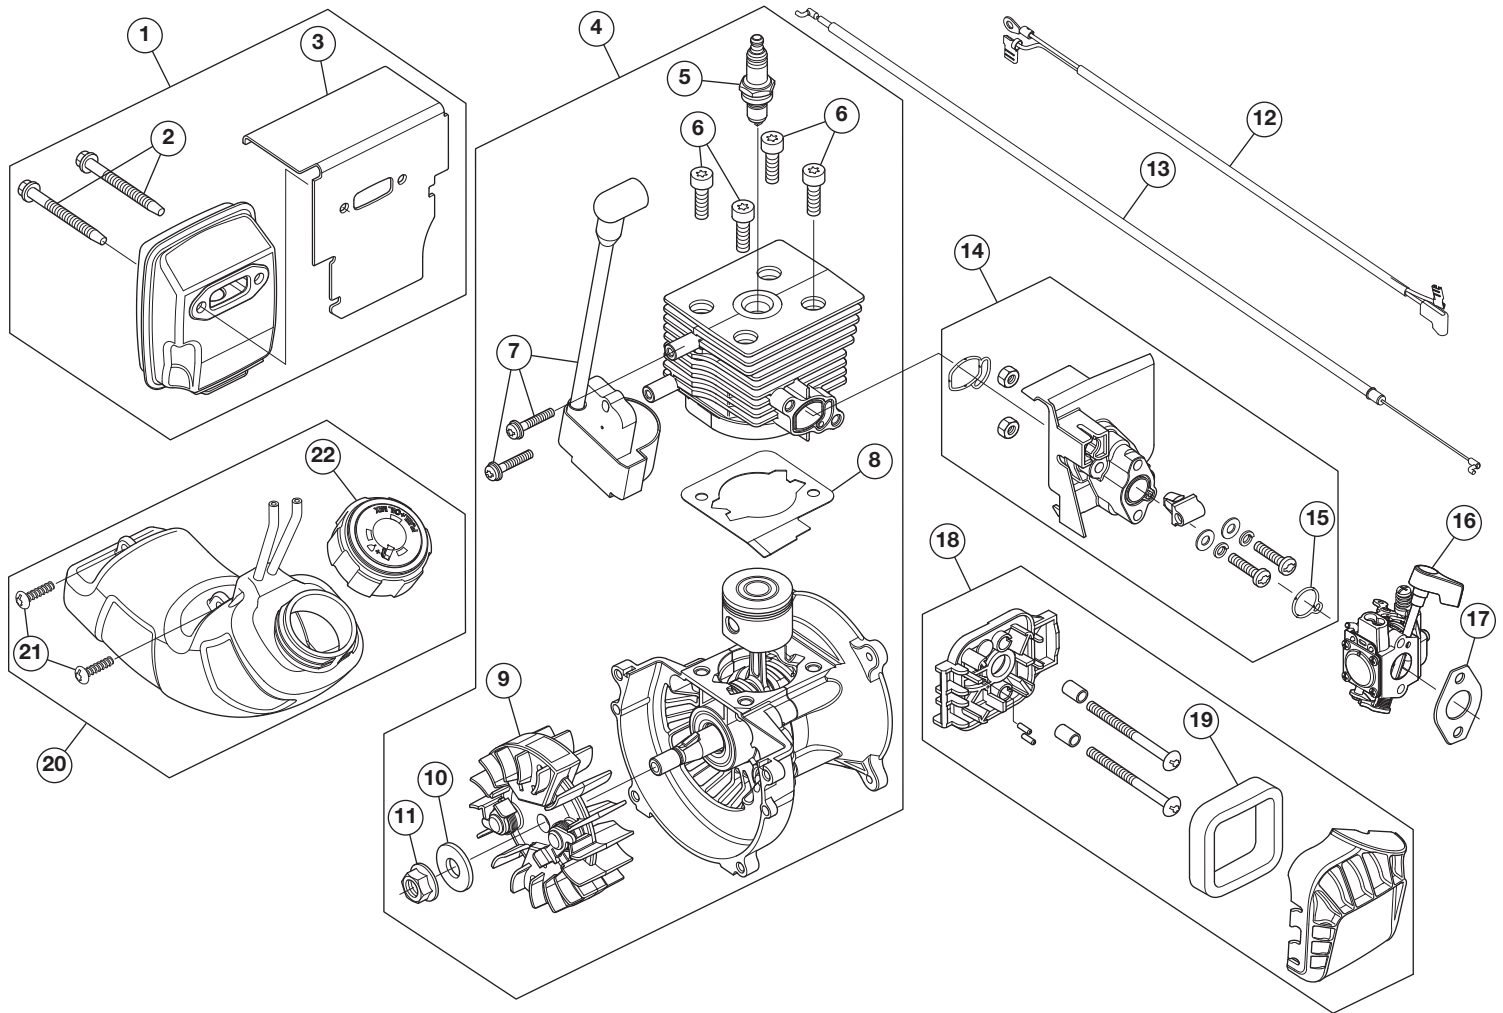

Item	Part No.	Description	Item	Part No.	Description
1	753-06027	Muffler Assembly (includes 2 & 3)	12	753-05949	Lead Wire
2	753-06294	Muffler Screws	13	753-06690	Throttle Cable
3	753-05946	Muffler Gasket	14	753-06189	Insulator Assembly (includes 15)
4	753-09004	Shortblock Assembly (includes 5 - 11)	15	753-06185	Insulator O-Ring
5	753-06847	Spark Plug	16	753-08517	Carburetor Assembly (includes 17)
6	753-05703	Screw	17	753-06253	Carburetor Gasket
7	753-08516	Module Assembly	18	753-08507	Aircleaner Assembly (includes 19)
8	753-06827	Cylinder Gasket	19	9653	Air Filter
9	753-06175	Flywheel Assembly	20	753-06720	Fuel Tank Assembly (includes 21 & 22)
10	736-04107	Washer	21	710-04194	Screw
11	753-05687	Nut	22	791-182529	Fuel Cap

REPLACEMENT PARTS - MODEL TB27BV EC ELECTRIC START CAPABLE 2-CYCLE BLOWER/VACUUM

PPN 41AS27VA766

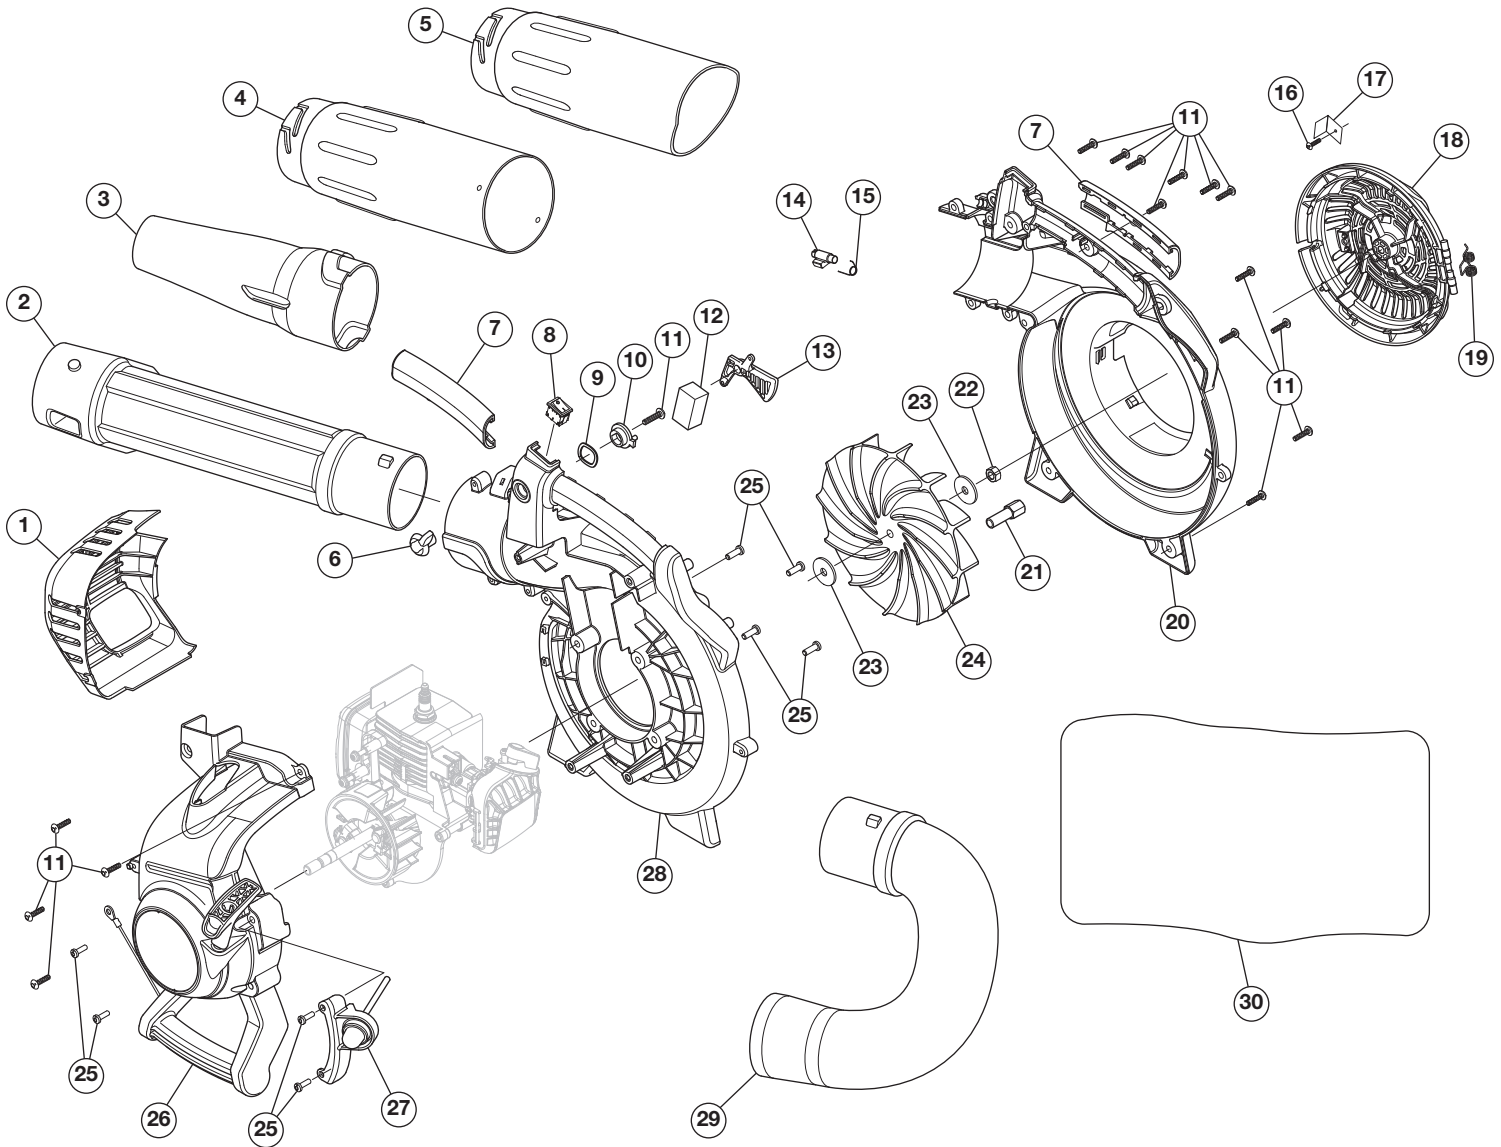

Item	Part No.	Description
1	753-06694	Muffler Cover Assembly (includes 11)
2	753-05936	Upper Tube
3	753-06000	Nozzle
4	753-06660	Upper Vac Tube
5	753-06661	Lower Vac Tube
6	753-05932	Outer Trigger Lock
7	753-05919	Handle Grips
8	791-182405	Switch
9	753-05925	Wavey Washer
10	753-05924	Inner Trigger Lock
11	753-04194	Screw
12	753-05254	Air Filter
13	753-05930	Throttle Trigger
14	753-05926	Latch Tube
15	753-05939	Latch Spring

Item	Part No.	Description
16	1755	Screw
17	753-06696	Door Lock
18	753-06716	Intake Cover
19	753-05918	Spring
20	753-06679	Impeller Housing
21	753-06700	Adapter
22	753-06701	Nut
23	753-05928	Washer
24	753-06807	Impeller
25	791-181862	Screw
26	753-08679	Engine Cover Assembly (includes 11 & 25)
27	753-08521	Remote Primer Bracket
28	753-06693	Impeller Housing
29	753-06658	Elbow
30	753-06659	Bag