


# REPLACEMENT PARTS - MODEL BL160

## 2-CYCLE TRIMMER

PPN 41AD180G965

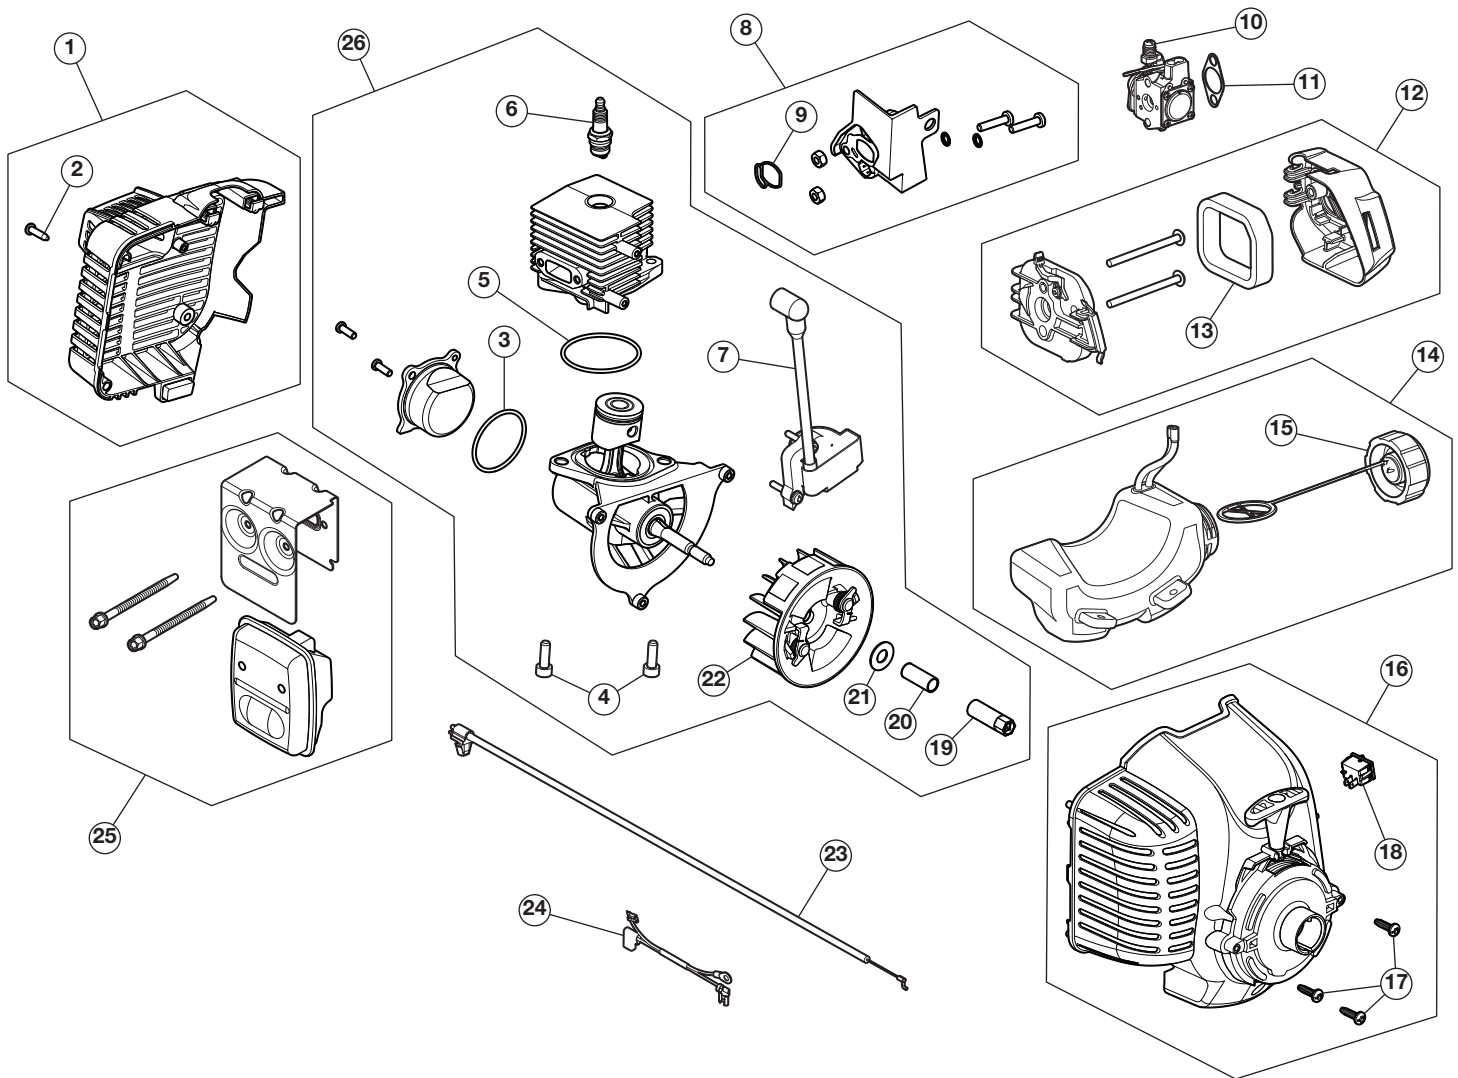

Item	Part No.	Description	Item	Part No.	Description
1	753-09084	Rear Cover Assembly (includes 2)	16	753-09325	Starter Housing (includes 17 & 18)
2	791-181345	Cover Screw	17	791-182195	Housing Screw
3	753-09086	O-Ring	18	791-182405	Switch Assembly
4	710-06241	Crankcase Bolt	19	711-07481-1	Shaft Adapter
5	753-09085	Crankcase O-Ring	20	753-09087	Spacer
6	753-06847	Spark Plug	21	736-04481	Washer
7	753-09104	Module Assembly	22	753-09125	Flywheel Assembly
8	753-09105	Insulator Assembly (includes 9)	23	746-05451	Throttle Cable
9	721-04973	Insulator O-Ring	24	794-00127A	Lead Wires
10	753-06423	Carburetor	25	753-09144	Muffler Assembly
11	753-06253	Air Cleaner Gasket	26	753-09145	Short Block Assembly (includes Crankcase, Cylinder, Piston, 3 - 7 & 19 - 22)
12	753-09324	Air Cleaner Cover Assembly (includes 13)			
13	753-06417	Air Cleaner Filter			
14	753-08751	Fuel Tank Assembly (includes 15)			
15	791-182612	Fuel Tank Cap			

# REPLACEMENT PARTS - MODEL BL160

## 2-CYCLE TRIMMER

PPN 41AD180G965

Item	Part No.	Description
27	753-09146	Throttle Housing Assembly (includes 28)
28	731-13693	Throttle Trigger
29	753-09147	Upper Shaft Housing Assembly (includes 30)
30	753-06216	Upper Flexible Drive Shaft
31	710-06562	Screw
32	753-06198	D-Handle (includes 33)
33	753-06199	D-Handle Hardware
34	753-08686	Lower Shaft Housing Assembly
35	753-08360	Shield Assembly (includes 36 & 37)
36	753-04282	Shield Mounting Hardware
37	753-08355	Blade Assembly
38	753-06571	Gearbox Assembly (includes 39 - 44)
39	753-05698	Anti-Rotation Screw
40	753-04284	Outer Spool Assembly (includes 41)
41	791-610660	Retainer
42	791-610317B	Spring
43	753-1155	Inner Reel
44	791-153066B	Bump Head Knob Assembly

\* Items Not Shown

\* 753-1156 Reel & Line Assembly

