


REPLACEMENT PARTS - MODEL TB27 BC 2-CYCLE BRUSHCUTTER / TRIMMER

PPN 41BD27BA766

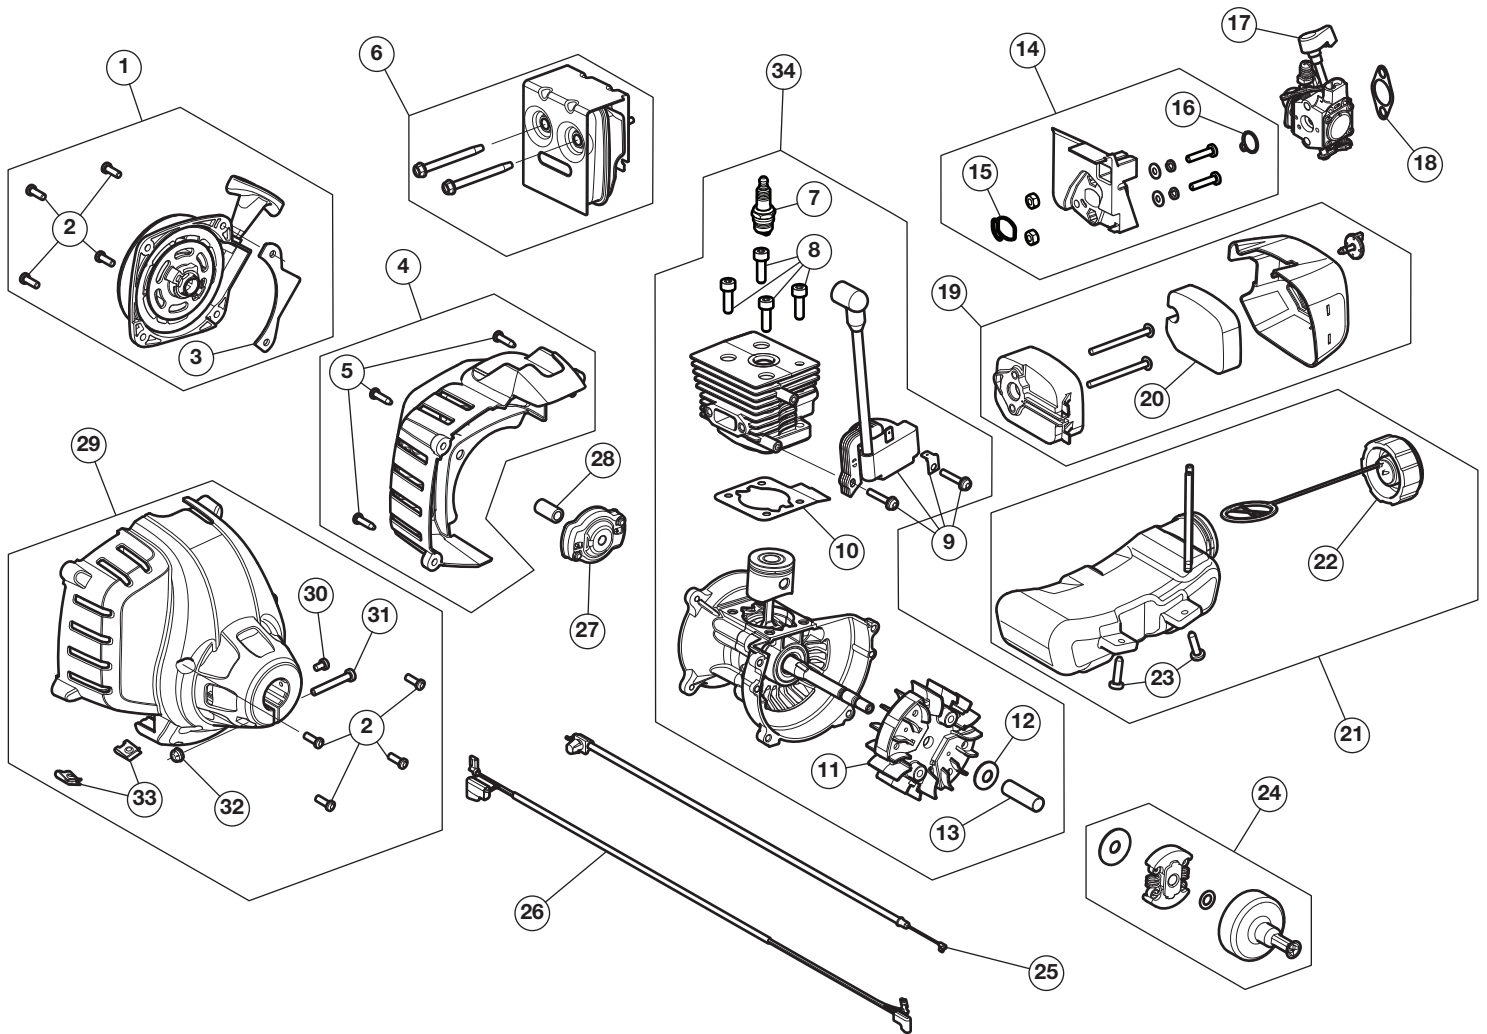

Item	Part No.	Description	Item	Part No.	Description
1	753-06829	Starter Assembly (includes 2 & 3)	18	753-06253	Carburetor Gasket
2	791-181862	Starter Screw	19	753-06953	Air Cleaner Assembly (includes 20)
3	753-06244	Starter Assembly Guard (includes 2)	20	753-06954	Air Cleaner Filter
4	753-06245	Rear Engine Cover (includes 5)	21	753-06250	Fuel Tank Assembly (includes 22 & 23)
5	791-181345	Cover Screw	22	753-06857	Fuel Tank Cap
6	753-08745	Muffler Assembly	23	791-181930	Fuel Tank Screw
7	753-06847	Spark Plug	24	753-05860	Clutch Assembly
8	710-04715	Cylinder Bolt	25	946-04824	Throttle Cable
9	753-06892	Module Assembly	26	753-05877	Lead Wires
10	753-06827	Cylinder Gasket	27	753-06091	Pawl Assembly
11	753-06246	Flywheel Assembly	28	753-06104	Adapter
12	753-06247	Washer	29	753-06249	Clutch Cover Assem. (incl. 2, 30 - 33)
13	753-06248	Spacer	30	791-182519	Anti-rotation Screw
14	753-06189	Insulator Assembly (includes 15 & 16)	31	753-04003	Clamp Screw
15	753-06184	Insulator O-Ring	32	712-0161	Clamp Nut
16	753-06185	Carburetor O-Ring	33	791-182366	U-shaped Nut
17	753-08984	Carburetor	34	753-08582	Short Block Assembly (includes 7 - 13)

REPLACEMENT PARTS - MODEL TB27 BC 2-CYCLE BRUSHCUTTER / TRIMMER

PPN 41BD27BA766

Item	Part No.	Description
35	753-08344	Throttle Housing Assem. (incl. 36 - 39)
36	731-08433C-10	Throttle Trigger Lock-Out
37	791-182405	Switch Assembly
38	753-05007	Throttle Trigger Spring
39	731-04970B-10	Throttle Trigger
40	791-181099	J-Handle Assembly
41	791-683295	J-Handle Bracket Assem. (incl. 42 - 47)
42	791-181811	Screw
43	791-181812	Upper Handle Clamp
44	791-181813	Middle Handle Clamp
45	791-181814	Lower Handle Clamp
46	791-181815	Nut
47	791-182519	Anti-Rotation Screw
48	753-06880	Upper Drive Shaft Housing Assembly
49	791-610327	Harness Clip
50	731-08926	Hanger
51	791-160226	Lower Drive Shaft Housing Assembly
52	753-05267	Lower Flexible Drive Shaft
53	753-1190	Split Boom Coupler (includes 54)
54	791-182057	Screw
55	791-182200	Shield Mount Screw Assembly
56	753-07006	2 Piece Gearbox Assem. (incl. 57 - 60)
57	791-182195	Gearbox Mounting Hardware
58	791-182519	Anti-Rotation Screw
59	791-182196	Blade Driver
60	753-04348	Palnut
61	791-147492	Blade Shield / Shield Mount
62	753-1191	Shield Assembly (includes 63)
63	791-682061	Blade Assembly
64	791-683304	Shield Mounting Screw
65	791-612483	Spool Shaft
66	791-683301	Outer Spool Assembly (includes 67)
67	791-612026	Retainer
68	791-610636B	Spring
69	791-147495	Inner Reel
70	791-180814B	Bump Head Knob Assembly
71	791-145873B	4-Tooth Blade
72	791-147490	Retaining Washer
73	712-04105	Nut
74	841-035832S	Cutting Head Assem. (incl. 75)
75	753-08563	Bump Knob

Items Not Shown

*	791-180014B	Blade Retaining Kit (includes 72 and 73)
*	791-613226	Locking Rod Tool
*	791-682075B	Shoulder Harness

Optional Accessories

*	753-1224	Reel and Line Assembly
*	753-1161	Bump Head Assembly (includes 66 - 70)

