


# REPLACEMENT PARTS - MODEL BL160

## 2-CYCLE TRIMMER

PPN 41BD180G965

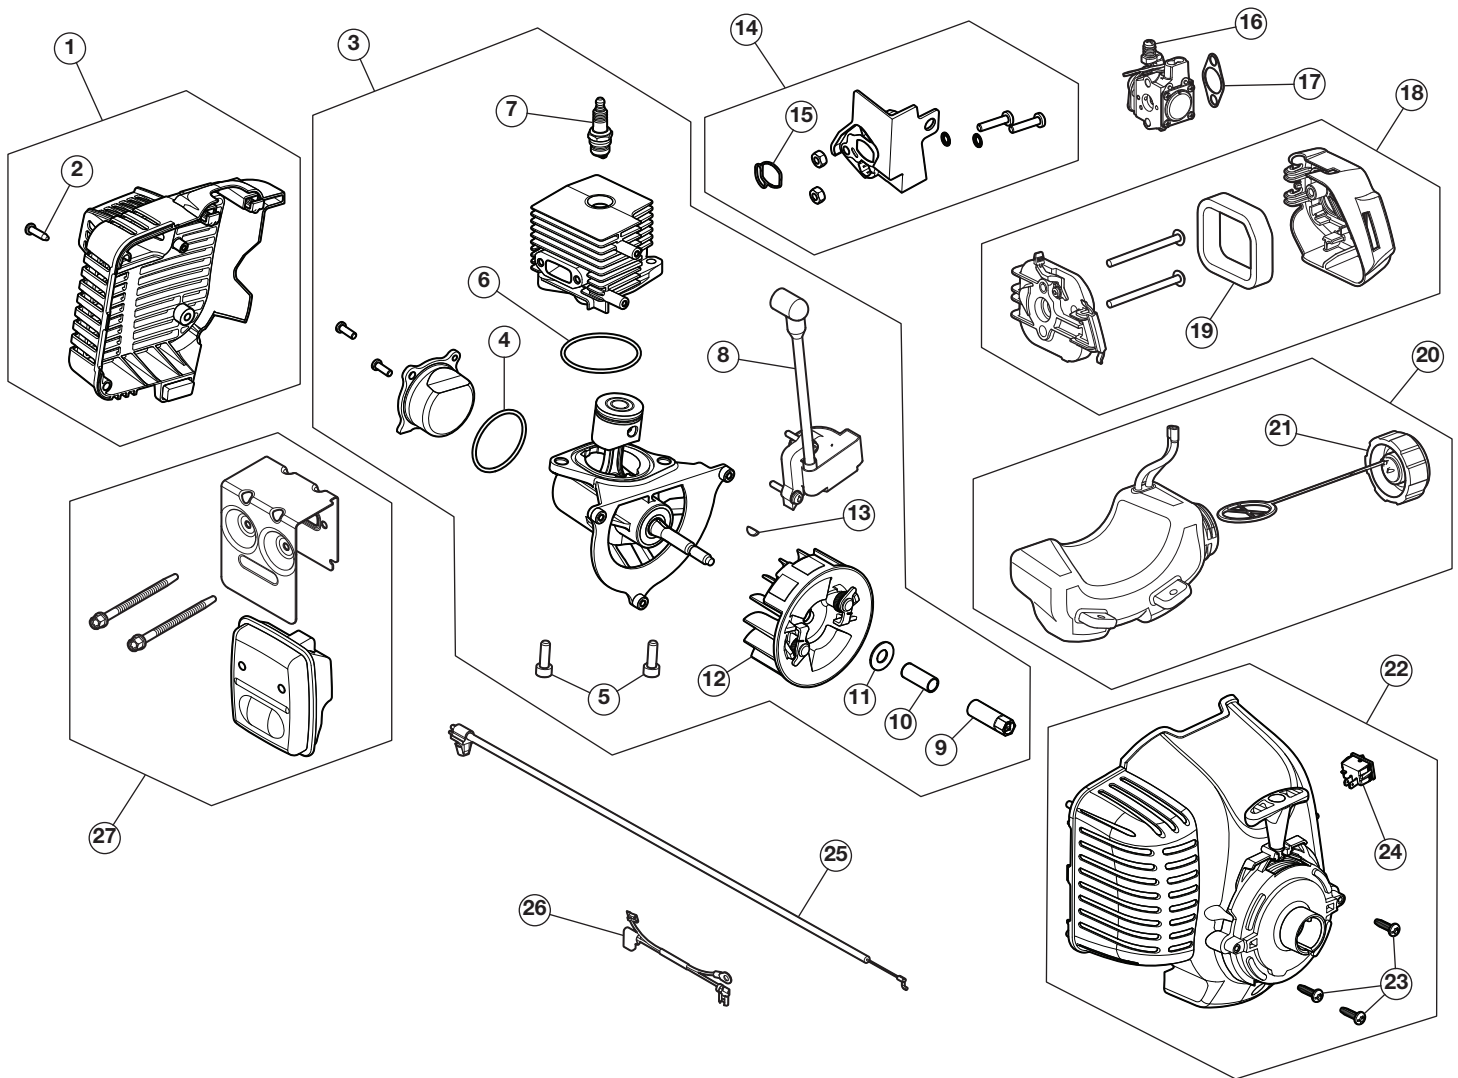

Item	Part No.	Description	Item	Part No.	Description
1	753-09084	Rear Cover Assembly (includes 2)	16	753-06423	Carburetor
2	791-181345	Cover Screw	17	753-06253	Air Cleaner Gasket
3	753-09145	Short Block Assembly (incl. Crankcase, Cylinder, Piston, 4 - 13)	18	753-09324	Air Cleaner Cover Assembly (includes 19)
4	753-09086	O-Ring	19	753-06417	Air Cleaner Filter
5	710-06241	Crankcase Bolt	20	753-08751	Fuel Tank Assembly (includes 21)
6	753-09085	Crankcase O-Ring	21	791-182612	Fuel Tank Cap
7	753-06847	Spark Plug	22	753-09325	Starter Housing (includes 23 & 24)
8	753-09104	Module Assembly	23	791-182195	Housing Screw
9	711-07481-1	Shaft Adapter	24	791-182405	Switch Assembly
10	753-09087	Spacer	25	746-05451	Throttle Cable
11	753-06247	Washer	26	794-00184	Lead Wires
12	753-09125	Flywheel Assembly	27	753-09144	Muffler Assembly
13	914-04016	Flywheel Key			
14	753-09105	Insulator Assembly (includes 15)			
15	721-04973	Insulator O-Ring			

# REPLACEMENT PARTS - MODEL BL160

## 2-CYCLE TRIMMER

PPN 41BD180G965

Item	Part No.	Description
28	753-09146	Throttle Housing Assembly (includes 29)
29	731-13693	Throttle Trigger
30	753-09147	Upper Shaft Housing Assembly (includes 31)
31	753-06216	Upper Flexible Drive Shaft
32	710-06562	Screw
33	753-06198	D-Handle (includes 34)
34	753-06199	D-Handle Hardware
35	753-08686	Lower Shaft Housing Assembly
36	753-08360	Shield Assembly (includes 37 & 38)
37	753-04282	Shield Mounting Hardware
38	753-08355	Blade Assembly
39	753-06571	Gearbox Assembly (includes 40 - 45)
40	753-05698	Anti-Rotation Screw
41	753-04284	Outer Spool Assembly (includes 42)
42	791-610660	Retainer
43	791-610317B	Spring
44	753-1155	Inner Reel
45	791-153066B	Bump Head Knob Assembly
*	Items Not Shown	
*	753-1156	Reel & Line Assembly

