


# REPLACEMENT PARTS - MODEL TB25SB

## 2-CYCLE TRIMMER

PPN 41AD25SB866

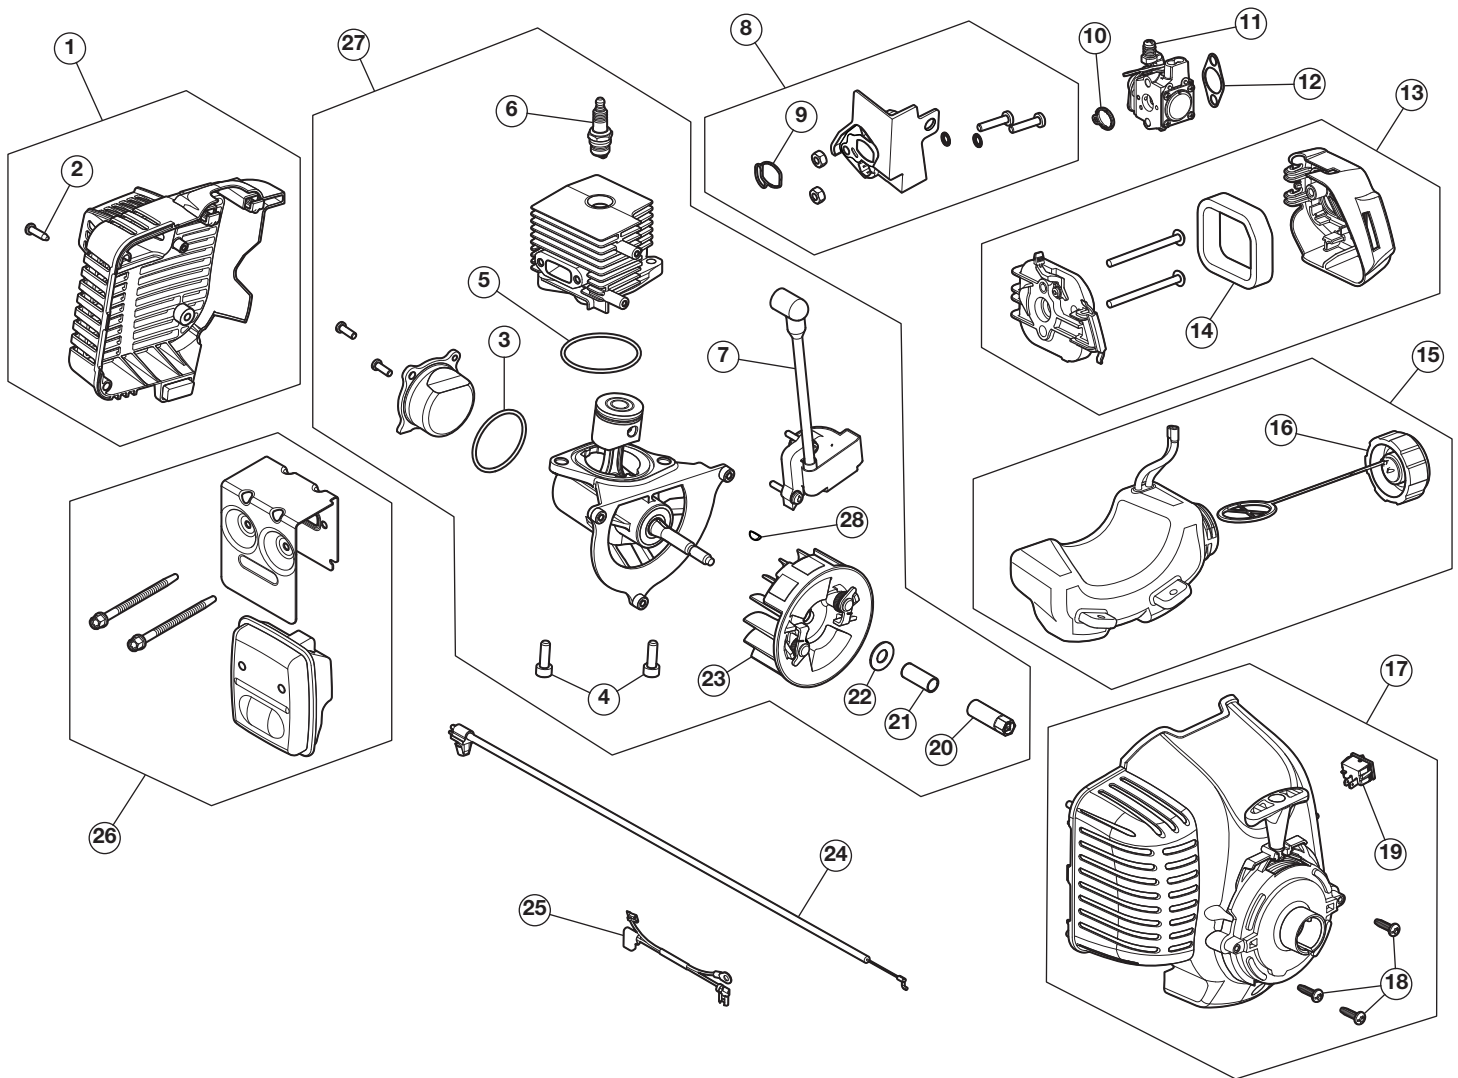

Item	Part No.	Description	Item	Part No.	Description
1	753-09084	Rear Cover Assembly (includes 2)	15	753-09345	Fuel Tank Assembly (includes 16)
2	710-04194	Cover Screw	16	753-06857	Fuel Tank Cap
3	753-09086	O-Ring	17	841-014023S	Starter Housing (includes 18 & 19)
4	710-06241	Crankcase Bolt	18	791-182195	Housing Screw
5	753-09085	Crankcase O-Ring	19	791-182405	Switch Assembly
6	794-00097	Spark Plug	20	711-07481-1	Shaft Adapter
7	841-012984S	Module Assembly (includes 25)	21	753-09087	Spacer
8	753-09105	Insulator Assembly (includes 9)	22	753-06247	Washer
9	721-04973	Insulator O-Ring	23	753-09125	Flywheel Assembly
10	721-04972	Carburetor Seal	24	746-05451	Throttle Cable
11	753-06423	Carburetor	25	794-00184	Lead Wires
12	753-06253	Air Cleaner Gasket	26	753-09144	Muffler Assembly
13	753-11116	Air Cleaner Cover Assembly (includes 14)	27	753-11115	Short Block Assembly (includes Crankcase, Cylinder, Piston, 3 - 9, 20 - 23 & 28)
14	753-06417	Air Cleaner Filter	28	914-04016	Flywheel Key

# REPLACEMENT PARTS - MODEL TB25SB 2-CYCLE TRIMMER

PPN 41AD25SB866

Item	Part No.	Description
29	753-09146	Throttle Housing Assembly (includes 30)
30	731-13693	Throttle Trigger
31	753-09147	Upper Shaft Housing Assembly (includes 32)
32	753-06216	Upper Flexible Drive Shaft
33	710-06562	Screw
34	753-06198	D-Handle (includes 35)
35	753-06199	D-Handle Hardware
36	753-08686	Lower Shaft Housing Assembly
37	841-032093S	Shield Assembly (includes 38 & 39)
38	753-04282	Shield Mounting Hardware
39	753-08355	Blade Assembly
40	753-06571	Gearbox Assembly (includes 41 - 46)
41	753-05698	Anti-Rotation Screw
42	753-04284	Outer Spool Assembly (includes 43)
43	791-610660	Retainer
44	791-610317B	Spring
45	753-1155	Inner Reel
46	791-153066B	Bump Head Knob Assembly

\* Items Not Shown  
\* 753-1156 Reel & Line Assembly

