


REPLACEMENT PARTS - MODEL TB51BP 2-CYCLE BACKPACK BLOWER

PPN 41AR51BP766

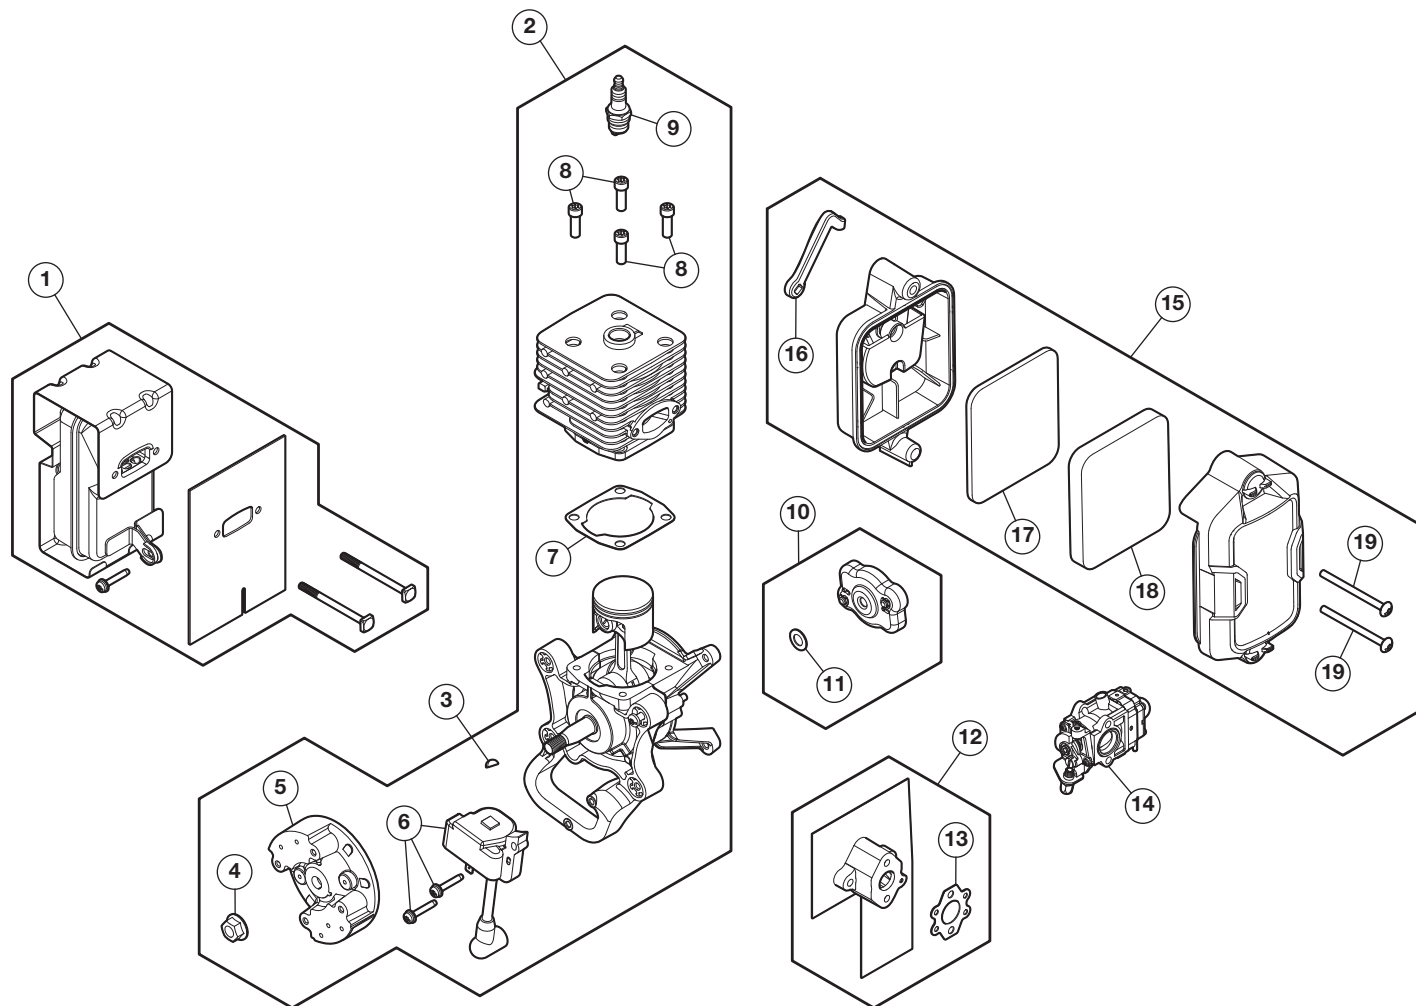


Item	Part No.	Description
1	753-11137	Muffler Assembly
2	753-11138	Shortblock Assembly (includes 3 - 9)
3	914-04016	Flywheel Key
4	712-04137	Nut
5	753-11139	Flywheel Assembly
6	753-11140	Module Assembly
7	753-11191	Cylinder Gasket
8	710-11494	Screw
9	794-00046	Spark Plug

Item	Part No.	Description
10	753-11141	Pawl Assembly (includes 11)
11	736-05103	Washer
12	753-11142	Insulator Assembly (includes 13)
13	753-11143	Carburetor Insulator
14	751-20089	Carburetor
15	753-11144	Air Cleaner Assembly (includes 16 - 19)
16	731-22551-10	Choke Lever
17	753-11153	Pre-Filter
18	753-11154	Air Filter
19	710-04517	Air Cleaner Screw

REPLACEMENT PARTS - MODEL TB51BP

2-CYCLE BACKPACK BLOWER

PPN 41AR51BP766

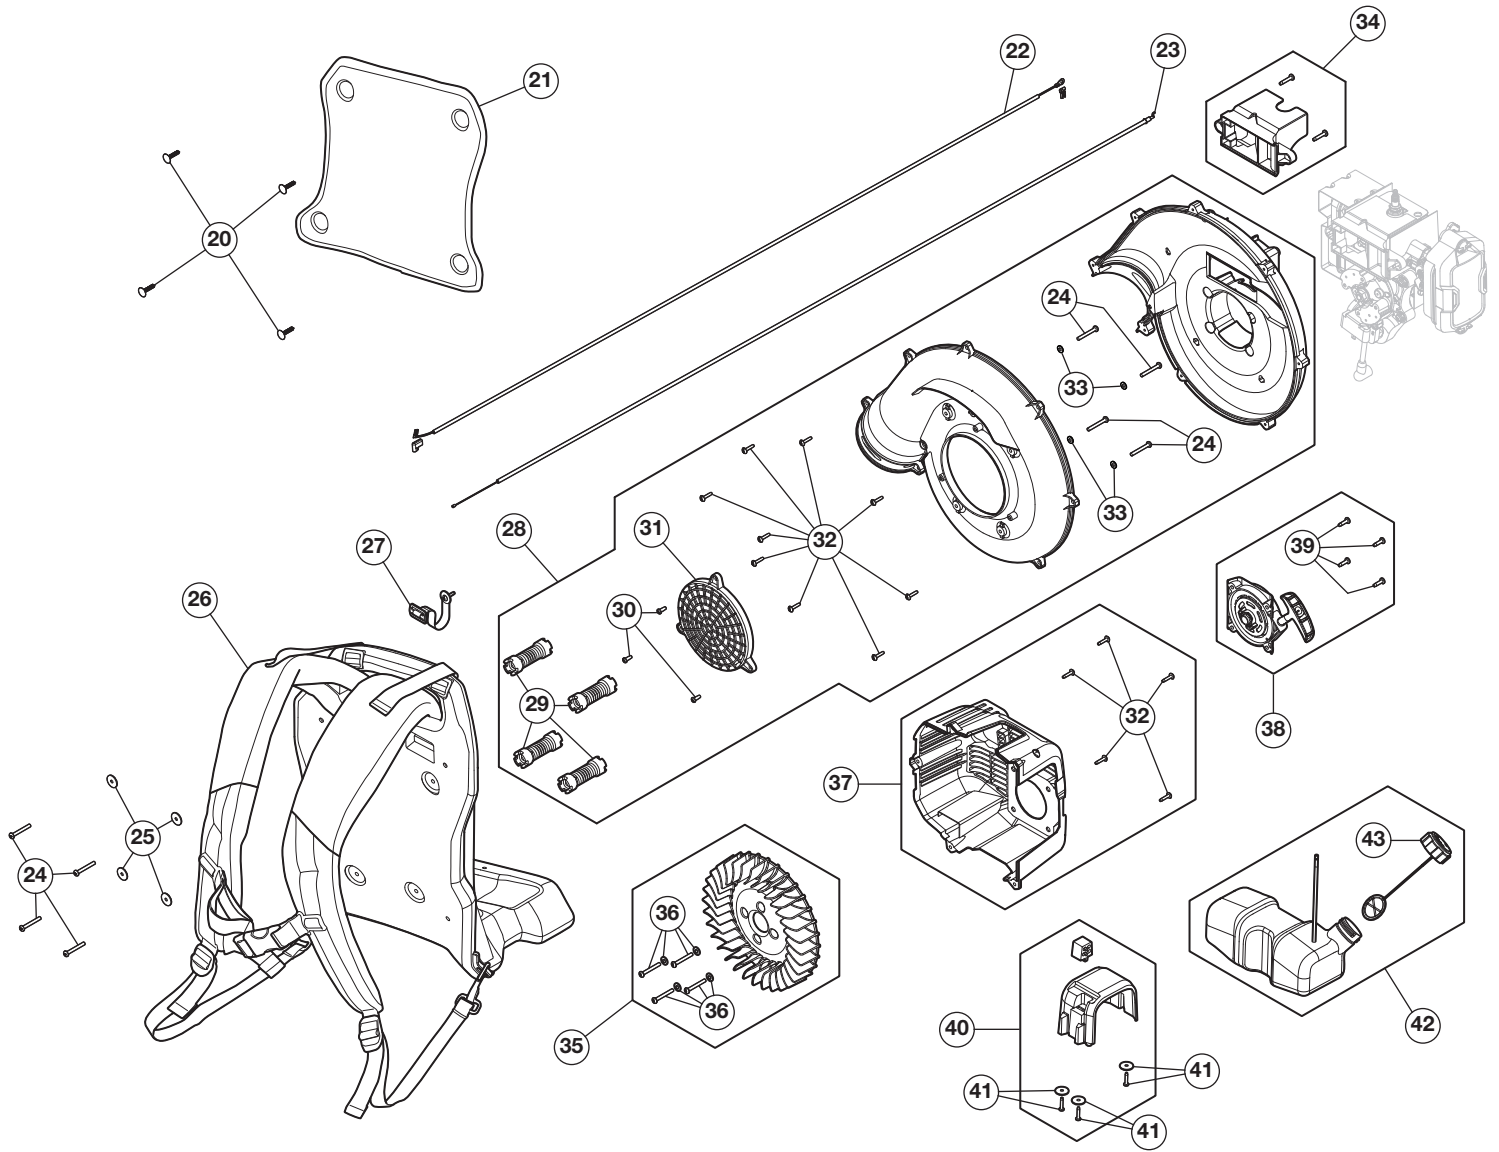


Item	Part No.	Description	Item	Part No.	Description
20	728-05208	Rivet	32	710-04194	Screw
21	727-05823	Back Pad	33	791-182409	Washer
22	753-11157	Lead Wire	34	753-11155	Engine Vent
23	753-06434	Throttle Cable	35	841-015063S	Impeller Assembly (includes 36)
24	9689A	Bolt	36	753-11161	Impeller Hardware
25	753-11195	Washer	37	753-11194	Engine Cover Assembly (includes 32)
26	731-25851A	Harness	38	753-11162	Starter Assembly (includes 39)
27	727-05494	Tether Strap	39	791-182195	Screw
28	753-11193	Impeller Housing Assem. (incl. 24, 29 - 33)	40	753-11164	Fuel Tank Bracket Assembly (includes 41)
29	753-11159	Insulator Mount	41	753-11163	Fuel Tank Bracket Hardware
30	1755	Screw	42	753-11165	Fuel Tank Assembly (includes 43)
31	753-11160	Intake Cover	43	753-06857	Fuel Cap

REPLACEMENT PARTS - MODEL TB51BP

2-CYCLE BACKPACK BLOWER

PPN 41AR51BP766

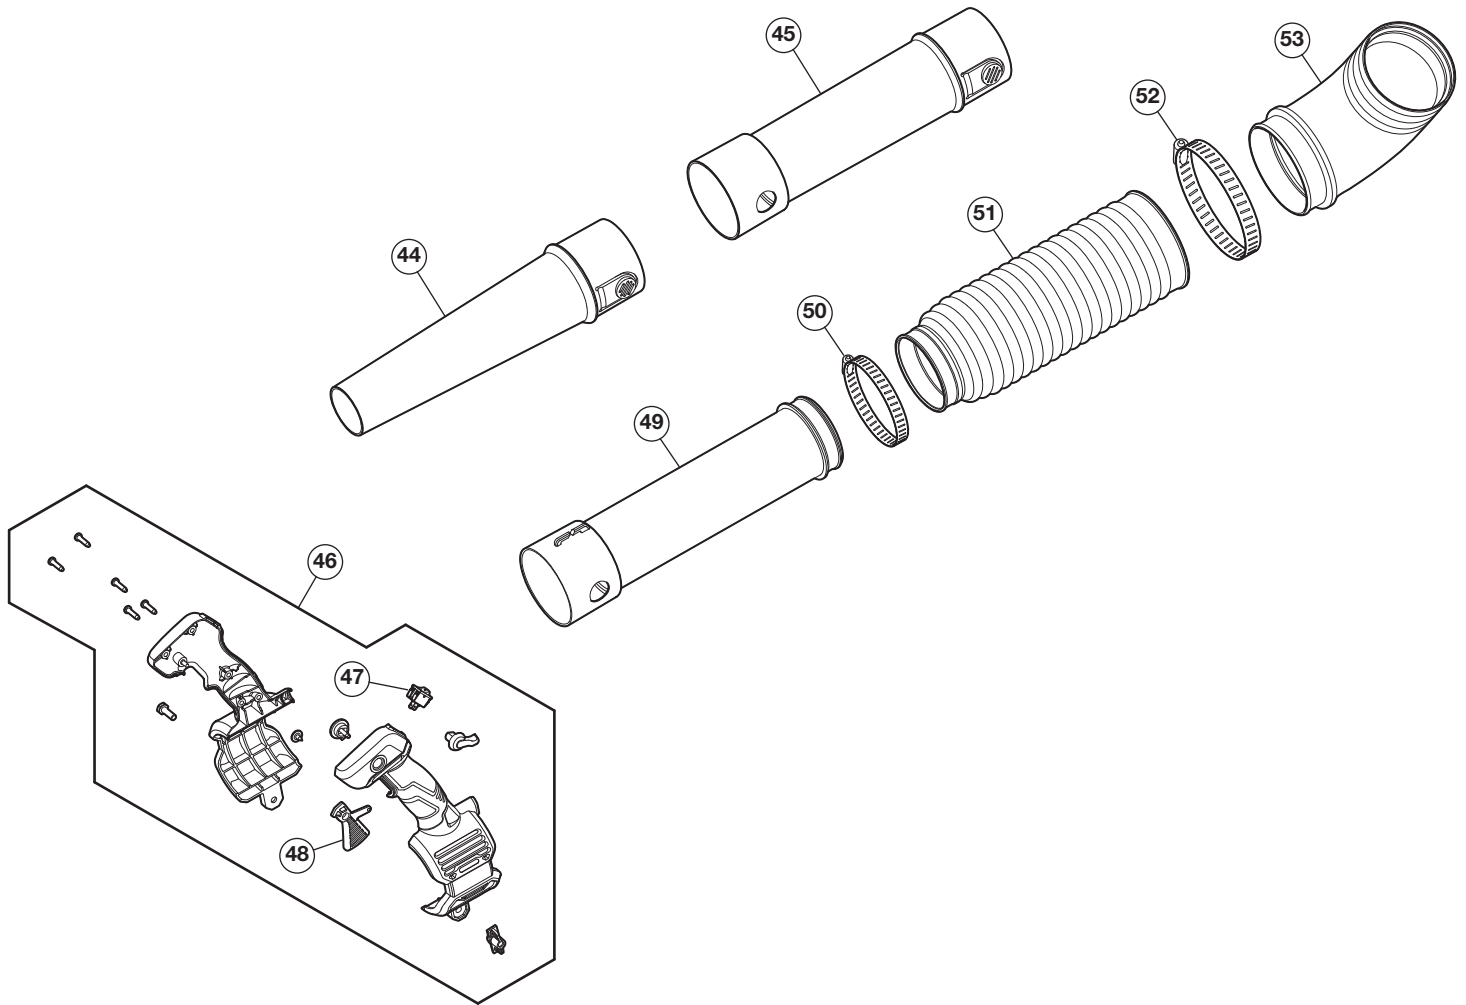

Item	Part No.	Description
44	731-22356	Nozzle
45	731-22355	Lower Blower Tube
46	753-11192	Throttle Grip Assembly
47	725-05280	Trigger Switch Assembly
48	731-06509-10	Throttle Trigger
49	631-07579	Upper Blower Tube
50	726-04080	Clamp
51	731-22351	Flex Tube
52	726-05432	Clamp
53	731-22354	Elbow