


# REPLACEMENT PARTS - MODEL TB272V

## 2-CYCLE BLOWER / VACUUM

PPN 41AR272V866

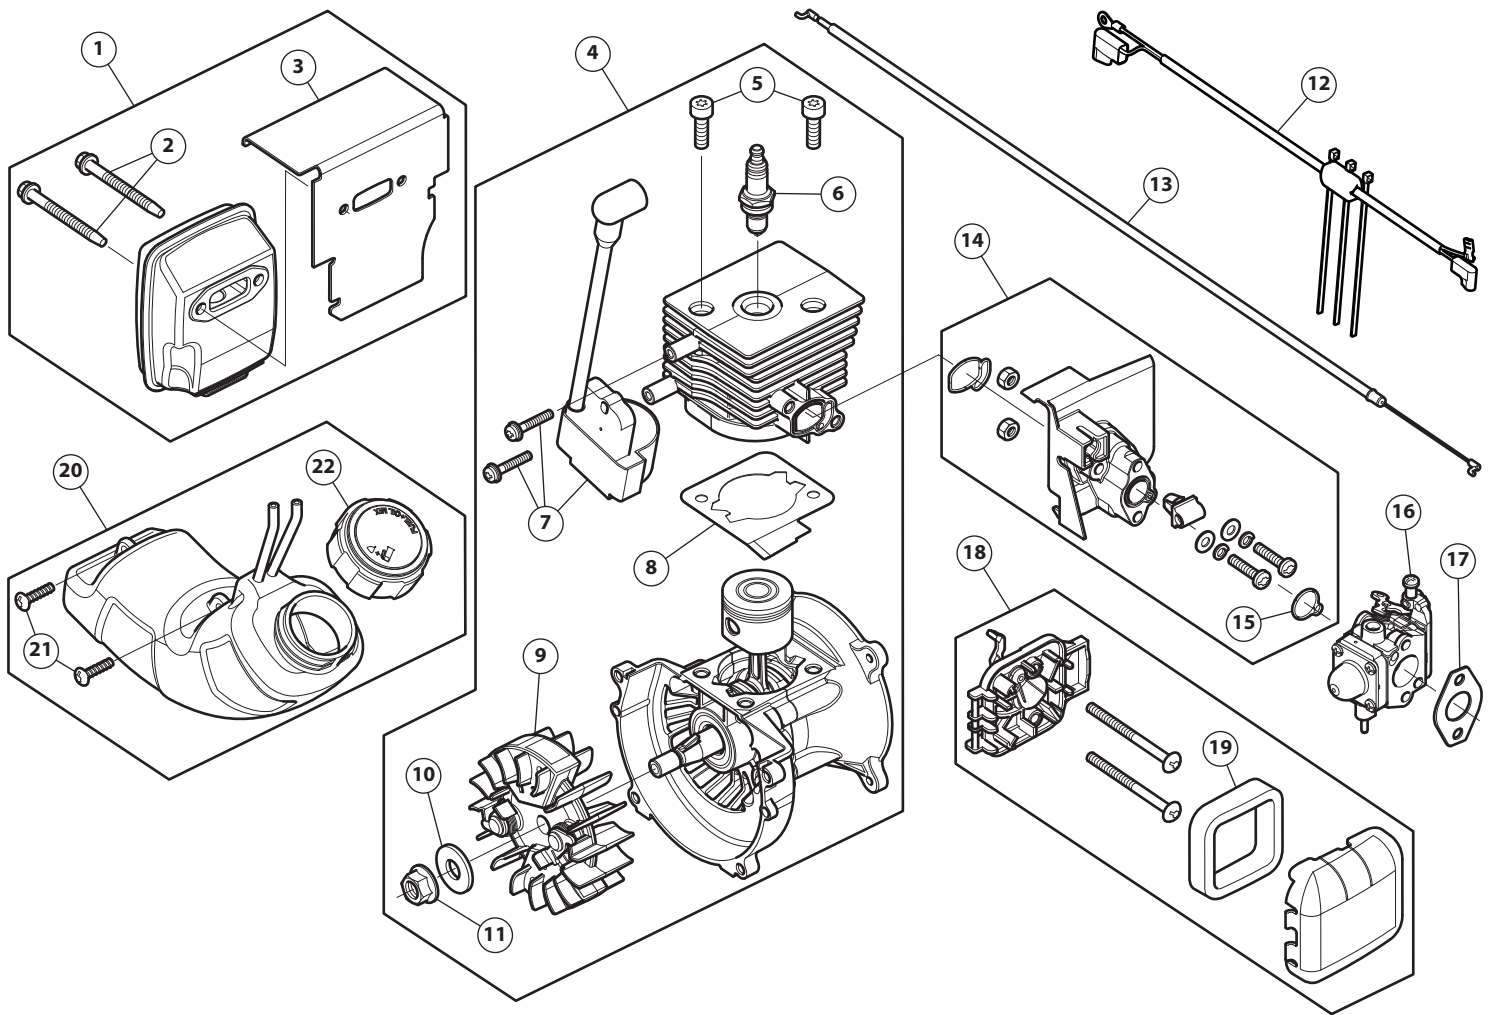


Item	Part No.	Description	Item	Part No.	Description
1	753-06027	Muffler Assembly (includes 2 & 3)	12	753-08260	Lead Wire
2	753-06294	Muffler Screws	13	753-06690	Throttle Cable
3	753-05946	Muffler Gasket	14	753-06189	Insulator Assembly (includes 15)
4	753-06687	Shortblock Assembly (includes 5 - 11)	15	753-06185	Insulator O-Ring
5	710-04715	Screw	16	753-08637	Carburetor Assembly (includes 17)
6	794-00097	Spark Plug	17	753-06253	Carburetor Gasket
7	753-06443	Module Assembly	18	753-08636	Air Cleaner Assembly (includes 19)
8	753-06827	Cylinder Gasket	19	791-181757	Air Filter
9	753-06175	Flywheel Assembly	20	753-06720	Fuel Tank Assembly (includes 21 & 22)
10	736-04107	Washer	21	710-04194	Screw
11	712-04137	Nut	22	753-06857	Fuel Cap

# REPLACEMENT PARTS - MODEL TB272V

## 2-CYCLE BLOWER / VACUUM

PPN 41AR272V866

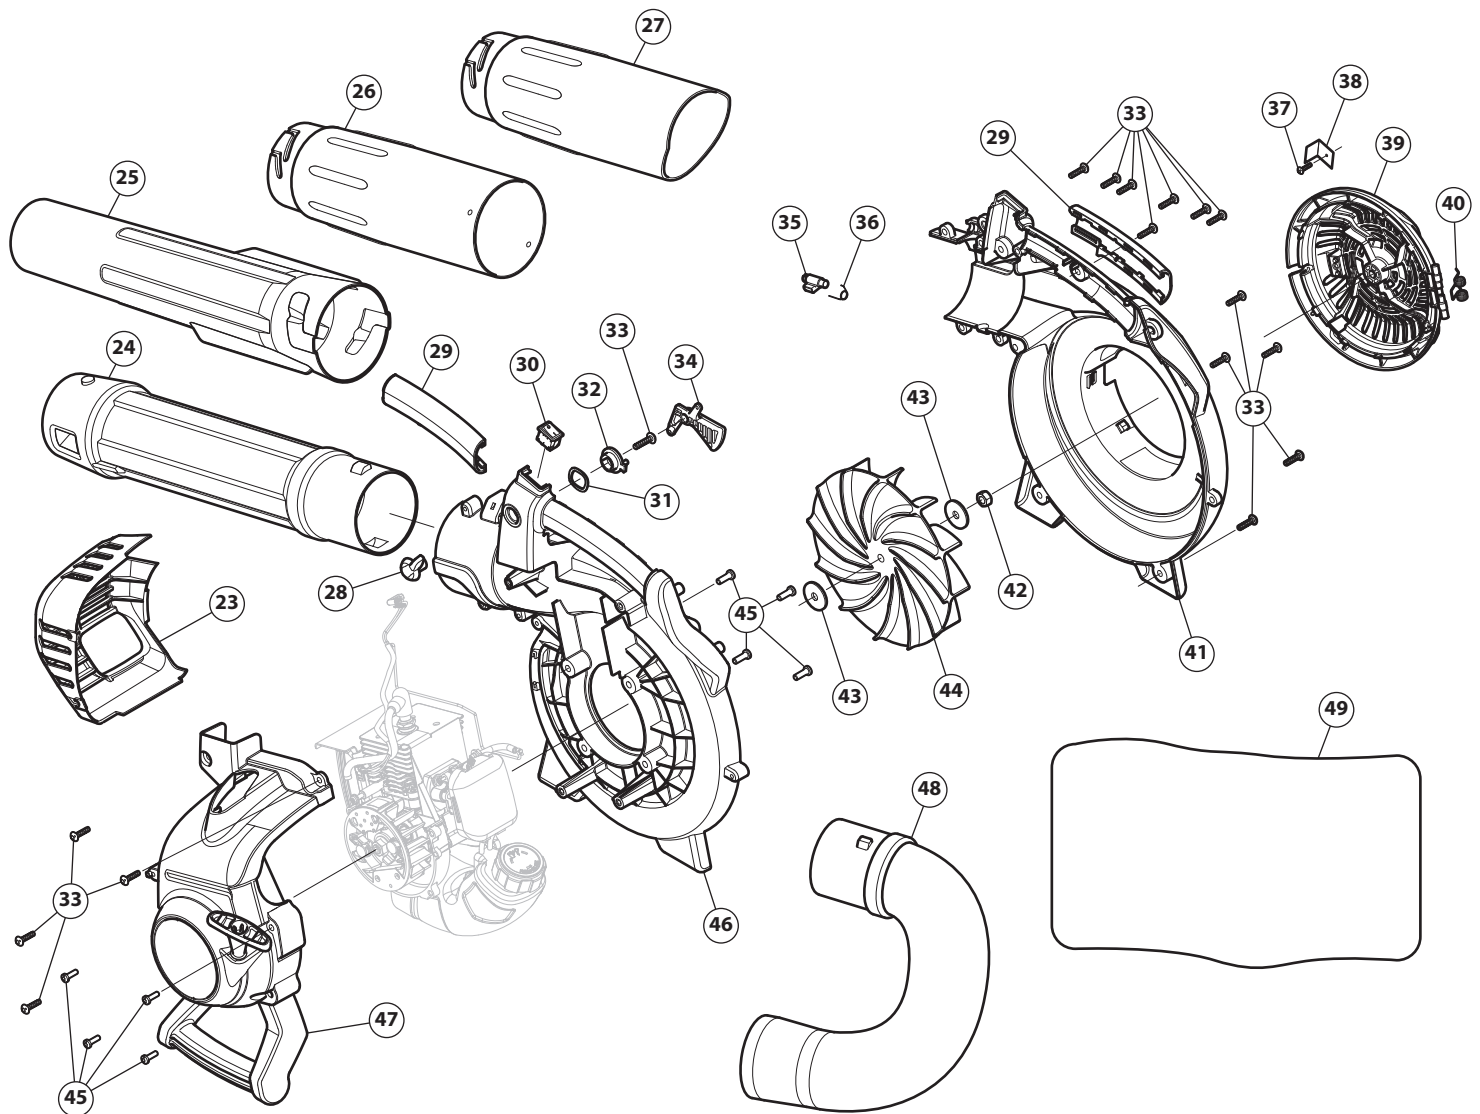

Item	Part No.	Description	Item	Part No.	Description
23	753-06694	Muffler Cover Assembly (includes 33)	37	1755	Screw
24	753-05936	Upper Blower Tube	38	753-06696	Door Lock
25	753-05937	Lower Blower Tube	39	753-06678	Intake Cover (includes 37 & 38)
26	753-06660	Upper Vacuum Tube	40	753-05918	Spring
27	791-180467	Lower Vacuum Tube	41	753-06679	Impeller Housing
28	753-05932	Outer Trigger Lock	42	912-0237	Nut
29	753-05919	Handle Grips	43	753-05928	Washer
30	791-182405	Switch	44	753-05929	Impeller
31	753-05925	Wavey Washer	45	791-181862	Screw
32	753-05924	Inner Trigger Lock	46	753-06693	Impeller Housing
33	710-04194	Screw	47	753-06695	Engine Cover Assembly (includes 33 & 45)
34	753-05930	Throttle Trigger	48	753-06658	Elbow Tube
35	753-05926	Latch Tube	49	753-06659	Bag
36	753-05939	Latch Spring			