


# REPLACEMENT PARTS - MODEL TBE304

## 4-CYCLE LAWN EDGER

PPN 25B-304-766

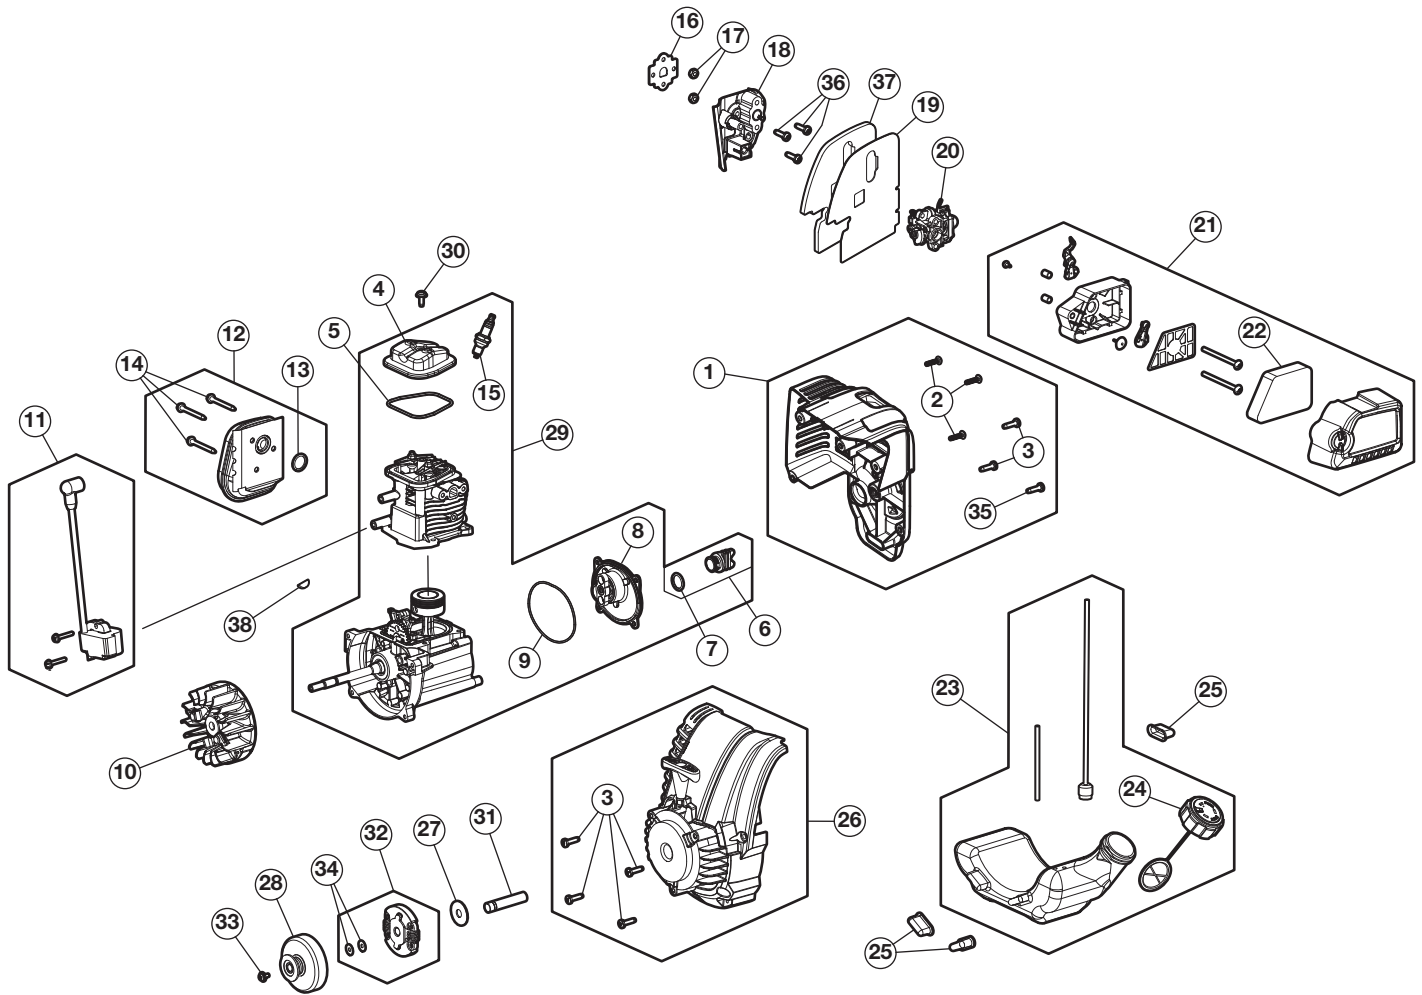


Item	Part No.	Description	Item	Part No.	Description
1	753-06134	Engine Cover Assembly (includes 2, 3 & 35)	20	751-22423	Carburetor (with Primer)
2	710-04194	Cover Screw	21	841-036206S	Air Cleaner Cover Assembly (includes 22)
3	710-04604	Starter Screw	22	753-05996	Air Filter
4	753-05901	Rocker Cover	23	753-06797	Fuel Tank Assembly w/Fuel Lines (includes 24)
5	753-05902	Rocker Cover O-Ring	24	753-1229	Fuel Cap
6	753-05408	Oil Plug (includes 7)	25	753-05259	Fuel Tank Pads
7	791-182290	Oil Plug O-Ring	26	753-11254	Starter Housing Assembly (includes 3)
8	753-06259	Crankcase Cover	27	9162-1	Washer
9	753-05238	Crankcase Cover O-Ring	28	753-06573	Clutch Drum (with Pulley)
10	753-06221	Flywheel Assembly	29	841-021441S	Shortblock Assembly (includes 4-9 & 15)
11	753-11252	Module Assembly	30	791-181025	Screw
12	753-05245	Muffler Assembly (includes 13 & 14)	31	750-04434	Spacer
13	753-05244	Muffler Gasket	32	753-1238	Clutch (includes 34)
14	710-04809	Muffler Screw	33	791-182468	Screw
15	794-00082	Spark Plug	34	6674	Washer
16	753-05247	Insulator Gasket	35	9054	Screw
17	712-04099	Nut	36	791-181003	Screw
18	841-020801S	Insulator	37	753-06949	Heat Shield
19	753-06948	Carburetor Gasket	38	914-04016	Flywheel Key

# REPLACEMENT PARTS - MODEL TBE304

## 4-CYCLE LAWN EDGER

PPN 25B-304-766

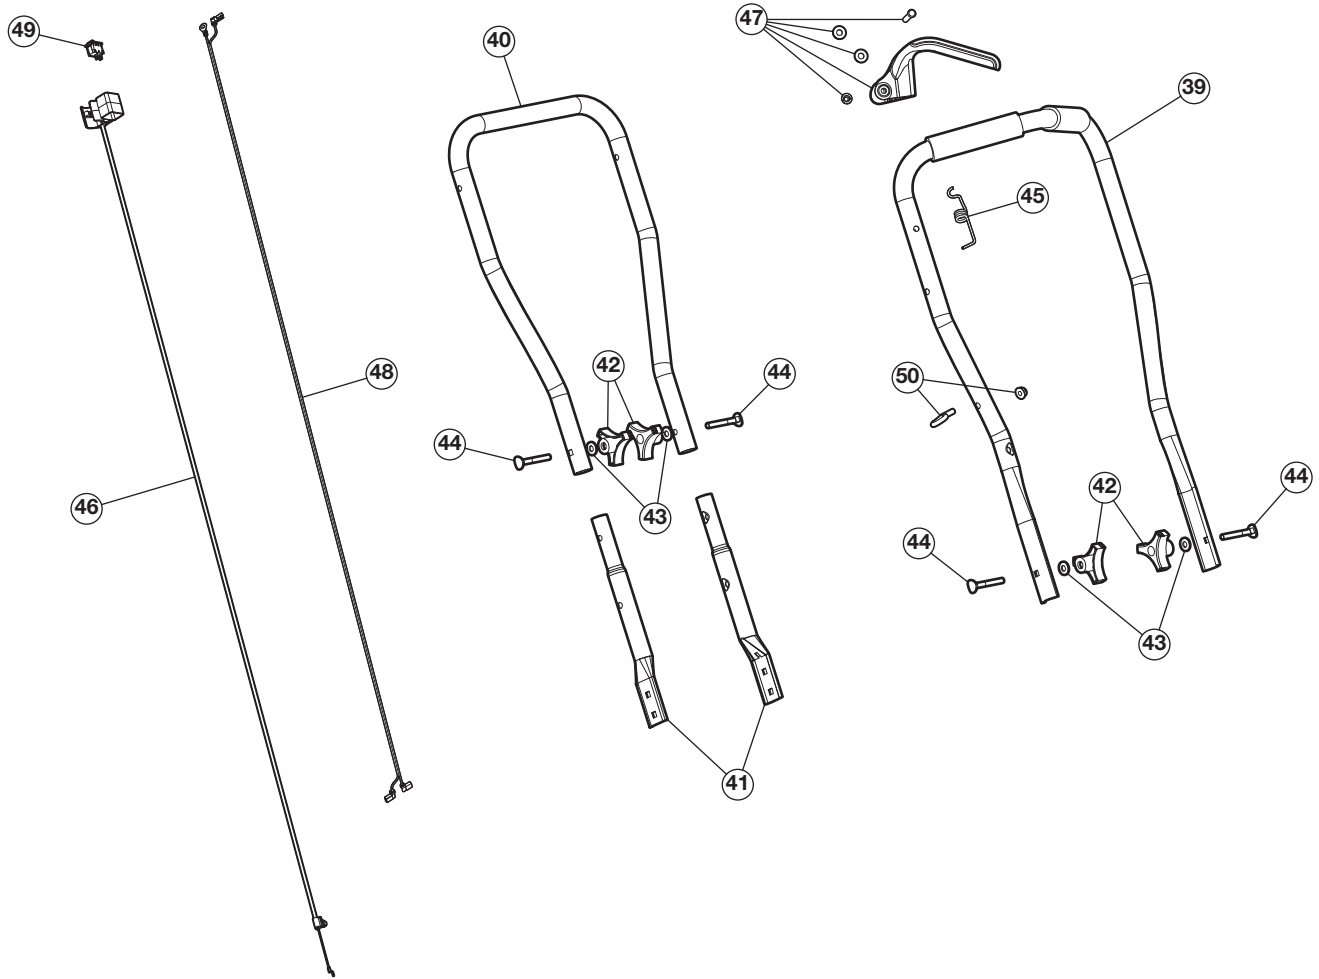


Item	Part No.	Description
39	753-06542	Upper Handle
40	753-06543	Middle Handle
41	753-06544	Handle Extension
42	791-182677	Handle Knob
43	4150	Washer
44	791-182899	Bolt

Item	Part No.	Description
45	753-06636	Spring
46	753-06546	Throttle Cable
47	753-06592	Throttle Lever w/Hardware
48	9681	Lead Wire
49	791-182405	On/Off Switch
50	753-05524	Starter Rope Guide

# REPLACEMENT PARTS - MODEL TBE304

## 4-CYCLE LAWN EDGER

PPN 25B-304-766

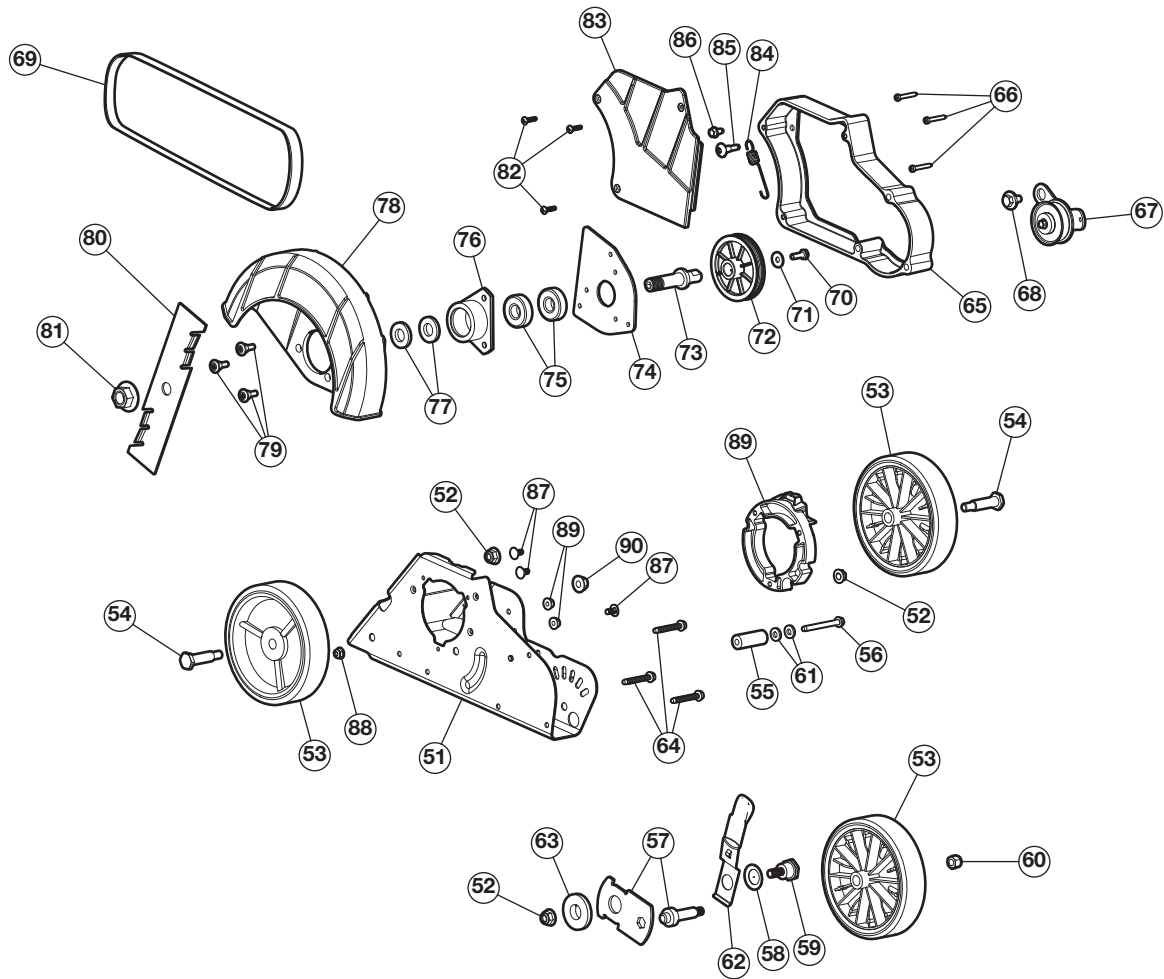

Item	Part No.	Description	Item	Part No.	Description
51	753-06593	Edger Frame	71	736-0270	Washer
52	712-04065	Lock Nut	72	756-04087B	Pulley
53	734-04261	Wheel	73	753-05543	Blade Spindle
54	738-0373	Wheel Bolt	74	787-01505	Spindle Plate
55	750-04783	Spacer	75	741-04547	Bearing
56	710-1206	Spacer Screw	76	718-04012	Bearing Cup
57	687-02582S	Arm Assembly	77	736-04088	Washer
58	736-0741	Washer	78	731-05064	Blade Guard
59	738-1172	Shoulder Screw	79	738-0706D	Screw
60	712-0130	Nut	80	781-0080-0637	Edger Blade
61	750-04929	Spacer	81	712-0417A	Nut
62	987-02051	Lever Assembly	82	710-04194	Screw
63	741-04242	Height Adjustment Bearing	83	731-05822	Belt Cover
64	710-1026	Spindle Plate Screw	84	753-06562	Spring
65	753-06556	Spindle Spacer	85	753-06563	Bolt
66	753-06559	Screw	86	710-0599	Screw
67	753-05540	Idler Pulley Assembly	87	710-05177	Bolt
68	738-0930	Shoulder Screw	88	712-04064	Nut
69	754-04149	Belt	89	753-06566	Spacer
70	710-3015	Screw	90	712-04230	Nut