


REPLACEMENT PARTS - MODEL TB27S EC

2-CYCLE TRIMMER

PPN 41AD27EC866

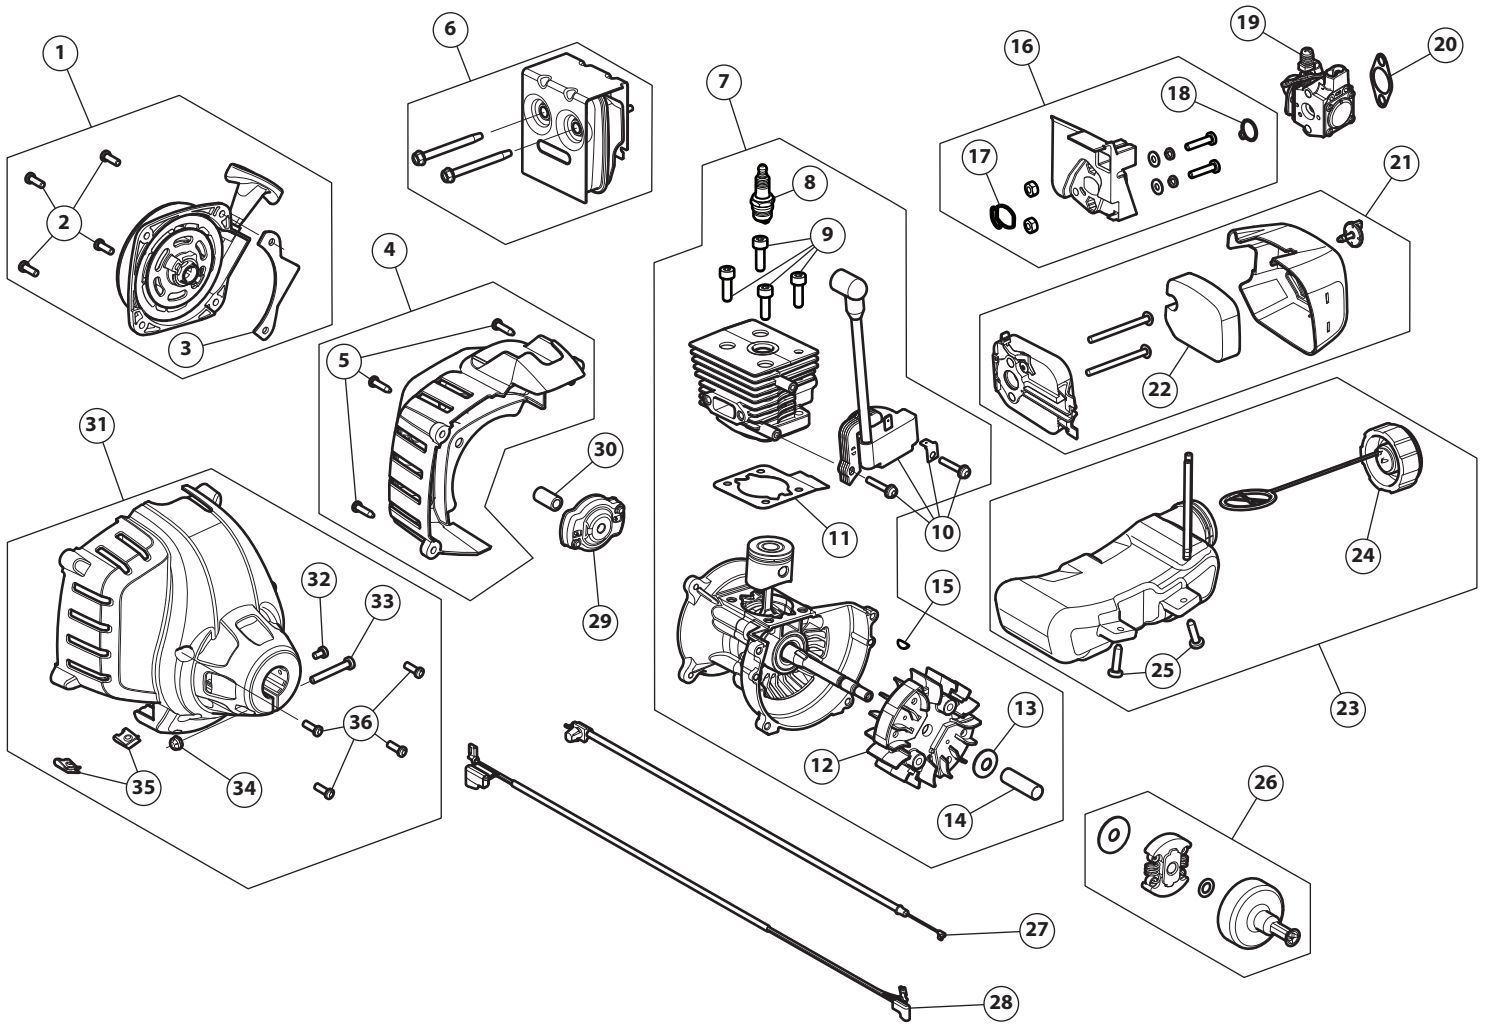


Item	Part No.	Description	Item	Part No.	Description
1	841-015769S	Starter Assembly (includes 2 & 3)	19	753-06190	Carburetor
2	791-181862	Starter Screw	20	753-06253	Carburetor Gasket
3	753-06244	Starter Assembly Guard (includes 2)	21	753-10084	Air Cleaner Assembly (includes 22)
4	753-06245	Rear Engine Cover (includes 5)	22	753-06954	Air Cleaner Filter
5	791-181345	Cover Screw	23	753-06250	Fuel Tank Assembly (includes 24 & 25)
6	753-08745	Muffler Assembly	24	753-06857	Fuel Tank Cap
7	753-11300	Short Block Assembly (includes 8 - 15)	25	791-181930	Fuel Tank Screw
8	753-06847	Spark Plug	26	753-05860	Clutch Assembly
9	710-04715	Cylinder Bolt	27	946-04824	Throttle Cable
10	753-08357	Module Assembly	28	753-08358	Lead Wires
11	753-06827	Cylinder Gasket	29	753-06091	Pawl Assembly
12	753-06246	Flywheel Assembly	30	753-06104	Adapter
13	753-06247	Washer	31	753-08250	Clutch Cover Assembly (includes 32 - 36)
14	753-06248	Spacer	32	791-182519	Anti-rotation Screw
15	914-04016	Flywheel Key	33	9689A	Clamp Screw
16	753-06189	Insulator Assembly (includes 17 & 18)	34	712-0161	Clamp Nut
17	753-06184	Insulator O-Ring	35	791-182366	U-shaped Nut
18	753-06185	Carburetor O-Ring	36	791-182195	Screw

REPLACEMENT PARTS - MODEL TB27S EC

2-CYCLE TRIMMER

PPN 41AD27EC866

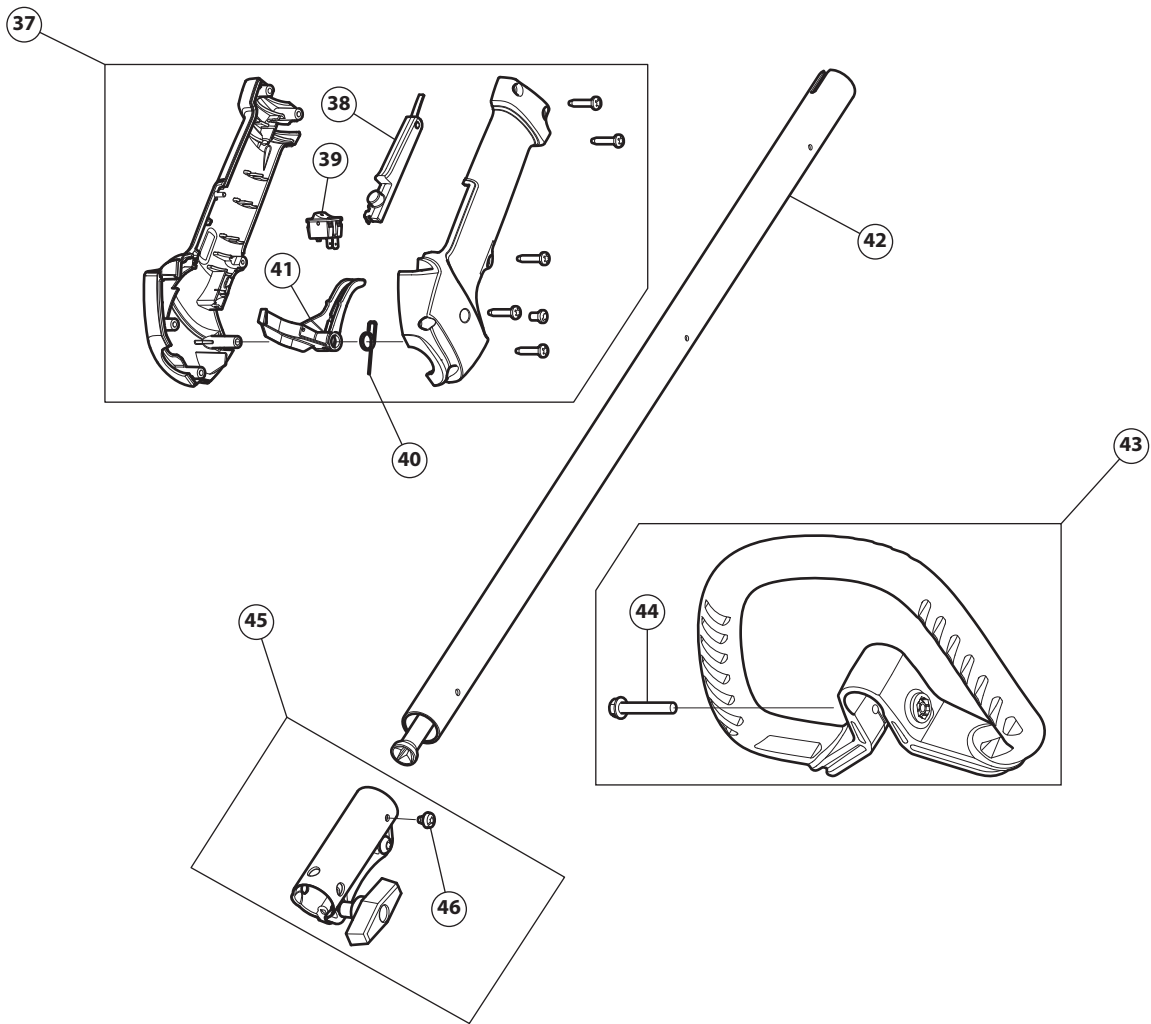


Item	Part No.	Description
37	753-08344	Throttle Housing Assembly (includes 38 - 41)
38	731-08433C-10	Throttle Trigger Lock-Out
39	791-182405	Trigger Switch Assembly
40	753-05007	Throttle Trigger Spring
41	731-04970B-10	Throttle Trigger
42	753-06880	Upper Shaft Housing Assembly
43	753-06039	Handle Assembly (includes 44)
44	753-06040	Handle Bolt
45	753-1190	Split Boom Coupler (includes 46)
46	791-182057	Anti-Rotation Screw

REPLACEMENT PARTS - MODEL TB27S EC

2-CYCLE TRIMMER

PPN 41AD27EC866

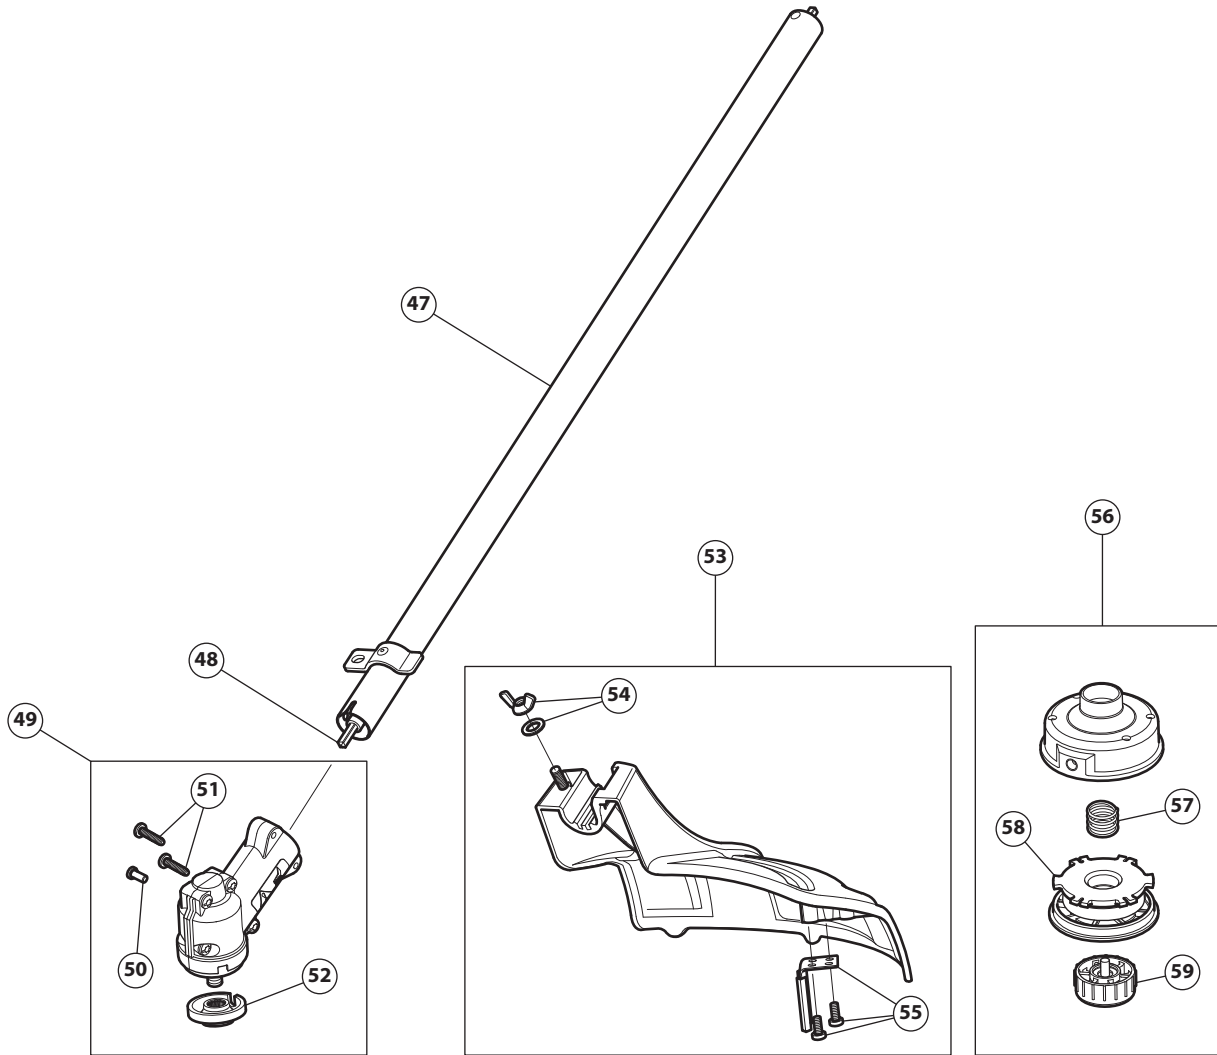

Item	Part No.	Description
47	841-035953S	Lower Shaft Housing Assembly
48	753-05267	Lower Flexible Drive Shaft
49	753-08180	Gearbox Assembly (includes 50 - 52)
50	791-182519	Anti-rotation Screw
51	791-182195	Gearbox Mounting Hardware
52	748-05052	Cutting Head Driver
53	841-032093S	Shield Assembly (includes 54 & 55)
54	753-04282	Shield Mounting Hardware
55	753-08355	Blade Assembly
56	753-11301	Outer Spool Assembly (includes 57 - 59)
57	791-610317B	Spring
58	753-08560	Inner Reel
59	841-050911S	Bump Knob Assembly