


**Read and understand all instruction, warning, and danger labels.**


**Lea el manual de operación anexo sobre ensamblaje e inicio.**

**1**

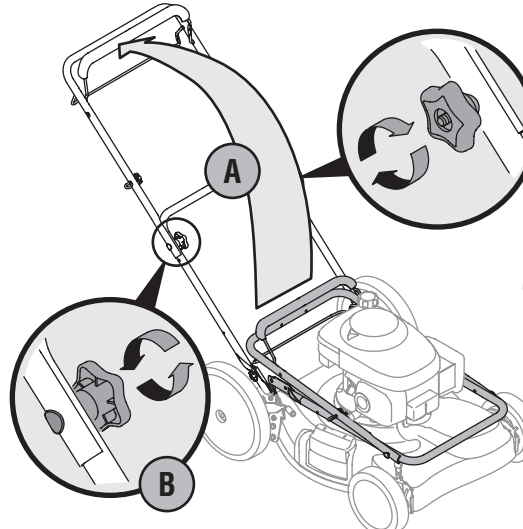


(A) Lift handle to extended position.  
(B) Tighten star knobs.


**2**

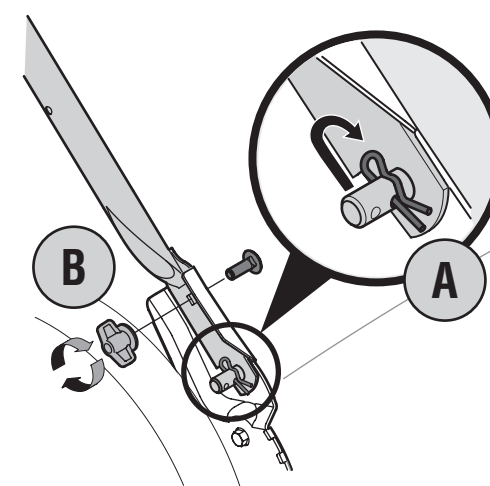

(A) Move hairpin clip to inside hole (hole closest to handle).  
(B) Insert carriage bolt and tighten with wing nut. Repeat on opposite side.

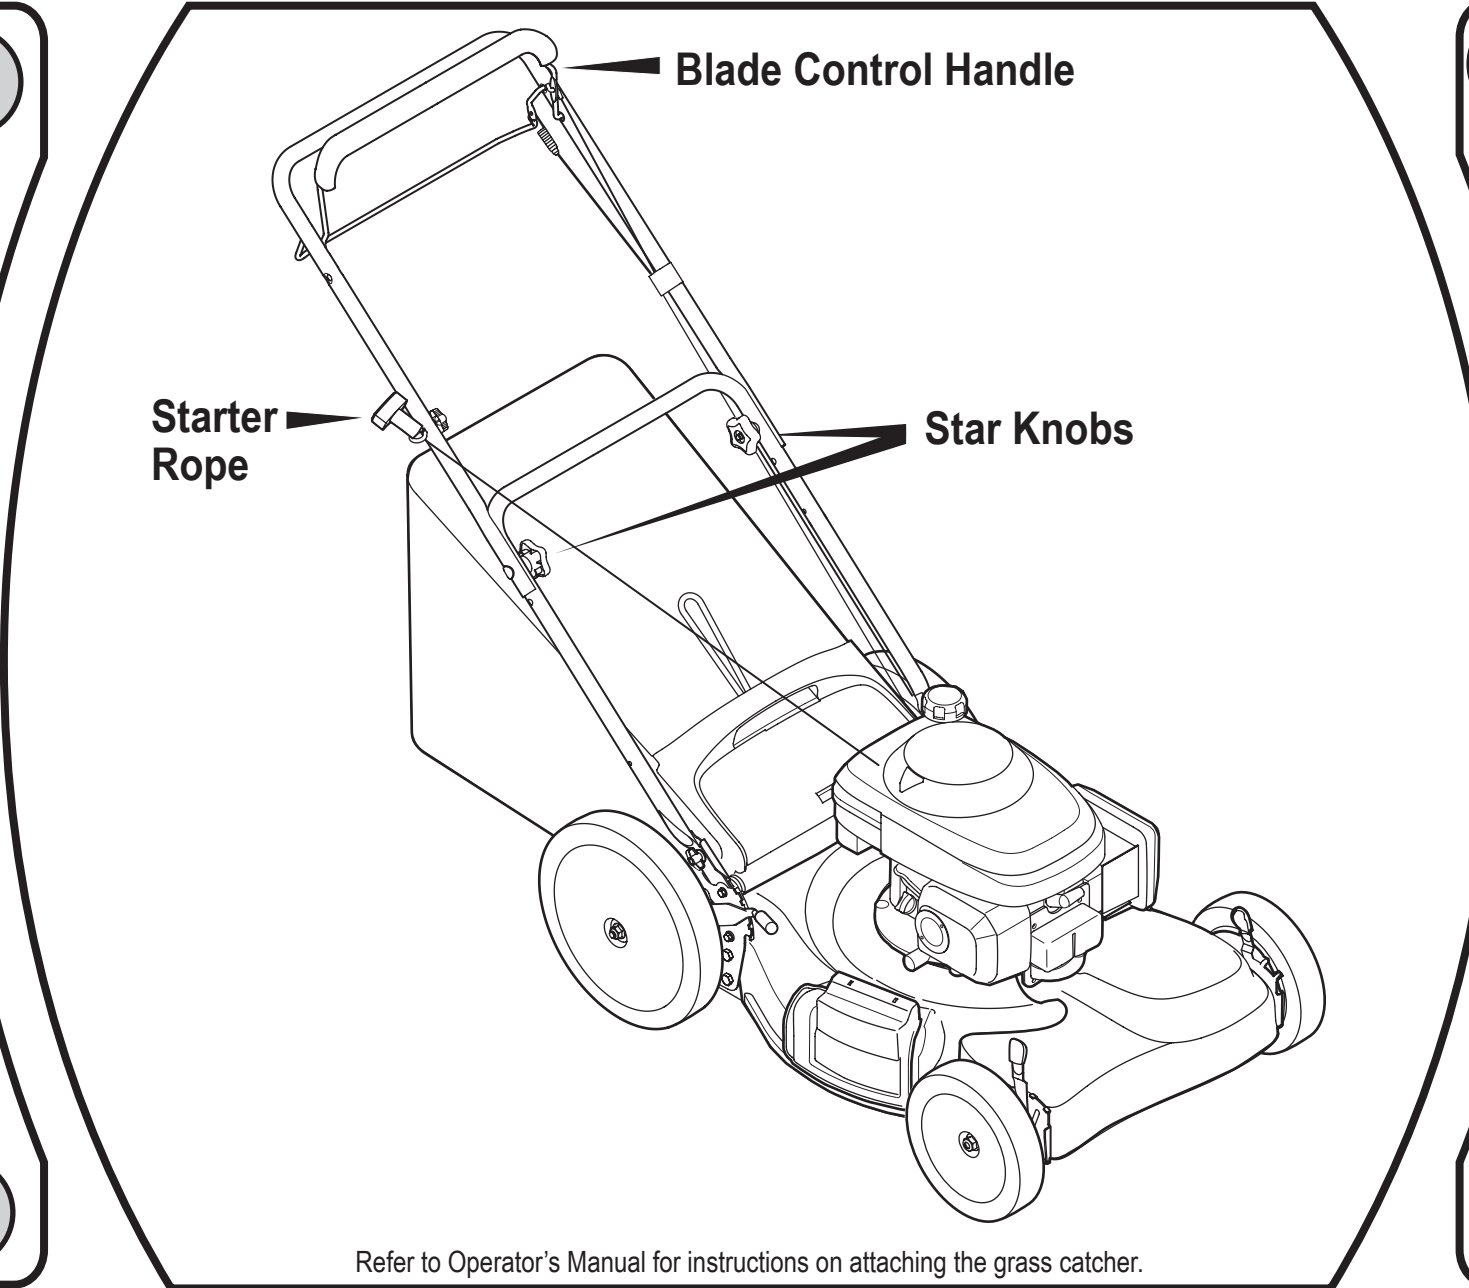


**3**

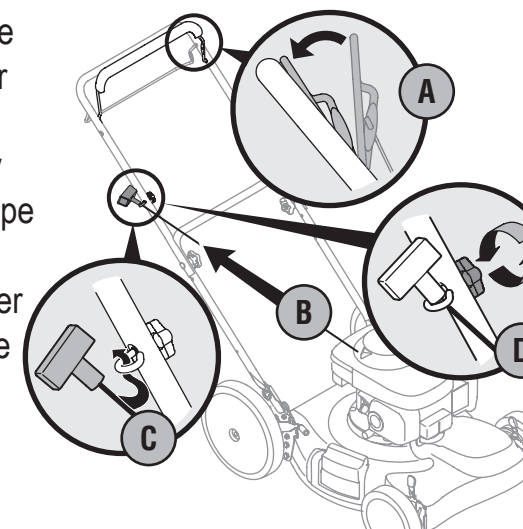





(A) Hold blade control handle against upper handle.  
(B)(C) Slowly pull starter rope from engine and slip starter rope into rope guide.  
(D) Tighten rope guide wing knob.

**4**

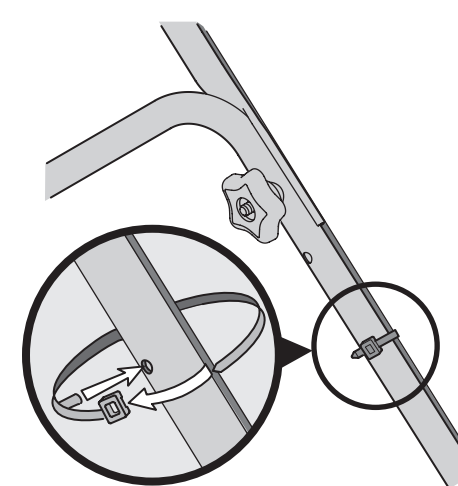

Use cable tie to secure cables to lower handle.




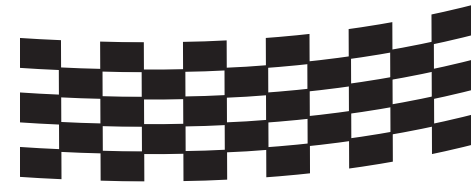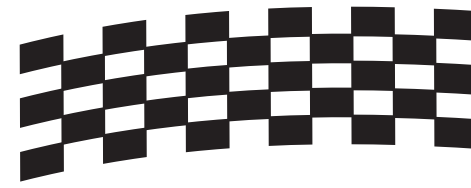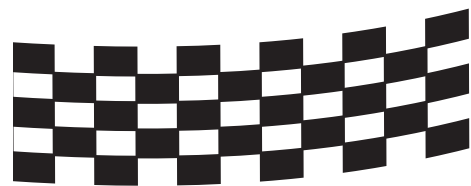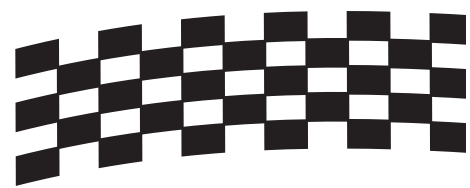

**Read and understand all instruction, warning, and danger labels.**

**Lea el manual de operación anexo sobre ensamblaje e inicio.**

**5**

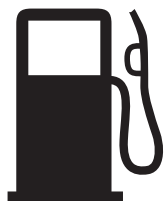

Fill tank with gas up to within 1/2-inch of top of tank. Do not overfill.

**6**




Fill engine with oil to upper limit of dipstick. Check oil level by inserting (and not threading) dipstick into filler neck. Do not overfill.


**a**

Close

Open

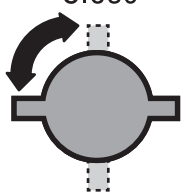


**b**

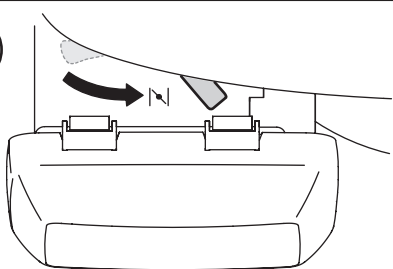


**7**


Open fuel valve (a) and activate choke by moving lever to the right until it stops (b). Choke does not need to be activated for warm engine starting.

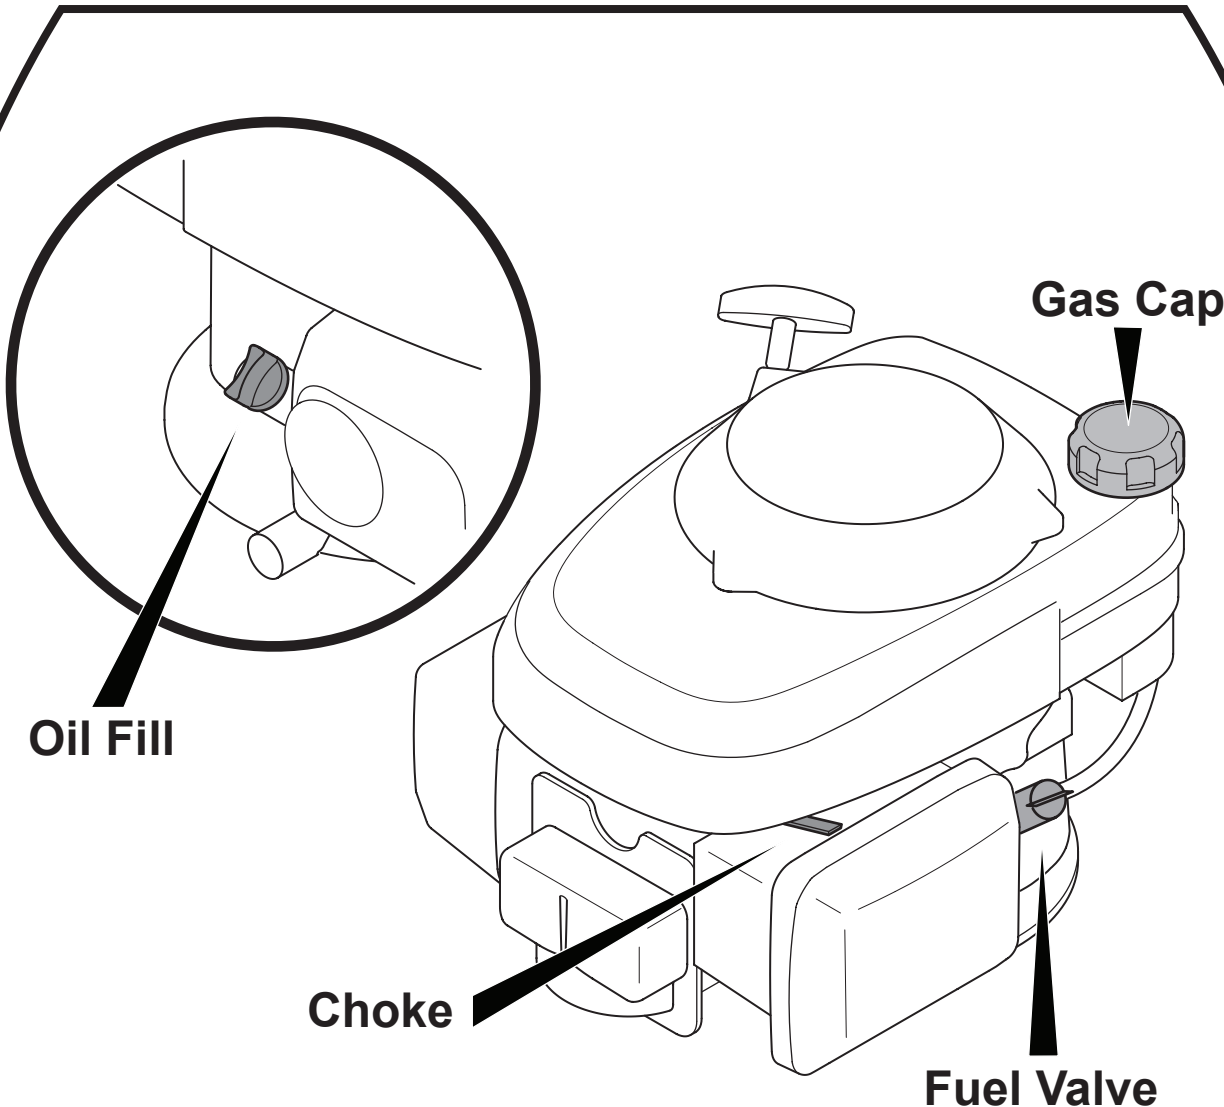

**8**

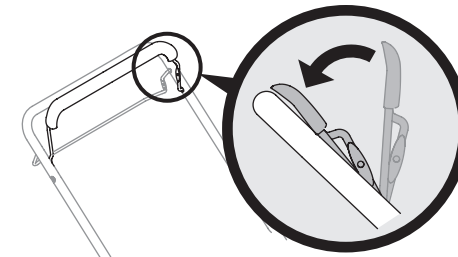

Depress blade control handle and hold. The choke will move slowly to OFF position – immediately proceed to step 9 below.

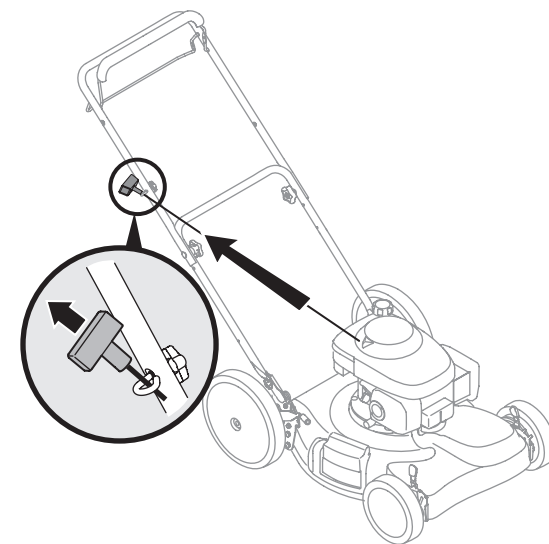

**9**

Pull starter rope with quick, full arm stroke. If engine does not start after ten seconds of repeated pulls, wait a few minutes and repeat steps 7b through 9.

Need Help?

**Call 1-888-TO-HELP-U**



**IMPORTANT: READ OPERATOR'S MANUAL AND ENGINE MANUAL THOROUGHLY AND FOLLOW THE SAFE OPERATION PRACTICES BEFORE OPERATING .**

